
ABB GENERAL PURPOSE DRIVES

ACS580-01 drives

(0.75 to 250 kW, 1.0 to 350 hp)

Hardware manual



Related documents are listed on page [27](#).

Hardware manual

ACS580-01 drives
(0.75 to 250 kW, 1.0 to 350 hp)

Table of contents



1. Safety instructions



4. Mechanical installation



6. Electrical installation –
IEC



7. Electrical installation –
North America



Table of contents

1. Safety instructions

Contents of this chapter	15
Use of warnings and notes	15
General safety in installation, start-up and maintenance	16
General safety in operation	18
Electrical safety in installation, start-up and maintenance	19
Electrical safety precautions	19
Additional instructions and notes	20
Grounding	21
Additional instructions for permanent magnet motor drives	23
Safety in installation, start-up and maintenance	23

2. Introduction to the manual

Contents of this chapter	25
Applicability	25
Target audience	25
Purpose of the manual	25
Contents of this manual	26
Categorization by frame (size)	27
Related documents	27
Quick installation and commissioning flowchart	29
Terms and abbreviations	31



3. Operation principle and hardware description

Contents of this chapter	35
Operation principle	36
Layout	37
Overview of power and control connections	43
External control connection terminals, frames R1...R5	44
External control connection terminals, frames R6...R9	45
Control panel	46
Control panel door mounting kits	47
Type designation label	47
Type designation key	49

4. Mechanical installation

Contents of this chapter	51
Safety	51
Examining the installation site	52
Required tools	56
Moving the drive	56
Unpacking and examining delivery, frames R1 and R2	57

6 Table of contents

Frames R1 and R2 cable box (IP21, UL Type 1)	59
Unpacking and examining delivery, frame R3	60
Unpacking and examining delivery, frame R4	62
Unpacking and examining delivery, frame R5	64
Frame R5 cable box (IP21, UL Type 1)	65
Unpacking and examining delivery, frames R6...R9	66
Frame R6 cable box (IP21, UL Type 1)	68
Frame R7 cable box (IP21, UL Type 1)	69
Frame R8 cable box (IP21, UL Type 1)	70
Frame R9 cable box (IP21, UL Type 1)	71
Installing the drive	72
Installing the drive vertically, frames R1...R4	72
Installing the cable box, frames R1...R2	74
Installing the drive vertically, frame R5	75
Installing the drive vertically, frames R6...R9	78
Installing the drive vertically side by side	79
Installing the drive horizontally, frames R1...R5	80
Flange mounting	80
Strut channel installation (US only)	80
Installation instructions	80



5. Guidelines for planning the electrical installation

Contents of this chapter	81
Limitation of liability	81
Selecting the supply disconnecting device	81
European Union	82
North America	82
Other regions	82
Examining the compatibility of the motor and drive	83
Protecting the motor insulation and bearings	83
Requirements table	84
Selecting the power cables	89
General guidelines, IEC and North America	89
Power cable types	90
Additional guidelines, North America	92
Conductor type, IEC and North America	94
Power cable shield, IEC and North America	94
Typical power cable sizes, IEC	96
Typical power cable sizes, UL/NEC	98
Armored cable / shielded power cable, IEC and North America	98
Selecting the control cables, IEC and North America	99
Shielding	99
Signals in separate cables	99
Signals allowed to be run in the same cable	99
Relay cable	99
Control panel cable	99
Drive composer PC tool cable	100
FPBA-01 PROFIBUS DP adapter module connectors	100
Routing the cables	101
General guidelines, IEC	101

General guidelines, North America	102
Continuous motor cable shield or enclosure for equipment on the motor cable	103
Separate control cable ducts, IEC and North America	103
Implementing short-circuit and thermal overload protection	104
Protecting the drive and input power cable in short-circuits	104
Protecting the motor and motor cable in short-circuits	104
Protecting the motor cables against thermal overload	104
Protecting the motor against thermal overload	105
Protecting the motor against overload without thermal model or temperature sensors using external overload device	105
Implementing a ground fault detection function	106
Residual current device compatibility	106
Implementing the Emergency stop function	106
Implementing the Safe torque off function	106
Implementing the ATEX-certified Safe motor disconnection function (option +Q971)	106
Using a safety switch between the drive and the motor	106
Using a contactor between the drive and the motor	107
Implementing a bypass connection	107
Example bypass connection	108
Implementing the undervoltage control (power-loss ride-through)	109
Protecting the contacts of relay outputs	109
Limiting relay output maximum voltages at high installation altitudes	110
Implementing a motor temperature sensor connection	111



6. Electrical installation – IEC

Contents of this chapter	113
Warnings	113
Required tools	113
Measuring the insulation of the assembly	114
Drive	114
Input power cable	114
Motor and motor cable	114
Brake resistor assembly for R1...R3	115
Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems	116
EMC filter	116
Ground-to-phase varistor	116
When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems	117
Guidelines for installing the drive to a TT system	118
Identifying different types of electrical power systems	119
Frames R1...R3	120
Frames R4...R9	121
Connecting the power cables	123
Connection diagram	123
Connection procedure, frames R1...R4	124
Connection procedure, frame R5	131
Connection procedure, frames R6...R9	137
DC connection	141
Connecting the control cables	142

8 Table of contents

Default I/O connection diagram (ABB standard macro)	143
Additional information on I/O connections	146
Control cable connection procedure R1...R9	151
Installing option modules	157
Mechanical installation of option modules	157
Wiring the modules	159
Reinstalling grommets	160
Reinstalling covers	161
Reinstalling cover, frames R1...R4	161
Reinstalling covers, frame R5	162
Reinstalling side plates and covers, frames R6...R9	163
Connecting a PC	164

7. Electrical installation – North America

Contents of this chapter	165
Warnings	165
Required tools	165
Measuring the insulation of the assembly	166
Drive	166
Input power cable	166
Motor and motor cable	166
Brake resistor assembly for R1...R3	167
Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems	168
EMC filter	168
Ground-to-phase varistor	168
When to connect EMC filter or disconnect ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems	169
Guidelines for installing the drive to a TT system	170
Identifying different types of electrical power systems	171
Frames R1...R3, disconnecting EMC or varistor screws	172
Frames R4...R9, disconnecting EMC or varistor screws	174
Connecting the power cables	176
Connection diagram	176
Connection procedure, frames R1...R4	178
Connection procedure, frame R5	183
Connection procedure, frames R6...R9	188
DC connection	193
Connecting the control cables	194
Default I/O connection diagram (ABB standard macro)	195
Control cable connection procedure R1...R9	205
Installing option modules	211
Mechanical installation of option modules	211
Wiring the modules	213
Reinstalling grommets	214
Reinstalling covers	215
Reinstalling cover, frames R1...R4	215
Reinstalling covers, frame R5	216
Reinstalling side plates and covers, frames R6...R9	217
Installing UL Type 12 hood	218



Connecting a PC	219
-----------------------	-----

8. Installation checklist

Contents of this chapter	221
Warnings	221
Checklist	221

9. Maintenance and hardware diagnostics

Contents of this chapter	223
Maintenance intervals	223
Description of symbols	224
Recommended annual actions by the user	224
Recommended maintenance actions by the user	224
Heatsink	225
Fans	226
Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R1...R4 227	
Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R8 229	
Replacing the main cooling fans, IP21 and IP55 (UL Type 1 and UL Type 12) frame R9 . . 230	
Replacing the auxiliary cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R9	231
Replacing the auxiliary cooling fan, IP55 (UL Type 12) frames R1...R2	232
Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R3	233
Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R4	234
Replacing the second auxiliary cooling fan, IP55 (UL Type 12) frames R8...R9	235
Capacitors	236
Reforming the capacitors	236
Control panel	237
Cleaning the control panel	237
Replacing the battery in the control panel	237
LEDs	238
Drive LEDs	238
Control panel LEDs	239
Functional safety components	240

10. Technical data

Contents of this chapter	241
Electrical ratings	242
IEC ratings at Un = 230 V	242
IEC ratings at Un = 400 V	244
IEC ratings at Un = 480 V	245
UL (NEC) ratings at Un = 208/230 V	247
UL (NEC) ratings at Un = 480 V	248
UL (NEC) ratings at Un = 575 V	249
Conversion tables for IEC and North American type codes	250
Sizing	251



Derating	252
Ambient temperature derating, IP21 (UL Type 1)	254
Ambient temperature derating, IP55 (UL Type 12)	256
Altitude derating	260
Switching frequency derating by derating factor	262
Switching frequency derating with actual output current values	264
Output frequency derating	268
Fuses (IEC)	269
gG fuses (IEC)	269
uR and aR fuses (IEC)	271
Circuit breakers (IEC)	273
Fuses (UL)	275
Circuit breakers (UL)	278
Dimensions, weights and free space requirements	282
Losses, cooling data and noise	289
Cooling air flow, heat dissipation and noise for stand-alone drives	289
Cooling air flow and heat dissipation for flange mounting (option +C135)	293
Terminal and lead-through data for the power cables	295
IEC	295
UL (NEC)	297
Terminal and lead-through data for the control cables	299
IEC	299
UL (NEC)	300
Electrical power network specification	301
Voltage (U1)	301
Motor connection data	302
Brake resistor connection data for frames R1...R3	305
Control connection data	305
Efficiency	312
Energy efficiency data (EU ecodesign)	312
Degree of protection	312
Ambient conditions	312
Materials	314
Applicable standards	315
CE marking	316
Compliance with the European Low Voltage Directive	316
Compliance with the European EMC Directive	316
Compliance with the European ROHS II Directive 2011/65/EU	316
Compliance with the European WEEE Directive	316
Compliance with the European Machinery Directive 2006/42/EC 2nd Edition – June 2010	316
Compliance with the IEC 61800-3:2017	317
Definitions	317
Category C1	317
Category C2	318
Category C3	318
Category C4	319
UL marking	320
UL checklist	320
China RoHS marking	321
KC marking	321



RCM marking	321
WEEE marking	322
EAC marking	322
UKCA (UK Conformity Assessed) marking	322
Disclaimer	322
Cyber security disclaimer	322

11. Dimension drawings

Contents of this chapter	323
Frame R1, IP21 (UL Type 1)	324
Frame R1, IP55 (UL Type 12)	325
Frame R1, IP55+F278 (UL Type 12)	326
Frame R2, IP21 (UL Type 1)	327
Frame R2, IP55 (UL Type 12)	328
Frame R2, IP55+F278 (UL Type 12)	329
Frame R3, IP21 (UL Type 1)	330
Frame R3, IP55 (UL Type 12)	331
Frame R3, IP55+E223 (UL Type 12)	332
Frame R3, IP55+F278/F316 (UL Type 12)	333
Frame R4, IP21 (UL Type 1)	334
Frame R4, IP55 (UL Type 12)	335
Frame R4, IP55+E223 (UL Type 12)	336
Frame R4, IP55+F278/F316 (UL Type 12)	337
Frame R5, IP21 (UL Type 1)	338
Frame R5, IP55 (UL Type 12)	339
Frame R5, IP55+E223 (UL Type 12)	340
Frame R5, IP55+F278/F316 (UL Type 12)	341
Frame R6, IP21 (UL Type 1)	342
Frame R6, IP55 (UL Type 12)	343
Frame R7, IP21 (UL Type 1)	344
Frame R7, IP55 (UL Type 12)	345
Frame R8, IP21 (UL Type 1)	346
Frame R8, IP55 (UL Type 12)	347
Frame R9, IP21 (UL Type 1)	348
Frame R9, IP55 (UL Type 12)	349



12. Resistor braking

Contents of this chapter	351
Operation principle and hardware description	351
Resistor braking, frames R1...R3	352
Planning the braking system	352
Mechanical installation	357
Electrical installation	357
Start-up	358
Resistor braking, frames R4...R9	359
Planning the braking system	359
IEC	359
Parameter settings for external braking chopper and resistor	361

13. Safe torque off function

Contents of this chapter	363
Description	363
Compliance with the European Machinery Directive	364
Connection principle	364
Single drive, internal +24 V DC power supply	365
Single drive, external +24 V DC power supply	367
Multiple ACS580-01 drives, internal +24 V DC power supply	368
Multiple ACS580-01 drives, external +24 V DC power supply	369
Activation switch	370
Cable types and lengths	370
Grounding of protective shields	370
Operation principle	370
Start-up including validation test	371
Competence	371
Validation test reports	371
Validation test procedure	372
Use	373
Maintenance	375
Competence	375
Fault tracing	375
Safety data	377
Abbreviations	379
TÜV certificate	379
Declarations of conformity	380

**14. Optional I/O extension and adapter modules**

Contents of this chapter	383
CHDI-01 115/230 V digital input extension module	383
Safety instructions	383
Hardware description	383
Mechanical installation	384
Electrical installation	385
Start-up	387
Diagnostics	387
Technical data	388
CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O)	390
Safety instructions	390
Hardware description	390
Mechanical installation	391
Electrical installation	392
Start-up	394
Diagnostics	395
Technical data	396
CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)	399
Safety instructions	399
Hardware description	399
Mechanical installation	400

Electrical installation	401
Start-up	403
Diagnostics	404
Technical data	405
CBAI-01 bipolar analog IO adapter module	407
Safety instructions	407
Hardware description	407
Mechanical installation	408
Electrical installation	409
Start-up	411
Diagnostics	412
Technical data	413

15. Common mode, du/dt and sine filters

Content of this chapter	415
Common mode filters	415
When is a common mode filter needed?	415
du/dt filters	415
When is a du/dt filter needed?	415
Common mode filter types	416
du/dt filter types	416
Description, installation and technical data of the FOCH filters	417
Description, installation and technical data of the NOCH filters	417
Sine filters	418
Selecting a sine filter for the drive	418
Description, installation and technical data	419

Further information

Product and service inquiries	421
Product training	421
Providing feedback on ABB Drives manuals	421
Document library on the Internet	421





1

Safety instructions




Contents of this chapter

This chapter contains the safety instructions which you must obey when you install and operate the drive and do maintenance on the drive. If you ignore the safety instructions, injury, death or damage can occur.

Use of warnings and notes

Warnings tell you about conditions which can cause injury or death, or damage to the equipment. They also tell you how to prevent the danger. Notes draw attention to a particular condition or fact, or give information on a subject.

The manual uses these warning symbols:

	Electricity warning tells about hazards from electricity which can cause injury or death, or damage to the equipment.
	General warning tells about conditions, other than those caused by electricity, which can cause injury or death, or damage to the equipment.
	Electrostatic sensitive devices warning tells you about the risk of electrostatic discharge which can cause damage to the equipment.




General safety in installation, start-up and maintenance

These instructions are for all personnel that install the drive and do maintenance work on it.

WARNING! Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

- Use safety shoes with a metal toe cap to avoid foot injury. Wear protective gloves and long sleeves. Some parts have sharp edges.
- Handle the drive carefully.
 - Frames R5...R9: Lift the drive with a lifting device. Use the lifting eyes of the drive.
 - Frames R5...R9: Do not tilt the drive. The drive is heavy and its center of gravity is high. An overturning drive can cause physical injury.



- Beware of hot surfaces. Some parts, such as heatsinks of power semiconductors, remain hot for a while after disconnection of the electrical supply.
- Keep the drive in its package or protect it otherwise from dust and burr from drilling and grinding until you install it.
- Protect also the installed drive against dust and burr. Electrically conductive debris inside the drive may cause damage or malfunction.
- Vacuum clean the area below the drive before the start-up to prevent the drive cooling fan from drawing the dust inside the drive.
- Do not cover the air inlet and outlet when the drive runs.
- Make sure that there is sufficient cooling. See sections [Examining the installation site](#) on page 52 and [Losses, cooling data and noise](#) on page 289 for more information.
- Before you connect voltage to the drive, make sure that the drive covers are on. Keep the covers on during the operation.
- Before you adjust the drive operation limits, make sure that the motor and all driven equipment can operate throughout the set operation limits.

- Before you activate the automatic fault reset or automatic restart functions of the drive control program, make sure that no dangerous situations can occur. These functions reset the drive automatically and continue operation after a fault or supply break. If these functions are activated, the installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, "THIS MACHINE STARTS AUTOMATICALLY".
- If you have connected safety circuits to the drive (for example, emergency stop and Safe torque off), validate them at the start up. For the validation of the Safe torque off, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]). For the validation of other safety circuits, see the instructions provided with them.

Note:

- If you select an external source for start command and it is on, and the start command is level-triggered, the drive will start immediately after fault reset. See parameters 20.02 Ext1 start trigger type and 20.07 Ext2 start trigger type in *ACS580 standard control program firmware manual* (3AXD50000016097 [English]).
 - When the control location is not set to Local (text Local is not shown on the top row of the panel and parameter 19.17 Local control disable has value Disabled), the stop key on the control panel will not stop the drive.
 - Frames R1...R5: Do not attempt to repair a malfunctioning drive; contact your local representative for replacement or repair by authorized persons.
Frames R6...R9: Can be repaired by authorized persons.
-



General safety in operation

These instructions are for all personnel that operate the drive.



WARNING! Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

- Do not power up the drive more than five times in ten minutes. Too frequent power-ups can damage the charging circuit of the DC capacitors. If you need to start or stop the drive, use the control panel start and stop keys or commands through the I/O terminals of the drive.
- Give a stop command to the drive before you reset a fault. If you have an external source for the start command and the start is on, the drive will start immediately after the fault reset, unless you configure the drive for pulse start. See the firmware manual.
- Before you activate automatic fault reset functions of the drive control program, make sure that no dangerous situations can occur. These functions reset the drive automatically and continue operation after a fault.

Note: When the control location is not set to Local, the stop key on the control panel will not stop the drive.



Electrical safety in installation, start-up and maintenance

■ Electrical safety precautions

These warnings are for all personnel who do work on the drive, motor cable or motor.



WARNING! Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

If you are not a qualified electrical professional, do not do electrical installation or maintenance work.

Go through these steps before you begin any installation or maintenance work.

1. Clearly identify the work location and equipment.
 2. Disconnect all possible voltage sources. Make sure that reconnection is not possible. Lock out and tag out.
 - Open the main disconnecter at the power supply of the drive.
 - Disconnect any external power sources from the control circuits.
 - After you disconnect the drive, always wait for 5 minutes to let the intermediate circuit capacitors discharge before you continue.
 3. Protect any other energized parts in the work location against contact.
 4. Take special precautions when close to bare conductors.
 5. Measure that the installation is de-energized.
 - Before and after measuring the installation, verify the operation of the voltage tester on a known voltage source.
 - Make sure that the voltage between the drive input power terminals (L1, L2, L3) and the grounding terminal (PE) is zero.
 - Make sure that the voltage between the drive output terminals (T1/U, T2/V, T3/W) and the grounding terminal (PE) is zero.
 - Make sure that the drive DC voltage is zero.
 - Frames R1...R3: Make sure that the voltage between the drive R+/UDC+ terminal and output terminals (T1/U, T2/V, T3/W) is zero.
 - Frames R4...R9: Make sure that the voltage between the drive DC terminals (UDC+ and UDC-) is zero and between the drive DC terminals (UDC+ and UDC-) and the grounding (PE) terminal is zero.
 6. Install temporary grounding as required by the local regulations.
 7. Ask from the person in control of the electrical installation work for a permit to work.
-



■ Additional instructions and notes



WARNING! Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

- A drive with the internal EMC filter connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, check if you must disconnect the EMC filter. See sections
 - [IEC: When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems](#) on page 117, and [Guidelines for installing the drive to a TT system](#) on page 118.
 - [North America: When to connect EMC filter or disconnect ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems](#) on page 169, and [Guidelines for installing the drive to a TT system](#) on page 170.



WARNING! Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

Note: When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section [EMC compatibility and motor cable length](#) on page 304.

- A drive with the ground-to-phase varistor connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, check if you must disconnect the varistor. See sections
 - [IEC: When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems](#) on page 117, and [Guidelines for installing the drive to a TT system](#) on page 118.
 - [North America: When to connect EMC filter or disconnect ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems](#) on page 169, and [Guidelines for installing the drive to a TT system](#) on page 170.



WARNING! Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

- Use all ELV (extra low voltage) circuits connected to the drive only within a zone of equipotential bonding, that is, within a zone where all simultaneously accessible conductive parts are electrically connected to prevent hazardous voltages appearing between them. You can accomplish this by a proper factory grounding, that is, make sure that all simultaneously accessible conductive parts are grounded to the protective earth (PE) bus of the building.
- Do not do insulation or voltage withstand tests on the drive or drive modules.

Note:

- The motor cable terminals of the drive are at a dangerous voltage when the input power is on, regardless of whether the motor is running or not.
 - The DC and brake resistor terminals (UDC+, UDC-, R+ and R-) are at a dangerous voltage.
 - External wiring can supply dangerous voltages to the terminals of relay outputs (RO1, RO2 and RO3).
 - The Safe torque off function does not remove the voltage from the main and auxiliary circuits. The function is not effective against deliberate sabotage or misuse.
-

Printed circuit boards

WARNING! Use a grounding wrist band when you handle the printed circuit boards. Do not touch the boards unnecessarily. The boards contain components sensitive to electrostatic discharge.

■ Grounding

These instructions are for all personnel who are responsible for the electrical installation, including the grounding of the drive.



WARNING! Obey these instructions. If you ignore them, injury or death, or equipment malfunction can occur, and electromagnetic interference can increase.

- If you are not a qualified electrical professional, do not do grounding work.
 - Always ground the drive, the motor and adjoining equipment to the protective earth (PE) bus of the power supply. This is necessary for the personnel safety. Proper grounding also reduces electromagnetic emission and interference.
 - In a multiple-drive installation, connect each drive separately to the protective earth (PE) bus of the power supply.
 - Make sure that the conductivity of the protective earth (PE) conductors is sufficient. See section [Selecting the power cables](#) on page 89. Obey the local regulations.
 - Connect the power cable shields to the protective earth (PE) terminals of the drive.
 - Make a 360° grounding of the power and control cable shields at the cable entries to suppress electromagnetic disturbances.
-

Note:

- You can use power cable shields as grounding conductors only when their conductivity is sufficient.
 - Standards IEC/EN 61800-5-1 (section 4.3.5.5.2.) and UL 68100-5-1 require that as the normal touch current of the drive is higher than 3.5 mA AC or 10 mA DC, you must use a fixed protective earth (PE) connection. In addition,
 - install a second protective earth conductor of the same cross-sectional area as the original protective earthing conductor,or
 - install a protective earth conductor with a cross-section of at least 10 mm² Cu or 16 mm² Al (when aluminum cables are allowed),or
 - install a device which automatically disconnects the supply if the protective earth conductor breaks.
-



Additional instructions for permanent magnet motor drives

■ Safety in installation, start-up and maintenance

These are additional warnings concerning permanent magnet motor drives. The other safety instructions in this chapter are also valid.



WARNING! Obey these instructions. If you ignore them, injury or death and damage to the equipment can occur.

- Do not work on a drive when a rotating permanent magnet motor is connected to it. A rotating permanent magnet motor energizes the drive including its input power terminals.

Before installation, start-up and maintenance work on the drive:

- Stop the motor.
- Disconnect the motor from the drive with a safety switch or by other means.
- If you cannot disconnect the motor, make sure that the motor cannot rotate during work. Make sure that no other system, like hydraulic crawling drives, can rotate the motor directly or through any mechanical connection like felt, nip, rope, etc.
- Measure that the installation is de-energized.
 - Before and after measuring the installation, verify the operation of the voltage tester on a known voltage source.
 - Make sure that the voltage between the drive output terminals (T1/U, T2/V, T3/W) and the grounding (PE) busbar is zero.
 - Make sure that the voltage between the drive input power terminals (L1, L2, L3) and the grounding (PE) busbar is zero.
 - Make sure that the voltage between the drive DC terminals (UDC+, UDC-) is zero and between the drive DC terminals (UDC+ and UDC-) and the grounding (PE) terminal is zero.
- Install temporary grounding to the drive output terminals (T1/U, T2/V, T3/W). Connect the output terminals together as well as to the PE.

Start-up and operation:

- Make sure that the motor cannot be run into overspeed, e.g. driven by the load. Motor overspeed causes overvoltage that can damage or destroy the capacitors in the intermediate circuit of the drive.







2

Introduction to the manual

Contents of this chapter

The chapter describes applicability, target audience and purpose of this manual. It describes the contents of this manual and refers to a list of related manuals for more information. The chapter also contains a flowchart of steps for examining the delivery, installing and commissioning the drive. The flowchart refers to chapters/sections in this manual.

Applicability

This manual applies to the ACS580-01 drives.

Target audience

The reader is expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols.

The manual is written for readers worldwide. Both SI and imperial units are shown. Special instructions for installations in North America are given.

Purpose of the manual

This manual provides information needed for planning the installation, installing, and servicing the drive.

Contents of this manual

The manual consists of the following chapters:

- *Safety instructions* (page 15) gives safety instructions you must obey when installing, commissioning, operating and servicing the drive.
 - *Introduction to the manual* (this chapter, page 25) describes applicability, target audience, purpose and contents of this manual. It also contains a quick installation and commissioning flowchart. At the end, it lists terms and abbreviations.
 - *Operation principle and hardware description* (page 35) describes the operation principle, layout, power connections and control interfaces, type designation label and type designation information in short.
 - *Mechanical installation* (page 51) describes how to examine the installation site, unpack, examine the delivery and install the drive mechanically.
 - *Guidelines for planning the electrical installation* (page 81) describes how to plan the electrical installation of the drive, for example, how to examine the compatibility of the motor and the drive and select cables, protections and cable routing.
 - *Electrical installation – IEC* (page 113) describes how to measure the insulation of the assembly and the compatibility with other than symmetrically grounded TN-S systems. It then shows how to connect the power and control cables, install optional modules and connect a PC.
 - *Electrical installation – North America* (page 165) describes how to measure the insulation of the assembly and the compatibility with other than symmetrically grounded TN-S systems. It then shows how to connect the power and control cables, install optional modules and connect a PC.
 - *Installation checklist* (page 221) contains a checklist for checking the mechanical and electrical installation of the drive before start-up.
 - *Maintenance and hardware diagnostics* (page 223) contains preventive maintenance instructions and LED indicator descriptions.
 - *Technical data* (page 241) contains technical specifications of the drive, eg, ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE, UL and other marks.
 - *Dimension drawings* (page 323) shows dimension drawings of the drive.
 - *Resistor braking* (page 351) tells how to select the brake resistor.
 - *Safe torque off function* (page 363) describes STO features, installation and technical data.
 - *Optional I/O extension and adapter modules* (page 383) describes CMOD-01, CMOD-02, and CHDI-01 extension modules and CBAI-01 adapter module, their installation, start-up, diagnostics and technical data.
 - *Common mode, du/dt and sine filters* (page 415) describes selection of external filters for the drive.
-

- [Further information](#) (inside of the back cover, page 421) tells how to make product and service inquiries, get information on product training, provide feedback on manuals and find documents on the Internet.

Categorization by frame (size)

The ACS580-01 is manufactured in frames (frame sizes) R1...R9. Some instructions and other information that only concern certain frames are marked with the symbol of the frame (R1...R9). The frame is marked on the type designation label attached to the drive, see section [Type designation label](#) on page 47.

Related documents

You can find manuals and other product documents in PDF format on the Internet. See section [Document library on the Internet](#) on the inside of the back cover. For manuals not available in the Document library, contact your local ABB representative.

Drive manuals and guides	Code (English)
<i>ACS580 standard control program firmware manual</i>	3AXD50000016097
<i>ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual</i>	3AXD50000044794
<i>ACS580-01 quick installation and start-up guide (IEC)</i>	3AXD50000527052
<i>ACS580-01 quick installation and start-up guide (NEC)</i>	3AXD50000745524
<i>ACx-AP-X assistant control panels user's manual</i>	3AUA0000085685
<i>Drive modules cabinet design and construction instructions</i>	3AUA0000107668
<i>Alternate Fuses, MMPs and Circuit Breakers for ABB Drives</i>	3AXD50000645015
Option manuals and guides	
<i>ACS580, ACH580 and ACQ580 drive module frames R3 and R5 to R9 for cabinet installation (options +P940 and +P944) supplement</i>	3AXD50000210305
<i>ACS580-01, ACH580-01 and ACQ580-01 installation guide for UK gland plate (option +H358)</i>	3AXD50000034735
<i>CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual</i>	3AXD50000030058
<i>CDPI-01 communication adapter module user's manual</i>	3AXD50000009929
<i>DPMP-01 mounting platform for control panels</i>	3AUA0000100140
<i>DPMP-02/03 mounting platform for control panels</i>	3AUA0000136205
<i>DPMP-04 and DPMP-05 mounting platform for control panels</i>	3AXD50000308484
<i>FCAN-01 CANopen adapter module user's manual</i>	3AFE68615500
<i>FCNA-01 ControlNet adapter module user's manual</i>	3AUA0000141650
<i>FDNA-01 DeviceNet™ adapter module user's manual</i>	3AFE68573360
<i>FECA-01 EtherCAT adapter module user's manual</i>	3AUA0000068940
<i>FEIP-21 Ethernet/IP adapter module user's manual</i>	3AXD50000158621

<i>FENA-01/-11/-21 Ethernet adapter module user's manual</i>	3AUA0000093568
<i>FEPL-02 Ethernet POWERLINK adapter module user's manual</i>	3AUA0000123527
<i>FMBT-21 Modbus/TCP adapter module user's manual</i>	3AXD50000158607
<i>FPBA-01 PROFIBUS DP adapter module user's manual</i>	3AFE68573271
<i>FPNO-21 PROFINET adapter module user's manual</i>	3AXD50000158614
<i>FSCA-01 RS-485 adapter module user's manual</i>	3AUA0000109533
<i>FSPS-21 Safety functions fieldbus module user's manual</i>	3AXD50000158638
<i>ACS580-01..., ACH580-01... and ACQ580-01...+C135 drives with flange mounting kit supplement</i>	3AXD50000349821
<i>ACS580-01..., ACH580-01... and ACQ580-01...+C135 frames R1 to R3 flange mounting kit quick installation guide</i>	3AXD50000119172
<i>ACS580-01..., ACH580-01... and ACQ580-01...+C135 frames R4 to R5 flange mounting kit quick installation guide</i>	3AXD50000287093
<i>ACS880-01..., ACS580-01..., ACH580-01... and ACQ580-01...+C135 frames R6 to R9 flange mounting kit quick installation guide</i>	3AXD50000019099
<i>Main switch and EMC C1 filter options (+F278, +F316, +E223) installation supplement for ACS580-01, ACH580-01 and ACH580-01 frames R1 to R5</i>	3AXD50000155132
<i>UL Type 12 hood quick installation guide for ACS580-01, ACH580-01 and ACQ580-01 frames R1 to R9</i>	3AXD50000225972

Tool and maintenance manuals and guides

<i>Drive composer PC tool user's manual</i>	3AUA0000094606
<i>Converter module capacitor reforming instructions</i>	3BFE64059629
<i>NETA-21 remote monitoring tool user's manual</i>	3AUA0000096939
<i>NETA-21 remote monitoring tool installation and start-up guide</i>	3AUA0000096881

Animation


<i>ACH580-01, ACQ580-01, ACS580-01 and ACS880-01 frames R6...R7 installation in Rittal VX25 400 mm enclosure animation</i>	9AKK107991A9541
--	---------------------------------

The code below opens an online listing of the manuals applicable to this product.



[ACS580-01 manuals](#)

Quick installation and commissioning flowchart



Task	See
Connect the control cables.	Electrical installation: <u>IEC</u> : Connecting the control cables on page 142 <u>North America</u> : Connecting the control cables on page 176
↓	
Check the installation.	Installation checklist on page 221
↓	
Commission the drive.	ACS580 standard control program firmware manual (3AXD50000016097 [English])

Terms and abbreviations

Term/abbreviation	Explanation
ACS-BP-S	Basic control panel, basic operator keypad for communication with the drive. The ACS580 supports ACS-BP-S basic control panel.
Assistant control panel	Assistant control panel (ACS-AP-x) is an advanced operator keypad for communication with the drive. The ACS580 supports types ACS-AP-I and ACS-AP-S, as well as ACS-AP-W, which has a Bluetooth interface.
Brake chopper	Conducts the surplus energy from the intermediate circuit of the drive to the brake resistor when necessary. The chopper operates when the DC link voltage exceeds a certain maximum limit. The voltage rise is typically caused by deceleration (braking) of a high inertia motor.
Brake resistor	Dissipates the drive surplus braking energy conducted by the brake chopper to heat. Essential part of the brake circuit. See Brake chopper .
Control unit	The part in which the control program runs.
Capacitor bank	See DC link capacitors .
CBAI-01	CBAI-01 bipolar analog IO adapter module
CCA-01	Configuration adapter
CDPI-01	Communication adapter module
CHDI-01	Optional 115/230 V digital input extension module
CMOD-01	Optional multifunction extension module (external 24 V AC/DC and digital I/O extension)
CMOD-02	Optional multifunction extension module (external 24 V AC/DC and isolated PTC interface)
CPTC-02	Optional multifunction extension module (external 24 V and ATEX certified PTC interface)
DC link	DC circuit between rectifier and inverter
DC link capacitors	Energy storage which stabilizes the intermediate circuit DC voltage
DPMP-01	Mounting platform for ACS-AP control panel (flange mounting). CDP-01 communication adapter module is needed to connect the DMP0-01 to the drive. For up to 32 drives on a panel bus with a single panel on cabinet door, one DMP-02 with one CDPI-01 per each drive are used.
DPMP-02	Mounting platform for ACS-AP control panel (surface mounting). CDP-01 communication adapter module is needed to connect the DMP0-02 to the drive. For up to 32 drives on a panel bus with a single panel on cabinet door, one DMP-02 with one CDPI-01 per each drive are used.
DPMP-EXT	Door mounting kit for the panel. For one drive; contains both DPMP-02 and CDPI-01, which connects the DPMP-02 to the drive.
Drive	Frequency converter for controlling AC motors
EMC	Electromagnetic compatibility
EFB	Embedded fieldbus
FBA	Fieldbus adapter
FCAN-01	Optional CANopen adapter module

Term/abbreviation	Explanation
FCNA-01	ControlNet adapter module
FDNA-01	Optional DeviceNet adapter module
FECA-01	Optional EtherCAT adapter module
FEIP-21	Optional two-port Ethernet/IP adapter module
FENA-21	Optional two-port Ethernet adapter module for EtherNet/IP, Modbus TCP and PROFINET IO protocols
FEPL-02	Optional Ethernet POWERLINK adapter module
FMBT-21	Optional two-port Modbus/TCP adapter module
FPBA-01	Optional PROFIBUS DP adapter module
FPNO-21	Optional PROFINET IO adapter module
FSPS-21	Optional Safety functions fieldbus module
Frame (size)	Refers to drive physical size, for example R1 and R2. The type designation label attached to the drive shows the frame of the drive, see section Type designation key on page 49.
FSCA-01	Optional EIA-485 adapter module
I/O	Input/Output
IGBT	Insulated gate bipolar transistor
Intermediate circuit	See DC link .
Inverter	Converts direct current and voltage to alternating current and voltage.
Macro	Pre-defined default values of parameters in drive control program. Each macro is intended for a specific application. See <i>ACS580 firmware manual</i> (3AXD50000016097 [English]).
NEC 70	National Fire Protection Association (National Electric Code 70)
NETA-21	Remote monitoring tool
Network control	With fieldbus protocols based on the Common Industrial Protocol (CIP™), such as DeviceNet and Ethernet/IP, denotes the control of the drive using the Net Ctrl and Net Ref objects of the ODVA AC/DC Drive Profile. For more information, see www.odva.org , and the following manuals: <ul style="list-style-type: none"> • <i>FDNA-01 DeviceNet adapter module user's manual</i> (3AFE68573360 [English]), and • <i>FENA-01/-11/-21 Ethernet adapter module user's manual</i> (3AUA0000093568 [English]) • <i>FEIP-21 Ethernet/IP adapter module user's manual</i> (3AXD50000158621 [English]).
Parameter	User-adjustable operation instruction to the drive, or signal measured or calculated by the drive
PLC	Programmable logic controller
PROFIBUS, PROFIBUS DP, PROFINET IO	Registered trademarks of PI - PROFIBUS & PROFINET International

Term/abbreviation	Explanation
PTC	Positive temperature coefficient (PTC) refers to materials that experience an increase in electrical resistance when their temperature is raised.
R1, R2, ...	<i>Frame (size)</i>
Rectifier	Converts alternating current and voltage to direct current and voltage.
SIL	Safety integrity level. See chapter Safe torque off function on page 363.
STO	Safe torque off. See chapter Safe torque off function on page 363.



3

Operation principle and hardware description


Contents of this chapter

This chapter briefly describes the operation principle, layout, type designation label and type designation information. It also shows a general diagram of power connections and control interfaces.

Operation principle

The ACS580-01 is a drive for controlling asynchronous AC induction motors, permanent magnet motors and synchronous reluctance motors (SynRM).

The figure below shows the simplified main circuit diagram of the drive.




Layout

Frames R1...R2

The layout of a frame R1 drive is presented below. The main structure of frame R2 is similar to R1. IP55 / UL Type 12 frames are also slightly different from IP21 / UL Type 1 frames, for example, IP21 / UL Type 1 front cover has two parts while IP55 / UL Type 12 front cover only has one part.

R1 IP21 / UL Type 1




1	Mounting points (4 pieces)
2	Cover: upper part (2a), lower part (2b)
3	Cover screw
4	Cable/conduit box
5	Control panel
6	Control panel connection
7	Cold configuration connection for CCA-01
7	Power OK and Fault LEDs. See section LEDs on page 238.
8	I/O connections. See section External control connection terminals, frames R1...R5 on page 44.
9	Varistor grounding screw (VAR). See Frames R1...R3 on page 120 (IEC) or Frames R1...R3, disconnecting EMC or varistor screws (North America) on page 172.

10	EMC filter grounding screw (EMC (DC)). See Frames R1...R3 on page 120 (IEC) or Frames R1...R3, disconnecting EMC or varistor screws (North America) on page 172.
11	Place for storing the removed VAR screw
12	Place for storing the removed EMC screw
13	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and brake resistor connection (R-, R+)
14	PE connection (power line)
15	Grounding connection (motor)
16	Additional grounding connection
17	Stripping length (8 mm) checker
18	Cable entry
19	Main cooling fan
20	Cable tie mounts for I/O cables
21	Auxiliary cooling fan connector

This is an example of IP55 / UL Type 12 frames. They have one-piece front cover, which has a transparent window to leave the control panel visible. UL Type 12 frames have a hood, whose construction depends on the frame size.


R1 IP55 / UL Type 12



1	Mounting points (4 pieces), top points are under the hood, which is installed last.
2	Front cover
3	Cover screws (2 pieces)
4	Control panel behind the transparent window
5	Hood, UL Type 12 only. Hood types vary by the frame size, see page 284 .

Frame R3

R3 IP21 / UL Type 1




1	Mounting points (4 pieces)
2	Cover
3	Cover screw
4	Control panel
5	Control panel connection
6	Cold configuration connection for CCA-01
7	Power OK and Fault LEDs. See section LEDs on page 238.
8	I/O connections. See section External control connection terminals, frames R1...R5 on page 44.
9	Varistor grounding screw (VAR). See Frames R1...R3 on page 120 (IEC) or Frames R1...R3, disconnecting EMC or varistor screws (North America) on page 172.
10	EMC filter grounding screw (EMC (DC)). See Frames R1...R3 on page 120 (IEC) or Frames R1...R3, disconnecting EMC or varistor screws (North America) on page 172.

11	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and brake resistor connection (R-, R+)
12	PE connection (power line)
13	Grounding connection (motor)
14	Additional grounding connection
15	Cable entry
16	Main cooling fan
17	Cable tie mounts for I/O cables
18	Auxiliary cooling fan. For IP55/UL Type 12 drives only.
19	Auxiliary cooling fan connector
20	Place for storing the removed EMC screw
21	Place for storing the removed VAR screw

Frame R4

R4 IP21 / UL Type 1




1	Mounting points (4 pieces)
2	Cover
3	Cover screw
4	Control panel
5	Control panel connection
6	Cold configuration connection for CCA-01
7	Power OK and Fault LEDs. See section LEDs on page 238.
8	I/O connections. See section External control connection terminals, frames R1...R5 on page 44.
9	Varistor grounding screw (VAR). See Frames R4...R9 on page 121 (IEC) or Frames R4...R9, disconnecting EMC or varistor screws (North America) on page 174.

10	Two EMC filter grounding screws, 10a: EMC (DC) and 10b: EMC (AC). See Frames R4...R9 on page 121 (IEC) or Frames R4...R9, disconnecting EMC or varistor screws (North America) on page 174.
11	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and DC connection (UDC+, UDC-)
12	PE connection (power line)
13	Grounding connection (motor)
14	Cable entry
15	Main cooling fan
16	Cable tie mounts for I/O cables
17	Auxiliary cooling fan. For IP55/UL Type 12 drives only.
18	Auxiliary cooling fan connector
19	Additional grounding connection

Frame R5

R5 IP21 / UL Type 1




1	Mounting points (6 pieces: 2 at the top, 2 at the bottom of the main part of the frame, 2 at the top of the cable box)
2	Cover
3	Cable/conduit box
4	Cover screws (2 pieces)
5	Control panel
6	Control panel connection
7	Cold configuration connection for CCA-01
8	Power OK and Fault LEDs. See section LEDs on page 238.
9	I/O connections. See section External control connection terminals, frames R1...R5 on page 44.
10	Varistor grounding screw (VAR). See Frames R4...R9 on page 121 (IEC) or Frames R4...R9, disconnecting EMC or varistor screws (North America) on page 174.

11	Two EMC filter grounding screws, 11a: EMC (DC) and 11b: EMC (AC). See Frames R4...R9 on page 121 (IEC) or Frames R4...R9, disconnecting EMC or varistor screws (North America) on page 174.
12	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and DC connection (UDC+, UDC-) under the shroud
13	PE connection (power line)
14	Grounding connection (motor)
15	Cable box plate
16	Cable entry
17	Main cooling fan
18	Cable tie mounts for I/O cables
19	Auxiliary cooling fan connector

Frames R6...R9

The layout of a frame R6 drive is presented below. The constructions of frames R6...R9 differ to some extent.

R6 IP21 / UL Type 1




1	Mounting points (6 pieces: 2 at the top, 2 at the bottom of the main part of the frame, 2 at the top of the cable box)
2	Cover
3	Cable/conduit box
4	Heatsink
5	Lifting holes (6 pieces)
6	Control panel
7	Control panel connection
8	Cold configuration connection for CCA-01
9	Power OK and Fault LEDs. See section LEDs on page 238.
10	I/O connections. See section External control connection terminals, frames R6...R9 on page 45.
11	Cable tie mounts for I/O cables
12	Clamps for I/O cable mechanical support
13	Varistor grounding screw (VAR), under the control panel platform.

	See Frames R4...R9 on page 121 (IEC) or Frames R4...R9, disconnecting EMC or varistor screws (North America) on page 174.
14	Two EMC filter grounding screws, 14a: EMC (DC) under the control panel platform and 14b: EMC (AC) at the left, above the shroud. See Frames R4...R9 on page 121 (IEC) or Frames R4...R9, disconnecting EMC or varistor screws (North America) on page 174.
15	Shroud. Under the shroud: Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and DC connection (UDC+, UDC-).
16	PE connection (power line)
17	Grounding connection (motor), under the shroud (15).
18	Cable entry
19	Main cooling fan
20	Auxiliary cooling fan

Overview of power and control connections

The logical diagram below shows the power connections and control interfaces of the drive.




1	Option slot 1 for optional fieldbus adapter modules
2	Option slot 2 for optional I/O extension modules
3	Panel port.
4	du/dt or common mode filter (optional), see page 415.

¹⁾ Not in all frame sizes.

External control connection terminals, frames R1...R5


The layout of the external control connection terminals of the R1 frame is shown below. Layout of the external control connection terminals is identical in frames R1...R5 but the location of the control unit with the terminals is different in frames R3...R5.



	Description
X1	Analog inputs and outputs
X2	Aux. voltage output
X3	Programmable digital inputs
X4	Safe torque off connection
X5	Embedded fieldbus
X6	Relay output 3
X7	Relay output 2
X8	Relay output 1
X10	Auxiliary fan connection (IP55)
X13	Option slot 1 (fieldbus adapter modules)
X14	Option slot 2 (I/O extension modules)
S4, S5	Termination switch (S4), bias resistor switch (S5), see section Switches on page 146 (IEC) or Switches on page 198 (North America)
1	Panel port (control panel connection)
2	Cold configuration connection. This connector is used with the CCA-01 configuration adapter.
3	Power OK and Fault LEDs. See section LEDs on page 238.

■ External control connection terminals, frames R6...R9

The layout of the external control connection terminals of frames R6...R9 is shown below.




	Description
X1	Analog inputs and outputs
X2	Aux. voltage output
X3	Digital inputs
X4	Safe torque off connection
X5	Connection to embedded EIA-485 fieldbus adapter module
X6	Relay output 3
X7	Relay output 2
X8	Relay output 1
X10	External +24 V AC/DC input connection
X12	Panel connection
X13	Option slot 1 (fieldbus adapter modules)
X14	Option slot 2 (I/O extension modules)
X16	Auxiliary fan 1 connection
X17	Auxiliary fan 2 connection
X18	Air in temperature sensor connection
S4, S5	Termination switch (S4), bias resistor switch (S5), see section Switches on page 146 (IEC) or Switches on page 198 (North America)
1	Panel port (control panel connection)
2	Cold configuration connection. This connector is used with the CCA-01 configuration adapter.
3	Power OK and Fault LEDs. See section LEDs on page 238.




WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

Control panel

To remove the control panel, press the retaining clip at the top (1a) and pull it forward from the top edge (1b).



To reinstall the control panel, put the bottom of the container in position (1a), press the retaining clip at the top (1b) and push the control panel in at the top edge (1c).



For the use of the control panel, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]) and *ACx-AP-X assistant control panels user's manual* (3AUA0000085685 [English]).


■ Control panel door mounting kits

Door mounting kits for the control panel are available.

For more information, see *DPMP-01 mounting platform for control panels* (3AUA0000100140 [English]), *DPMP-02/03 mounting platform for control panels* (3AUA0000136205 [English]) or *DPMP-04 and DPMP-05 mounting platform for control panels* (3AXD50000308484 [English]).

Type designation label


The type designation label includes IEC and UL (NEC) ratings, appropriate markings and the type designation and serial number, which allow identification of each drive. The type designation label is located on the left side of the drive, see section *Locations of the labels on the drive*. An example label is shown below.





No.	Description
1	Type designation, see section <i>Type designation key</i> on page 49.
2	Name and address of the manufacturer
3	Frame (size)
4	Type of the drive, for example, with Air cooling or Liquid cooling, and so on.
5	Degree of protection
6	IEC: Icc (Rated conditional short-circuit current) = 100 kA, UL (NEC): SCCR (Short circuit current rating) = 100 kA
7	Nominal ratings in the supply voltage range, see section <i>Electrical ratings</i> on page 242, section <i>Electrical power network specification</i> on page 301 and section <i>Motor connection data</i> on page 302. See page 301 for further information on input voltage range.
8	Valid markings
9	S/N: Serial number of format MYYWWXXXXX, where M: Manufacturing plant YY: 16, 17, 18, ... for 2016, 2017, 2018, ... WW: 01, 02, 03, ... for week 1, week 2, week 3, ... XXXXX: Digits making the serial number unique

No.	Description
10	Link to the product data sheet

Locations of the labels on the drive



1	<p>ABB ACS580-01-106A-4</p> <p>Origin Finland Made in Finland ABB Oy Hioimie 13 00380 Helsinki Finland</p> <p>Input U1 3~ 400/480 VAC I1 106/96 A I1 50/60 Hz</p> <p>Output U2 3~ 0...U1 I2 106/96 A I2 0...500 Hz</p> <p>FRAME R5</p> <p>Air cooling IP21 Icc 100 kA</p> <p>UL type 1</p>  <p>CE, SF, US, EAC, UK, CA, MSIP-REI-Abb-088A-4, S/N: M201100006</p>
2	<p>ACS580-01-106A-4 S/N: M201100006 SW v2.07.0.2</p>
3	<p>U1 3~ 400/480 VAC I2 106/96 A Pn 55 kW/75 hp</p> <p>ACS580-01-106A-4  S/N: M201100006</p> <p>Note: Pn is not shown in UL (NEC) drive labels.</p>

Type designation key

The type designation contains information on the specifications and configuration of the drive. You find the type designation on the type designation label attached to the drive. The first digits from the left express the basic configuration, for example, ACS580-01-12A7-4. The optional selections are given after that, separated by plus signs, for example, +L501. The main selections are described below. Not all selections are available for all types.

<p>ACS580-01-12A7-4+L501+K457+...</p> <p style="text-align: center;"> ① ② ③ ④ </p>

	CODE	DESCRIPTION
Basic codes		
①	ACS580	Product series
	01	When no options are selected: Wall mounted, IP21 (UL Type 1), assistant control panel with a USB port, choke, EMC C2 filter (internal EMC filter), safe torque off, braking chopper in frames R1, R2, R3, coated boards, cable lead through entry from the bottom, cable box or the conduit plate with cable entries, quick installation and start-up guide (multilingual).
②	Size	
	xxxx	Refer to the rating table, page 242
③	Voltage rating	
	4	2 = 208...240 V 4 = 380...480 V 6 = 525...600 V See page 301 for further information.
④	Option codes (plus codes)	
Control panel and panel options		
	J400	ACS-AP-S Assistant control panel (as standard)
	J404	ACS-BP-S Basic control panel
	J424	CDUM-01 Blank control panel cover (no control panel)
	J425	ACS-AP-I Assistant control panel
	J429	ACS-AP-W Assistant control panel with a Bluetooth interface
I/O (one slot available for I/O options)		
	L500	CBAI-01 Bipolar analog IO adapter
	L501	CMOD-01 External 24 V AC/DC and digital I/O extension (2×RO and 1×DO)
	L512	CHDI-01 115/230 V Digital input extension (6×DI and 2×RO)
	L523	CMOD-02 External 24 V AC/DC and isolated PTC interface
	L537	CPTC-02 ATEX certified PTC interface and external 24 V. Requires option Q971. Europe only.

CODE	DESCRIPTION
Safety	
Q971	ATEX certified safe disconnection function, EX II (2) GD. Available only with option L537. Europe only.
Fieldbus adapters	
K451	FDNA-01 DeviceNet™
K454	FPBA-01 PROFIBUS DP
K457	FCAN-01 CANopen
K458	FSCA-01 Modbus/RTU
K462	FCNA-01 ControlNet™
K469	FECA-01 EtherCAT
K470	FEPL-02 Ethernet POWERLINK
K475	FENA-21 Two-port Ethernet (EtherNet/IP™, Modbus/TCP, PROFINET)
K490	FEIP-21 Two-port EtherNet/IP
K491	FMBT-21 Two-port Modbus/TCP
K492	FPNO-21 Two-port PROFINET IO
Q986	FSPS-21 Safety functions fieldbus module
Embedded fieldbus	
	CEIA-01 Embedded Modbus RTU adapter, EIA-485 (as standard)
Construction	
B056	IP55 (UL type 12). Factory option, retro-fit not possible.
E223	EMC filter, category C1 for earthed network. For frame sizes R1...R5. Requires option B056. IEC only.
F278	Main switch. For frame sizes R1...R5. Requires option B056. IEC only.
F316	Main switch and EMC filter, category C1 for earthed network. For frame sizes R1...R5. Requires option B056 (IP55). IEC only.
H358	Cable conduit plate, blank
P944	Version for cabinet mounting. For frame sizes R5...R9.

3AXD10000081909


4


Mechanical installation

Contents of this chapter

This chapter tells how to examine the installation site, unpack, examine the delivery and install the drive mechanically.

Safety

 **WARNING!** Frames R5...R9: Lift the drive with a lifting device. Use the lifting eyes of the drive. Do not tilt the drive. **The drive is heavy and its center of gravity is high. An overturning drive can cause physical injury.**




Examining the installation site

The drive must be installed on the wall or an enclosure. There are three alternative ways to install it:

- Vertical

Note: Do not install the drive upside down.



Frame size	Vertical installation - Free space											
	IP21 (UL Type 1)						IP55 (UL Type 12)					
	Above (a) ¹⁾		Below (b) ²⁾		Beside (c) ³⁾		Above (a) ¹⁾		Below (b) ²⁾		Beside (c) ³⁾	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
R1	150	5.91	86	3.39	150	5.91	137	5.39	116	4.57	150	5.91
R2	150	5.91	86	3.39	150	5.91	137	5.39	116	4.57	150	5.91
R3	200	7.87	53	2.09	150	5.91	200	7.87	53	2.09	150	5.91
R4	53	2.09	200	7.87	150	5.91	53	2.09	200	7.87	150	5.91
R5	100	3.94	200	7.87	150	5.91	100	3.94	200	7.87	150	5.91
R6	155	6.10	300	11.81	150	5.91	155	6.10	300	11.81	150	5.91
R7	155	6.10	300	11.81	150	5.91	155	6.10	300	11.81	150	5.91
R8	155	6.10	300	11.81	150	5.91	155	6.10	300	11.81	150	5.91
R9	200	7.87	300	11.81	150	5.91	200	7.87	300	11.81	150	5.91

¹⁾ Free space above is measured from the frame, not from the hood used in UL Type 12 frames.

Note: The height of the hood for frames R4 and R9 exceeds the requirement of free space above for these frames

Frame size	R4	R9
Hood height (in)	2.83	9.06
Hood height (mm)	72	230


²⁾ Free space below is always measured from the drive frame, not from the cable box

3) Free space between the drive and other objects, e.g. wall.

Note: The recommended free space above and below the drive is for installations where the drive is mounted on a wall indoors. For ABB cabinet-built drives, which are thermally tested and approved for a specified temperature range, free space could vary from this recommendation.



- Vertical side by side or between walls



Frame size	Vertical installation side by side - Free space, IP21 (UL Type 1) and IP55 (UL Type 12)					
	Above (a) ¹⁾		Below (b) ²⁾		Between (c) ³⁾	
	mm	in	mm	in	mm	in
R1	200	7.87	200	7.87	0	0
R2	200	7.87	200	7.87	0	0
R3	200	7.87	200	7.87	0	0
R4	200	7.87	200	7.87	0	0
R5	200	7.87	200	7.87	0	0
R6	200	7.87	300	11.81	0	0
R7	200	7.87	300	11.81	0	0
R8	200	7.87	300	11.81	0	0
R9	200	7.87	300	11.81	0	0

¹⁾ Free space above is measured from the frame, not from the hood used in UL Type 12 frames.

Note: The height of the hood for frame R9 exceeds the requirement of free space above for these frames.

Frame size	R9
Hood height (in)	9.06
Hood height (mm)	230

²⁾ Free space below is always measured from the drive frame, not from the cable box.

³⁾ Free space between the drives.

Note: The recommended free space above and below the drive is for installations where the drive is mounted on a wall indoors. For ABB cabinet-built drives, which are thermally tested and approved for a specified temperature range, free space could vary from this recommendation.

Note for IP21 (UL Type 1) frames R1...R2: The cover fastening clips can be removed to make the front cover opening easier.

Note for IP55 (UL Type 12) frames R1...R2: Auxiliary fan maintenance cannot be performed without removing every second drive from installation to get access to the fan.


- Horizontal, IP20 and IP55, R1...R5 only

Note 1: You can install IP21 / UL Type 1 drives horizontally but the installation meets **IP20 requirements only**.

Note 2: IP55/UL Type 12 drive mounted horizontally meet IP21/UL Type 1 ratings.

Note 3: In the horizontal mounting, the drive is not protected from dripping water.

Note 4: The vibration specification in section *Ambient conditions* on page 312 may not be fulfilled.



Frame size	Horizontal installation - Free space							
	IP21 (IP20)				IP55 (UL Type 12)			
	Above (a)		Below (b) ¹⁾		Above (a)		Below (b) ¹⁾	
	mm	in	mm	in	mm	in	mm	in
R1	150	5.91	86	3.39	137	5.39	116	4.57
R2	150	5.91	86	3.39	137	5.39	116	4.57
R3	200	7.87	53	2.09	200	7.87	53	2.09
R4	30	1.18	200	7.87	30	1.18	200	7.87
R5	30	1.18	200	7.87	30	1.18	200	7.87
Frame size	Side up (c)		Side down (d)		Side up (c)		Side down (d)	
	mm	in	mm	in	mm	in	mm	in
R1	30	1.18	200	7.87	30	1.18	200	7.87
R2	30	1.18	200	7.87	30	1.18	200	7.87
R3	30	1.18	200	7.87	30	1.18	200	7.87
R4	30	1.18	200	7.87	30	1.18	200	7.87
R5	30	1.18	200	7.87	30	1.18	200	7.87

¹⁾ Free space below is always measured from the drive frame, not from the cable box.



Make sure that the installation site complies with the requirements below:

- The installation site is sufficiently ventilated or cooled to remove the heat away from the drive. See section [Losses, cooling data and noise](#) on page 289.
- The operation conditions of the drive meet the specifications given in section [Ambient conditions](#) on page 312.
- The wall is as close to vertical as possible, of non-flammable material and strong enough to carry the weight of the drive, see section [Dimensions, weights and free space requirements](#) on page 282.
- The floor/material below the installation is non-flammable.
- There is enough free space above and below the drive to enable cooling air flow, service and maintenance, See the required free space tables for each of the different mounting alignments on page 52 (or page 282).

Required tools

To install the drive mechanically, you need the following tools:

- drill with suitable bits
- screwdriver set (Torx, flat and/or Phillips, as appropriate)
- socket set (metric and SAE)
- torque wrench
- tape measure, if you will not be using the provided mounting template.




Moving the drive

Frames R5...R9: Move the transport package by pallet truck to the installation site.

Unpacking and examining delivery, frames R1 and R2

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 47.



1	Control panel selected in the order. North America: Control panel factory installed.	5	Cable box Note: The cable box is mounted to the IP55 drive module frame at the factory.
2	Manuals <ul style="list-style-type: none"> • Europe: Multilingual quick installation and start-up guide (always), and Hardware and firmware manuals (if ordered separately) • North America: Multilingual quick installation and start-up guide • Multilingual residual voltage warning stickers 	6	Drive
3	I/O option box	7	Mounting template
4	Fieldbus option box	8	Cardboard box
	Note: Possible options in separate packages, if they have been ordered with a plus code, such as for example +K490 (FEIP-21 Two-port EtherNet/IP adapter module) in the fieldbus option box. North America: Options may be ordered as factory installed.	9	End support (2 pcs)
		10	Top cushion
		11	Bottom cushion
		12	Plastic bag
			Note: Hood included with option +B056 (IP55/UL Type 12) in North America





To unpack:

- Open the cardboard box (8)
- Remove the mounting template (7) and top cushion (10)
- Remove the control panel, option boxes and cable box (1,3,4,5)
- Remove the end supports (9)
- Remove the plastic bag (12)
- Lift the drive (6).



WARNING! R1...R2, IP21: Do not lift the drive by holding it from the cover. The drive can fall and become damaged or damage the surroundings.




Recycle the package material according to local regulations.

■ Frames R1 and R2 cable box (IP21, UL Type 1)

This illustration shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive module frame.


Follow the installation instructions in section *Installing the drive vertically, frames R1...R4* on page 72.



Note: Cable box is shipped with grommet cones pointing in. They must be removed and inserted back pointing out.

Unpacking and examining delivery, frame R3

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 47.



1	Control panel selected in the order (in a separate package). North America: Control panel factory installed.
2	Manuals <ul style="list-style-type: none"> • Europe: Multilingual quick installation and start-up guide (always), and Hardware and firmware manuals (if ordered separately) • North America: Multilingual quick installation and start-up guide Multilingual residual voltage warning stickers
3	I/O option box
4	Fieldbus option box

5	Drive
6	Mounting template
7	Cardboard box
8	Option support
9	End support
10	Top cushion
11	Bottom cushion
12	Plastic bag
Note: Hood included with option +B056 (IP55/UL Type 12) in North America	

To unpack:


- Open the cardboard box (7)
- Remove the mounting template (6) and top cushion (10)
- Remove the control panel and option boxes (1,3,4)
- Remove the end supports (9).
- Remove the plastic bag (12)
- Lift the drive (2).

Recycle the package material according to local regulations.



Unpacking and examining delivery, frame R4

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 47.



1	Drive
2	Option tray
3	In the option tray <ul style="list-style-type: none"> • Europe: Multilingual quick installation and start-up guide (always), and Hardware and firmware manuals (if ordered separately) • North America: Multilingual quick installation and start-up guide • Multilingual residual voltage warning stickers • Control panel selected in the order (in a separate package) in the option box. North America: Control panel factory installed.

	<ul style="list-style-type: none"> • Possible options in separate packages, if they have been ordered with a plus code, such as for example +K490 (FEIP-21 Two-port EtherNet/IP adapter module) in the option box. North America: Options may be ordered as factory installed.
4	Cardboard box
5	Inner box with edge boards and cushions. Mounting template in the inner box.
6	Plastic bag
Note: Hood included with option +B056 (IP55/UL Type 12) in North America	

To unpack:


- Cut the straps
- Open box (4) and remove top cushions and option tray (2)
- Lift out the inner box (5)
- Open the inner box (5), lift the drive (1) and remove plastic bag (7).

Recycle the package material according to local regulations.



Unpacking and examining delivery, frame R5

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 47.



1	Cable box package. Note: The cable box is mounted to the IP55 drive module frame at the factory.	5	Stopper
2	Drive	6	Cover protecting film
3	In the option box <ul style="list-style-type: none"> • Europe: Multilingual quick installation and start-up guide (always), and Hardware and firmware manuals (if ordered separately) • North America: Multilingual quick installation and start-up guide • Multilingual residual voltage warning stickers 	7	Straps
4	Cardboard box. Mounting template in the cardboard box.	8	Pallet
		9	Control panel selected in the order (in a separate package) in the option box. North America: Control panel factory installed.
		10	Possible options in separate packages, if they have been ordered with a plus code, such as for example +K490 (FEIP-21 Two-port EtherNet/IP adapter module) in the option box. North America: Options may be ordered as factory installed.
		Note: Hood included with option +B056 (IP55/UL Type 12) in North America	


To unpack:

- Cut the straps (7)
- Remove the cardboard box (4) and option box (3)
- Remove the cover protecting film (6)
- Lift the drive (2).

Recycle the package material according to local regulations.

■ Frame R5 cable box (IP21, UL Type 1)


This illustration shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive module frame.



3AXD10000497342

Unpacking and examining delivery, frames R6...R9

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 47.



1	Cable box. Power and control cable grounding shelves in a plastic bag, assembly drawing. Note: The cable box is mounted to the IP55 drive module frame at the factory.
2	Drive with factory installed options.
3	Cardboard box
4	Straps
5	VCI bag for protecting against corrosion
6	Pallet
7	Stopper
8	Option tray
9	In the option tray <ul style="list-style-type: none"> Europe: Multilingual quick installation and start-up guide (always), and Hardware and firmware manuals (if ordered separately) North America: Multilingual quick installation and start-up guide

	<ul style="list-style-type: none"> Multilingual residual voltage warning stickers
10	Control panel selected in the order (in a separate package) in the option tray. North America: Control panel factory installed.
11	Possible options in separate packages, if they have been ordered with a plus code, such as for example +K490 (FEIP-21 Two-port EtherNet/IP adapter module) in the option tray. North America: Options may be ordered as factory installed.
12	Mounting template on top of the option tray
Note: Hood included with option +B056 (IP55/UL Type 12) in North America	

To unpack:


- Cut the straps (4)
- Remove the cardboard box (3) and option tray (8)
- Remove the VCI bag (5)
- Attach lifting hooks to the lifting eyes of the drive (see the figure on page [51](#))
- Lift the drive with a hoist.

Recycle the package material according to local regulations.




■ Frame R6 cable box (IP21, UL Type 1)

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive frame.




■ Frame R7 cable box (IP21, UL Type 1)

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install cable box to the drive frame.




■ Frame R8 cable box (IP21, UL Type 1)

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive frame.



■ Frame R9 cable box (IP21, UL Type 1)

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive frame.




Installing the drive

■ Installing the drive vertically, frames R1...R4

The figures show frame R3 as an example.

Select fasteners and their application to meet local requirements appropriate to wall surface materials, drive weight and application.

1. Mark the hole locations using the mounting template included in the package. Do not leave the mounting template under the drive. The drive dimensions and hole locations are also shown in the drawings in chapter *Dimension drawings* on page 323.
2. Drill the mounting holes.
3. Insert anchors or plugs into the holes and start the bolts into the anchors or plugs.





	R1		R2		R3		R4	
	mm	in	mm	in	mm	in	mm	in
a	98	3.86	98	3.86	160	6.30	160	6.30
b	317	12.48	417	16.42	473	18.62	619	24.37
Weight	kg	lb	kg	lb	kg	lb	kg	lb
IP21 (UL Type 1)	4.6	10.1	6.6	14.6	11.8	26.0	19.0	41.9
Weight	kg	lb	kg	lb	kg	lb	kg	lb
IP55 (UL Type 12)	4.8	10.6	6.8	15.0	13.0	28.7	20.0	44.1




- Position the drive onto the lower bolts (4a) on the wall to support the weight of the drive. Rotate drive to the wall and place drive over the upper bolts (4b).



WARNING! R1...R2, IP21: Do not lift the drive by holding it from the cover. The drive can fall and become damaged or damage the surroundings.






- Tighten the bolts in the wall securely.



■ Installing the cable box, frames R1...R2

6. Remove the screw (6a) and lift the cover off (6b) from the separate cable box.
7. Attach the cable box cover to the front cover.
8. Install the cable box to the frame. Position the cable box (8a) and tighten the screws (8b).




Note: Install the hood to UL Type 12 drives after you have installed the drive electrically and reinstalled covers, see page [218](#).



■ Installing the drive vertically, frame R5



Select fasteners and their application to meet local requirements appropriate to wall surface materials, drive weight and application.

1. Mark the hole locations using the mounting template included in the package. Do not leave the mounting template under the drive. The drive dimensions and hole locations are also shown in the drawings in chapter *Dimension drawings* on page 323.
2. Drill the mounting holes.
3. Insert fixing anchors or plugs into the holes. Start the two upper bolts and the two lowest bolts into the anchors or plugs.








	R5 IP21 (UL Type 1)		R5 IP55 (UL Type 12)	
	mm	in	mm	in
a	612	24.09	612	24.09
b	581	22.87	581	22.87
c	160	6.30	160	6.30
d >	200	7.87	200	7.87
e >	100	3.94	100	3.94

⚠	R5 IP21 (UL Type 1)		R5 IP55 (UL Type 12)	
	kg	lb	kg	lb
	28.3	62.4	29.0	64.0




IP21 (UL Type 1)

4. Remove the front cover: Remove the fastening screws (4a) with a T20 Torx screwdriver and lift the cover from the bottom upwards (4b) and then to the top side (4c).
5. Attach the cable box to the drive frame.
6. Tighten the box nuts.
7. Slide the box cover from the bottom (7a) and tighten the retaining screws (7b).
8. Put the tabs at the top of the front cover in their counterparts on the housing and then press at the bottom (8a) and tighten the retaining screws (8b).



IP21 (UL Type 1), IP55 (UL Type 12)

9. Position the drive onto the lower bolts (9a) on the wall to support the weight of the drive. Rotate drive to the wall and place drive over the upper bolts (9b). Lift the drive with another person or with a lifting device as it is heavy. Tighten the bolts in the wall securely (9c).
10. Tighten the two remaining bolts securely.



Note: Install the hood on UL Type 12 drives after you have installed the drive electrically and reinstalled covers, see page [218](#).




■ Installing the drive vertically, frames R6...R9

Select fasteners and their application to meet local requirements appropriate to wall surface materials, drive weight and application.

1. Mark the hole locations for the six mounting holes using the mounting template included in the package. Do not leave the mounting template under the drive.




The drive dimensions and hole locations are also shown in the drawings in chapter *Dimension drawings* on page 323.

Note: You can use only two bolts instead of four to attach the lower part of the drive.




	R6		R7		R8		R9	
	mm	in	mm	in	mm	in	mm	in
a	571	22.48	623	24.53	701	27.60	718	28.27
b	531	20.91	583	22.95	658	25.91	658	25.91
c	213	8.39	245	9.65	263	10.35	345	13.58
d	300	11.81	300	11.81	300	11.81	300	11.81
e	155	6.10	155	6.10	155	6.10	200	7.87
IP21, UL Type 1	kg	lb	kg	lb	kg	lb	kg	lb
	42.4	93.5	54	119.1	69	152.2	97	213.9
IP55, UL Type 12	kg	lb	kg	lb	kg	lb	kg	lb
	43.0	94.8	56	123.5	77	169.8	103	227.1

2. Drill the mounting holes.
3. Insert fixing anchors or plugs into the holes and start the bolts into the anchors or plugs.
4. Position the drive onto the bolts on the wall. Lift the drive with a lifting device as it is heavy.
5. Tighten the top two bolts in the wall securely.




IP21 (UL Type 1)

6. Remove the front cover: Remove the fastening screws (a) with a T20 Torx screwdriver, move the cover to the top side (b) and then up (c).
7. Attach the cable box to the drive frame.
8. Tighten the box bolts: three at the top (8a) and two at the bottom (8b). Also tighten the bottom bolts started in step 3 (8c).

**IP55 (UL Type 12)**

9. Remove the front cover: Remove the fastening screws (a) with a T20 Torx screwdriver, move the cover to the top side (b) and then up (c).



Note: Install the hood for UL Type 12 drives after you have installed the drive electrically and reinstalled covers, see page 218.

■ Installing the drive vertically side by side

Install the drive following the steps in the appropriate section *Installing the drive vertically, frames R1...R4* (page 72), *Installing the drive vertically, frame R5* (page 75) or *Installing the drive vertically, frames R6...R9* (page 78).



■ Installing the drive horizontally, frames R1...R5

Install the drive following the steps in the appropriate section [Installing the drive vertically, frames R1...R4](#) (page 72) or [Installing the drive vertically, frame R5](#) (page 75). The drive can be installed either the left or right side up.

Flange mounting

Instructions for flange mounting are delivered with the flange mounting kit: *Flange mounting kit quick installation guide for ACX580-01 frames R1 to R3* (3AXD50000119172 [English]), *Flange mounting kit quick installation guide for ACX580-01 frames R4 to R5* (3AXD50000287093 [English]) or *Flange mounting kit quick installation guide for ACS880-01 and ACX580-01 frames R6 to R9* (3AXD50000019099 [English]). For more information on flange mounting, see *Flange mounting kit installation supplement* (3AXD50000019100 [English]).

Strut channel installation (US only)

Contents of the mounting kit:

- Upper mounting clip labeled “Top”
- Lower mounting clip labeled “Bottom”

■ Installation instructions

Install clips when mounting frame sizes R1...R3 to strut channel.

1. Slide clips onto respective upper and lower mounting flanges of the drive.
2. Push until they click into place.





5

Guidelines for planning the electrical installation

Contents of this chapter

This chapter contains instructions for planning the electrical installation of the drive, for example, for examining the compatibility of the motor and drive, selecting cables, protections and cable routing.

Limitation of liability

The installation must always be designed and made according to applicable local laws and regulations. The manufacturer does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by the manufacturer are not followed, the drive may experience problems that the warranty does not cover.

Selecting the supply disconnecting device

Install a hand-operated input disconnecting device between the AC power source and the drive. The disconnecting device must be of a type that can be locked to the open position for installation and maintenance work.

■ **European Union**

To meet the European Union Directives, according to standard EN 60204-1, *Safety of Machinery*, the disconnecting device must be one of the following types:

- switch-disconnector of utilization category AC-23B (EN 60947-3)
- disconnector that has an auxiliary contact that in all cases causes switching devices to break the load circuit before the opening of the main contacts of the disconnector (EN 60947-3)
- circuit breaker suitable for isolation in accordance with EN 60947-2.

■ **North America**

Installations must be compliant with NFPA 70 (NEC)¹⁾ and/or Canadian Electrical Code (CE) along with state and local codes for your location and application.

¹⁾ National Fire Protection Association 70 (National Electric Code).

■ **Other regions**

The disconnecting device must conform to the applicable local safety regulations.

Examining the compatibility of the motor and drive

Use an asynchronous AC induction motor, permanent magnet motor or synchronous reluctance motor (SynRM) with the drive. Multiple induction motors can be operated at a time when using scalar mode. Operation of permanent magnet motors is limited to one connection to the drive at a time.

Make sure that the motor and the drive are compatible according to the rating table in section [Electrical ratings](#) on page 242. The table lists the typical motor power for each drive type.

Make sure that the motor withstands the maximum peak voltage in the motor terminals. See the [Requirements table](#) on page 84. For basics of protecting the motor insulation and bearings in drive systems, refer to section [Protecting the motor insulation and bearings](#) below.

Note:

- Consult the motor manufacturer before using a motor whose nominal voltage differs from the AC line voltage connected to the drive input.
- The voltage peaks at the motor terminals are relative to the supply voltage of the drive, not the drive output voltage.
- If the motor and drive are not of the same size, consider the following operation limits of the drive control program:
 - motor nominal voltage range $1/6 \dots 2 \cdot U_n$
 - motor nominal current range $1/6 \dots 2 \cdot I_2$ (IEC), or $1/6 \dots 2 \cdot I_{LD}$ (North America), of the drive in vector control and $0 \dots 2 \cdot I_2$ in scalar control. The control mode is selected by a drive parameter.

■ Protecting the motor insulation and bearings

In North America a du/dt filter is typically not used unless the application has very long cable lengths or when they have problems occurring.

The drive employs modern IGBT inverter technology. Regardless of frequency, the drive output comprises pulses of approximately the drive DC voltage with a very short rise time. The pulse voltage can almost double at the motor terminals, depending on the attenuation and reflection properties of the motor cable and the terminals. This can cause additional stress on the motor and motor cable insulation.

Modern variable speed drives with their fast rising voltage pulses and high switching frequencies can generate current pulses that flow through the motor bearings. This can gradually erode the bearing races and rolling elements.

Optional du/dt filters protect motor insulation system and reduce bearing currents. Optional common mode filters mainly reduce bearing currents. Insulated N-end (non-drive end) bearings protect the motor bearings.

■ Requirements table

The following table shows how to select the motor insulation system and when an optional drive du/dt and common mode filters and insulated N-end (non-drive end) motor bearings are required. Ignoring the requirements or improper installation may shorten motor life or damage the motor bearings and voids the warranty.

Motor type	Nominal AC supply voltage	Requirement for		
		Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings	
			$P_n < 100$ kW and frame size < IEC 315	$100 \text{ kW} \leq P_n < 350$ kW or IEC 315 \leq frame size < IEC 400
			$P_n < 134$ hp and frame size < NEMA 500	$134 \text{ hp} \leq P_n < 469$ hp or NEMA 500 \leq frame size \leq NEMA 580
ABB motors				
Random-wound M2_, M3_ and M4_	$U_n \leq 500$ V	Standard	-	+ N
Form-wound HX_ and AM_	$380 \text{ V} < U_n \leq 690$ V	Standard	n.a.	+ N + CMF
Old* form-wound HX_ and modular	$380 \text{ V} < U_n \leq 690$ V	Check with the motor manufacturer.	+ du/dt with voltages over 500 V + N + CMF	
Random-wound HX_ and AM_ **	$0 \text{ V} < U_n \leq 500$ V	Enameled wire with fiber glass taping	+ N + CMF	

* manufactured before 1.1.1998

** For motors manufactured before 1.1.1998, contact your local ABB representative.

Motor type	Nominal AC supply voltage	Requirement for		
		Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings	
			$P_n < 100$ kW and frame size < IEC 315	100 kW $\leq P_n < 350$ kW or IEC 315 \leq frame size < IEC 400
			$P_n < 134$ hp and frame size < NEMA 500	134 hp $\leq P_n < 469$ hp or NEMA 500 \leq frame size \leq NEMA 580
Non-ABB motors				
Random-wound and form-wound	$U_n \leq 420$ V	Standard: $\hat{U}_{LL} = 1300$ V	-	+ N or CMF
	420 V < $U_n \leq 500$ V	Standard: $\hat{U}_{LL} = 1300$ V	+ du/dt	+ du/dt + (N or CMF)
		or Reinforced: $\hat{U}_{LL} = 1600$ V, 0.2 microsecond rise time	-	+ N or CMF

The abbreviations used in the table are defined below.

Abbr.	Definition
U_n	Nominal AC line voltage
\hat{U}_{LL}	Peak line-to-line voltage at motor terminals which the motor insulation must withstand
P_n	Motor nominal power
du/dt	du/dt filter at the output of the drive. Available from ABB as an optional add-on kit.
CMF	Common mode filter. Depending on the drive type, CMF is available from ABB as an optional add-on kit.
N	N-end bearing: insulated motor non-drive end bearing
n.a.	Motors of this power range are not available as standard units. Consult the motor manufacturer.

Additional requirements for the braking applications

When the motor brakes the machinery, the intermediate circuit DC voltage of the drive increases, the effect being similar to increasing the motor supply voltage by up to 20 percent. Consider this voltage increase when specifying the motor insulation requirements if the motor will be braking a large part of its operation time.


Example: Motor insulation requirement for a 400 V AC line voltage application must be selected as if the drive were supplied with 480 V.

Additional data for calculating the rise time and the peak line-to-line voltage


If you need to calculate the actual peak voltage and voltage rise time considering the actual cable length, proceed as follows:

- Peak line-to line voltage: Read the relative \hat{U}_{LL}/U_n value from the appropriate diagram below and multiply it by the nominal supply voltage (U_n).
 - Voltage rise time: Read the relative values \hat{U}_{LL}/U_n and $(du/dt)/U_n$ from the appropriate diagram on page 87. Multiply the values by the nominal supply voltage (U_n) and substitute into equation $t = 0.8 \cdot \hat{U}_{LL}/(du/dt)$.
-

A



B



A	Drive with du/dt filter
B	Drive without du/dt filter
l	Motor cable length
\hat{U}_{LL}/U_n	Relative peak line-to-line voltage
$(du/dt)/U_n$	Relative du/dt value
Note: \hat{U}_{LL} and du/dt values are approximately 20% higher with resistor braking.	

Additional note for sine filters

Sine filters protect the motor insulation system. Therefore, a du/dt filter can be replaced with a sine filter. The peak phase-to-phase voltage with the sine filter is approximately $1.5 \cdot U_n$.

Selecting the power cables

■ General guidelines, IEC and North America

Select the input power and motor cables according to local regulations.

- **Current:** Select a cable capable of carrying the maximum load current and suitable for the prospective short-circuit provided by the supply network. The method of installation and ambient temperature affect the cable current carrying capacity. Obey local regulations and laws.
- **Temperature:** For IEC, select a cable rated for at least 70 °C (90 °C for IP55 [UL Type 12]) maximum permissible temperature of conductor in continuous use. For North America, power cables must be rated for 75 °C (167 °F) or higher with derating.
- **Voltage:** 600 V AC cable is accepted for up to 500 V AC. 1000 V AC cable is required above 500 V AC.

To comply with the EMC requirements of the CE mark, use one of the approved cable types in section *Preferred power cable types, IEC and North America* on page 90.

Symmetrical shielded cable reduces electromagnetic emission of the whole drive system as well as the stress on motor insulation, bearing currents and wear.

Metal conduit reduces electromagnetic emission of the whole drive system.

The protective conductor must always have an adequate conductivity.

Unless local wiring regulations state otherwise, the cross-sectional area of the protective conductor must agree with the conditions that require automatic disconnection of the supply required in 411.3.2. of IEC 60364-4-41:2005 and be capable of withstanding the prospective fault current during the disconnection time of the protective device. The cross-sectional area of the protective conductor can either be selected from the table below or calculated according to 543.1 of IEC 60364-5-54.

This table shows the minimum cross-sectional area of the protective conductor related to the phase conductor size according to IEC 61800-5-1 when the phase conductor and the protective conductor are made of the same metal. If this is not so, the cross-sectional area of the protective grounding conductor shall be determined in a manner which produces a conductance equivalent to that which results from the application of this table.




Cross-sectional area of the phase conductors S (mm ²)	Minimum cross-sectional area of the corresponding protective conductor S_p (mm ²)
$S \leq 16$	S
$16 < S \leq 35$	16
$35 < S$	$S/2$

Note: See the IEC/EN 61800-5-1 requirement on grounding in the Note on page 22.

■ Power cable types




Preferred power cable types, IEC and North America



Recommended cable types are presented here. Check with local / state / country electrical codes for allowance.

Cable type	Use as input power cabling	Use as motor cabling
 <p>Symmetrical shielded (or armored) cable with three phase conductors and concentric PE conductor as shield (or armor)</p>	Yes	Yes
 <p>Symmetrical shielded (or armored) cable with three phase conductors and symmetrically constructed PE conductor and a shield (or armor)</p>	Yes	Yes
 <p>Symmetrical shielded (or armored) cable with three phase conductors and a shield (or armor), and separate PE conductor/cable¹⁾</p>	Yes	Yes


¹⁾ A separate PE conductor is required if the conductivity of the shield (or armor) is not sufficient for the PE use. For IEC 61800-5-1 requirements, see page 89.

Alternate power cable types

Cable type	Use as input power cabling	Use as motor cabling
 <p>PVC</p> <p>Four-conductor cabling in PVC conduit or jacket (three phase conductors and PE)</p>	<p>Yes with phase conductor smaller than 10 mm² (8 AWG).</p>	<p>Yes with phase conductor smaller than 10 mm² (8 AWG), or motors up to 30 kW (40 hp).</p> <p>Note: Shielded or armored cable, or cabling in metal conduit is always recommended to minimize radio frequency interference</p>
 <p>EMT</p> <p>Four-conductor cabling in metal conduit (three phase conductors and PE), eg, EMT, or four-conductor armored cable</p>	<p>Yes</p>	<p>Yes with phase conductor smaller than 10 mm² (8 AWG) or motors up to 30 kW (40 hp).</p>
 <p>Well-shielded (Al/Cu shield or armor) four-conductor cable (three phase conductors and a PE)</p>	<p>Yes</p>	<p>Yes with motors up to 100 kW (135 hp). A potential equalization between the frames of motor and driven equipment is required.</p>

Cable type	Use as input power cabling	Use as motor cabling
 <p>A single-core cable system: three phase conductors and PE conductor on cable tray</p> <p>Preferable cable arrangement to avoid voltage or current unbalance between the phases</p>	<p>Yes</p> <p> WARNING! If you use unshielded high-power input power cables in an IT network, make sure that the non-conductive outer sheath (jacket) of the cables have good contact with a properly grounded conductive surface, for example, install the cables on a properly grounded cable tray. Otherwise voltage may become present on the non-conductive outer sheath of the cables, and there is even a risk of an electric shock.</p>	<p>No</p>

Not allowed power cable types

Cable type	Use as input power cabling	Use as motor cabling
 <p>Symmetrical shielded cable with individual shields for each phase conductor</p>	<p>No</p>	<p>No</p>

■ Additional guidelines, North America

Follow these additional guidelines for North America with the general guidelines in section [General guidelines, IEC and North America](#) on page 89.

ABB recommends the use of conduit for power wiring to the drive and between the drive and the motor(s). Due to the variety of application needs, metallic and non-metallic conduit can be used. ABB prefers the use of metallic conduit. Where permitted, non-metallic conduit may be used.

The following tables show examples of various materials and methods for wiring the drive in the intended application. See NEC 70 along with state and local codes for the appropriate materials for your application.

In all applications, ABB prefers the use of VFD cable between drive and motor(s).

Conduit - Metallic ^{1, 3)}	Notes
Electrical metallic tubing: Type EMT	<ul style="list-style-type: none"> • Symmetrical shielded VFD cable is preferred. • Use separate conduit run for each motor.⁴⁾ • Do not run power feed wiring and motor wiring in the same conduit.
Rigid metal conduit: Type RMC	
Liquid-tight flexible metal electrical conduit: Type LFMC	

Conduit - Non-metallic ^{2,3)}	Notes
Liquid-tight flexible nonmetallic conduit: Type LFNC	<ul style="list-style-type: none"> • Symmetrical shielded VFD cable is preferred. • Use separate conduit run for each motor.⁴⁾ • Do not run power feed wiring and motor wiring in the same conduit.⁴⁾

Wireways ³⁾	Notes
Metallic	<ul style="list-style-type: none"> • Symmetrical shielded VFD cable is preferred. • Use output conductors require separation from motor feed and other low voltage conductors. • Do not run outputs of multiple drives in parallel. Bundle each cable together and use separator where possible.

Free air ³⁾	Notes
Enclosures, air handlers, etc.	<ul style="list-style-type: none"> • Symmetrical shielded VFD cable is preferred. • Allowed internally in enclosures when in accordance with UL.

¹⁾ Metallic conduit may be used as an additional ground path, provided this path is a solid path capable of handling ground currents.

²⁾ Non-metallic conduit use underground is allowed; however, these installations inherently have an increased chance for nuisance problems due to the potential for water/moisture in the conduit. Water/moisture in the conduit increases the likelihood of VFD faults or warnings. Proper installation is required to ensure there is no intrusion of water/moisture.

³⁾ See 70 (NEC), UL, and local codes for your application.

⁴⁾ See routing instructions in section [General guidelines, North America](#) on page 102.

■ Conductor type, IEC and North America

The following table includes various conductor types that can be connected to the drive. For optimal drive performance, VFD cable is preferred. When not available, see the following standards in the footnotes below.

Conductor type		Notes ^{1, 2)}
Copper	Allowed	All frames
Aluminum (UL installations)	Not allowed	All frames
Aluminum (IEC installations)	Not allowed	Frames R1...R4
	Allowed	Frames R5...R8 (for $U_n = 230\text{ V}$ only)

1) The selection of cable sizing/type is based on 70 (NEC) Table 310.15 (B) (16), formerly table 310.16, for copper wires is based on 75 °C (167 °F), and wire insulation at 30 °C (86 °F) ambient temperature. Not more than three current-carrying conductors in raceway or cable or earth (directly buried). For other ambient temperatures addition derating may be required. See 310.15(B)(2)(a) for the ampacity correction factors where the ambient temperature is other than 30°C (86°F).

See to 310.15(B)(3)(a) for more than three current-carrying conductors.


For other conditions, size the cables according to local safety regulations, appropriate input voltage and the load current of the drive. See also page 297 for the accepted cable sizes of the drive

2) Select cable size/type is based on CSA 22.1 latest acceptable revision for your area.

■ Power cable shield, IEC and North America

If the cable shield is used as the sole PE conductor, make sure that the conductivity agrees with the PE conductor requirements. See section [General guidelines, IEC and North America](#) on page 89, or IEC 61800-5-1.

To effectively suppress radiated and conducted radio-frequency emissions, the cable shield conductivity must be at least 1/10 of the phase conductor conductivity. The requirements are easily met with a copper or aluminum shield. The minimum requirement of the motor cable shield of the drive is shown below. It consists of a concentric layer of copper wires with an open helix of copper tape or copper wire. The better and tighter the shield, the lower the emission level and bearing currents.



2	Helix of copper tape or copper wire
3	Copper wire screen
4	Inner insulation
5	Cable core

■ Typical power cable sizes, IEC

The table below gives copper cable types with concentric copper shield for the drives with nominal current. The value separated by the plus sign means the diameter of the PE conductor.

See page 295 for the cable lead-through sizes allowed for the selected drive frame size.

IEC type ACS580-01-	Frame size	Cu cable type ¹⁾	Al cable type ^{1,2)}
		mm ²	mm ²
3-phase $U_n = 230\text{ V}$			
04A7-2	R1	3×1.5 + 1.5	-
06A7-2	R1	3×1.5 + 1.5	-
07A6-2	R1	3×1.5 + 1.5	-
12A0-2	R1	3×1.5 + 1.5	-
018A-2	R1	3×2.5 + 2.5	-
025A-2	R2	3×4.0 + 4.0	-
032A-2	R2	3×6.0 + 6.0	-
047A-2	R3	3×10 + 10	-
060A-2	R3	3×16 + 16	-
089A-2	R5	3×35 + 16	3×50 + 25
115A-2	R5	3×50 + 25	3×70 + 35
144A-2	R6	3×70 + 35	3×120 + 70
171A-2	R7	3×95 + 50	3×150 + 70
213A-2	R7	3×120 + 70	3×240 + 120
276A-2	R8	2×(3×70 + 35)	2×(3×95 + 50)
3-phase $U_n = 400\text{ V}$			
02A7-4	R1	3×1.5 + 1.5	-
03A4-4	R1	3×1.5 + 1.5	-
04A1-4	R1	3×1.5 + 1.5	-
05A7-4	R1	3×1.5 + 1.5	-
07A3-4	R1	3×1.5 + 1.5	-
09A5-4	R1	3×2.5 + 2.5	-
12A7-4	R1	3×2.5 + 2.5	-
018A-4	R2	3×2.5 + 2.5	-
026A-4	R2	3×6 + 6	-
033A-4	R3	3×10 + 10	-
039A-4	R3	3×10 + 10	-
046A-4	R3	3×10 + 10	-
062A-4	R4	3×25 + 16	-
073A-4	R4	3×35 + 16	-
088A-4	R5	3×50 + 25	-
106A-4	R5	3×70 + 35	-
145A-4	R6	3×95 + 50	-
169A-4	R7	3×120 + 70	-
206A-4	R7	3×150 + 70	-
246A-4	R8	2×(3×70+35)	-
293A-4	R8	2×(3×95+50)	-

IEC type ACS580-01-	Frame size	Cu cable type ¹⁾	Al cable type ^{1,2)}
		mm ²	mm ²
363A-4	R9	2×(3×120+70)	-
430A-4	R9	2×(3×150+70)	-

¹⁾ The cable sizing is based on max. 6 cables laid on a cable ladder side by side, ambient temperature 30 °C, PVC insulation, surface temperature 70 °C (EN 60204-1 and IEC 60364-5-52/2001). For other conditions, size the cables according to local safety regulations, appropriate input voltage and the load current of the drive. See also page 295 for the accepted cable sizes of the drive.

²⁾ Aluminum cables can be used with $U_n = 230$ V frames R5...R8 only.

See also section [Terminal and lead-through data for the power cables](#) on page 295.

■ Typical power cable sizes, UL/NEC

See page 297 for the cable lead-through sizes allowed for the selected drive frame size.

The selection of cable sizing/type is based on 70 (NEC) Table 310.15 (B) (16), formerly table 310.16, for copper wires is based on 75 °C (167 °F), and wire insulation at 30 °C (86 °F) ambient temperature. Not more than three current-carrying conductors in raceway or cable or earth (directly buried). For other ambient temperatures addition derating may be required.

See 310.15(B)(2)(a) for the ampacity correction factors where the ambient temperature is other than 30°C (86°F).

See 310.15(B)(3)(a) for more than three current-carrying conductors.

For other conditions, size the cables according to local safety regulations, appropriate input voltage and the load current of the drive. See also page 297 for the accepted cable sizes of the drive.

Note: In UL installations, aluminum cables are not allowed.

■ Armored cable / shielded power cable, IEC and North America

Six-conductor (three phases and three ground) type MC continuous corrugated armor cable with symmetrical grounds is available from the following suppliers (trade names in parentheses):

- Anixter Wire & Cable (Philsheath)
- BICC General Corp (Philsheath)
- Rockbestos Co. (Gardex)
- Okonite (CLX).

Shielded power cables are available from the following suppliers:

- Belden
 - LAPPKABEL (ÖLFLEX)
 - Pirelli.
-


Selecting the control cables, IEC and North America

■ Shielding

All control cables must be shielded.

Use a double-shielded twisted pair cable (figure a below) for analog signals. Employ one individually shielded pair for each signal. Do not use common return for different analog signals.

A double-shielded cable is the best alternative for low-voltage digital signals but single-shielded (b) twisted pair cable is also acceptable.



■ Signals in separate cables

Run analog and digital signals in separate, shielded cables.

Do not mix 24 V AC/DC and 115/230 V AC signals in the same cable.

■ Signals allowed to be run in the same cable

Relay-controlled signals, providing their voltage does not exceed 48 V, can be run in the same cables as digital input signals. The relay-controlled signals should be run as twisted pairs.

■ Relay cable

The cable type with braided metallic screen (for example ÖLFLEX by LAPPKABEL, Germany) has been tested and approved by the manufacturer.

■ Control panel cable

In remote use, the cable connecting the control panel to the drive must not exceed 100 m (330 ft). If multiple drives are connected, the total length of the panel bus must not exceed 100 m (330 ft).

The cable type tested and approved by the manufacturer is used in control panel option kits. Suitable cables are CAT 5e unshielded or shielded twisted pair cables.


■ Drive composer PC tool cable

Connect the Drive composer PC tool to the drive through the USB port of the control panel. Use a USB type A (PC) - type B (control panel) cable. The maximum length of the cable is 3 m (9.8 ft).

■ FPBA-01 PROFIBUS DP adapter module connectors

Frames R1...R3: The following connector types have been tested to fit in the tight space for option slot 1.

- Phoenix Contact SUBCON-PLUS-PROFIB/PG/SC2, part number 2708245. Lead the cable through the control cable hole on the right in the lead-through plate (1).
- Siemens, part number 6GK1 500 0EA02. Lead the cable through the middle control cable hole in the lead-through plate (2).



Routing the cables


■ General guidelines, IEC

Route the motor cable away from other cable routes. Motor cables of several drives can be run in parallel installed next to each other. The motor cable, input power cable and control cables should be installed on separate trays. Avoid long parallel runs of motor cables with other cables in order to decrease electromagnetic interference caused by the rapid changes in the drive output voltage.

Where control cables must cross power cables, make sure they are arranged at an angle as near to 90 degrees as possible. Do not run extra cables through the drive.

The cable trays must have good electrical bonding to each other and to the grounding electrodes. Aluminum tray systems can be used to improve local equalizing of potential.


A diagram of the cable routing is shown below.



■ General guidelines, North America

The following illustrates general guidelines for routing power and motor cabling in conduit. Ensure the installation of your application is in accordance with national and local codes.

- Do not run input power cable and motor cable in the same conduit.
- Use separate conduit for each motor cable run.




■ Continuous motor cable shield or enclosure for equipment on the motor cable

To minimize the emission level when safety switches, contactors, connection boxes or similar equipment are installed on the motor cable between the drive and the motor:

- European Union: Install the equipment in a metal enclosure with 360 degree grounding for the shields of both the incoming and outgoing cable, or connect the shields of the cables otherwise together.
- North America: Install the equipment in a way that the conduit or motor cable shielding runs continuously without breaks from the drive to the motor and is earthed at only the drive and motors ends.

■ Separate control cable ducts, IEC and North America


Wire 24 V and 230 V (120 V) control cables in separate ducts unless the 24 V cable is insulated for 230 V (120 V) or insulated with an insulation sleeving for 230 V (120 V).



Implementing short-circuit and thermal overload protection

■ Protecting the drive and input power cable in short-circuits

Protect the drive and input cable with fuses as follows:



Size the fuses at the distribution board according to instructions given in chapter [Technical data](#), page 269. The fuses will protect the input cable in short-circuit situations, restrict drive damage and prevent damage to adjoining equipment in case of a short-circuit inside the drive.

Circuit breakers

The protective characteristics of circuit breakers depend on the type, construction and settings of the breakers. There are also limitations pertaining to the short-circuit capacity of the supply network. Your local ABB representative can help you in selecting the breaker type when the supply network characteristics are known.

WARNING! Due to the inherent operating principle and construction of circuit breakers, independent of the manufacturer, hot ionized gases can escape from the breaker enclosure in case of a short-circuit. To ensure safe use, pay special attention to the installation and placement of the breakers. Obey the manufacturer's instructions.

You can use the circuit breakers listed in chapter [Circuit breakers \(IEC\)](#), page 273.

■ Protecting the motor and motor cable in short-circuits

The drive protects the motor cable and a single motor in a short-circuit situation when the motor cable is sized according to the nominal current of the drive. No additional protection devices are needed.

■ Protecting the motor cables against thermal overload

The drive protects the motor cables against thermal overload when the cables are sized according to the nominal current of the drive. No additional thermal protection devices are needed.



WARNING! If the drive is connected to multiple motors, use a separate overload protection for each motor cable and motor. The drive overload protection is tuned for the total motor load. It may not detect an overload in one motor circuit only.

North America: The local code (NEC) requires an overload protection and a short-circuit protection for each motor circuit. Use, for example:

- a manual motor protector
- circuit breaker, contactor and overload relay or
- fuses, contactor and overload relay.

■ Protecting the motor against thermal overload

According to regulations, the motor must be protected against thermal overload and the current must be switched off when overload is detected. The drive includes a motor thermal protection function that protects the motor and switches off the current when necessary. Depending on a drive parameter value, the function either monitors a calculated temperature value (based on a motor thermal model, which in turn is based on the motor nominal current) or an actual temperature indication given by motor temperature sensors.

The motor thermal protection model supports thermal memory retention and speed sensitivity. The user can tune the thermal model further by feeding in additional motor and load data.

The most common temperature sensors are:

- motor sizes IEC180...225: thermal switch, eg, Klixon
- motor sizes IEC200...250 and larger: PTC or Pt100.

For more information, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]).

■ Protecting the motor against overload without thermal model or temperature sensors using external overload device

Motor overload protection protects the motor against overload without using motor thermal model or temperature sensors.

Motor overload protection is required and specified by multiple standards including the US National Electric Code (NEC) and the common UL\IEC 61800-5-1 standard in conjunction with UL\IEC 60947-4-1. The standards allow for motor overload protection without external temperature sensors.

The protection feature allows the user to specify the class of operation in the same manner as the overload relays are specified in standards UL\IEC 60947-4-1 and NEMA ICS 2.

The motor overload protection supports thermal memory retention and speed sensitivity.

For more information, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]).

Implementing a ground fault detection function

The drive has a function that detects ground faults in the motor and motor cable. The user can select how the drive reacts to a ground fault (parameter setting). Note that this function is not a personnel safety or a fire protection feature. See the firmware manual for more information.


■ Residual current device compatibility

The drive is suitable to be used with residual current devices of Type B.

Note: The EMC filter of the drive includes capacitors connected between the main circuit and the frame. These capacitors and long motor cables increase the ground leakage current and may cause nuisance faults in circuit breakers.

Implementing the Emergency stop function

For safety reasons, install the emergency stop devices at each operator control station and at other operating stations where emergency stop may be needed. Design the emergency stop according to relevant standards.

Note: Pressing the Stop key  on the control panel of the drive does not generate an emergency stop of the motor or separate the drive from dangerous potential.

Implementing the Safe torque off function

See chapter [Safe torque off function](#) on page 363.

Implementing the ATEX-certified Safe motor disconnection function (option +Q971)

Note: Option +Q971 is not available for North America.

With option +Q971, the drive supplies ATEX-certified safe motor disconnection without contactor that uses the drive Safe torque off function. For more information, see *CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual* (3AXD50000030058 [English]).

Using a safety switch between the drive and the motor

It is recommended to install a safety switch between the permanent magnet motor and the drive output. This is needed to isolate the motor from the drive during maintenance work on the drive.

Using a contactor between the drive and the motor

Implementing the control of the output contactor depends on the motor control mode and stopping method selected. See also section [Implementing a bypass connection](#) on page 107.

When you have selected

- Vector control mode and motor ramp stop, use the following operational sequence to open the contactor.
 1. Give a stop command to the drive.
 2. Wait until the drive decelerates the motor to zero speed.
 3. Open the contactor.

When you have selected

- Vector control mode and motor coast stop; or scalar control mode, use the following operational sequence to open the contactor.
 1. Give a stop command to the drive.
 2. Open the contactor.



WARNING! When the Vector control mode is in use, never open the output contactor while the drive controls the motor. The vector control operate extremely fast, much faster than it takes for the contactor to open its contacts. When the contactor starts opening while the drive controls the motor, the vector control will try to maintain the load current by immediately increasing the drive output voltage to the maximum. This will damage or destroy the contactor completely.

Implementing a bypass connection

If frequent bypassing is required, employ mechanically or electrically interlocked contactors between the motor and the drive and between the motor and the power line. Make sure with interlocking that the contactors cannot be closed simultaneously. The installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, “THIS MACHINE STARTS AUTOMATICALLY”.


Note: The bypass connection cannot be used with permanent magnet motors or synchronous reluctance motors.



WARNING! Never connect the drive output to the electrical power network. The connection may damage the drive.

■ Example bypass connection

An example bypass connection is shown below.



Q1	Main switch for the drive	S11	Drive main contactor on/off control
Q4	Bypass circuit breaker	S40	Motor power supply selection (drive or direct-on-line)
K1	Drive main contactor	S41	Start when the motor is connected direct-on-line
K4	Bypass contactor	S42	Stop when the motor is connected direct-on-line
K5	Drive output contactor	U1	Drive

Switching the motor power supply from drive to direct-on-line

1. Stop the drive and the motor with the drive control panel (drive in local control mode) or with the external stop signal (drive in remote control mode).
2. Open the main contactor of the drive with S11.
3. Switch the motor power supply from the drive to direct-on-line with S40.
4. Wait for 10 seconds to allow the motor magnetization to die away.
5. Start the motor with S41.

Switching the motor power supply from direct-on-line to drive

1. Stop the motor with S42.
2. Switch the motor power supply from direct-on-line to the drive with S40.
3. Close the main contactor of the drive with switch S11 (-> turn to position ST for two seconds and leave at position 1).
4. Start the drive and the motor with the drive control panel (drive in local control mode) or with the external start signal (drive in remote control mode).

Implementing the undervoltage control (power-loss ride-through)


See *ACS580 standard control program firmware manual* (3AXD50000016097 [English]).

Protecting the contacts of relay outputs

Inductive loads (relays, contactors, motors) cause voltage transients when switched off.

It is highly recommended that inductive loads are equipped with noise attenuating circuits (varistors, RC filters [AC] or diodes [DC]) in order to minimize the EMC emission at switch-off. If not suppressed, the disturbances may connect capacitively or inductively to other conductors in the control cable and form a risk of malfunction in other parts of the system.

Install the protective component as close to the inductive load as possible. Do not install protective components at the relay outputs.



1	Relay outputs
2	Varistor
3	RC filter
4	Diode

Limiting relay output maximum voltages at high installation altitudes

See sections *Isolation areas, R1...R5* on page 308 and *Isolation areas, R6...R9* on page 309.

Implementing a motor temperature sensor connection



WARNING! IEC 60664 requires double or reinforced insulation between live parts and the surface of accessible parts of electrical equipment which are either non-conductive or conductive but not connected to the protective earth.

To connect a motor temperature sensor and other similar components to the drive, you have four alternatives:

1. If there is double or reinforced insulation between the sensor and the live parts of the motor, you can connect the sensor directly to the inputs of the drive.
2. If there is basic insulation between the sensor and the live parts of the motor, you can connect the sensor to the inputs of the drive if all circuits connected to the drive's digital and analog inputs (typically extra-low voltage circuits) are protected against contact and insulated with basic insulation from other low-voltage circuits. The insulation must be rated for the same voltage level as the drive main circuit. Note that extra-low voltage circuits (such as 24 V DC) typically do not meet these requirements.
3. You can connect the sensor to an extension module with reinforced insulation (eg, CMOD-02) between the sensor connector and the other connectors of the module. See the table below for the sensor insulation requirement. For sensor connection to the extension module, see its manual.
4. You can connect a sensor to an external thermistor relay the insulation of which is rated for the main circuit voltage of the drive.

See:

- section *AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1)* on page 150 (IEC) or *AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1)* on page 204 (North America)
- section *CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)* on page 399
- *CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual* (3AXD50000030058 [English]).

The table shows what temperature sensor types you can connect to the drive I/O extension modules as well as the insulation requirement for the sensor.

Extension module		Temperature sensor type		
Type	Insulation	PTC	KTY	Pt100, Pt1000
CMOD-02	Reinforced insulation between the motor thermistor connector and the other connectors of the module (including drive control unit connector). → No special requirements for the thermistor insulation level. (The drive control unit is PELV compatible also when the module and a thermistor protection circuit are installed.)	X	-	-
CPTC-02		X	-	-

6

Electrical installation – IEC

Contents of this chapter

This chapter describes how to measure the insulation of the assembly and examine the compatibility with other than symmetrically grounded TN-S systems. It then shows how to connect the power and control cables, install optional modules and connect a PC.

Warnings



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur.

Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.



Required tools

To do the electrical installation, you need these tools:

- wire stripper
 - screwdriver set (Torx, flat and/or Phillips, as appropriate)
 - torque wrench.
-

Measuring the insulation of the assembly

■ Drive

Do not make any voltage tolerance or insulation resistance tests on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.

■ Input power cable


Measure the insulation of the input power cable according to local regulations before connecting it to the drive.

■ Motor and motor cable

Measure the insulation of the motor and motor cable as follows:

1. Make sure that the motor cable is disconnected from the drive output terminals T1/U, T2/V and T3/W.
2. Measure the insulation resistance between the phase conductors and between each phase conductor and the Protective Earth conductor. Use a measuring voltage of 1000 V DC. The insulation resistance of an ABB motor must be greater than 100 Mohm (reference value at 25 °C). For the insulation resistance of other motors, please consult the manufacturer's instructions.


Note: Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.



■ Brake resistor assembly for R1...R3

Measure the insulation of the brake resistor assembly (if present) as follows:

1. Make sure that the resistor cable is connected to the resistor, and disconnected from the drive output terminals R+ and R-.
2. At the drive end, connect the R+ and R- conductors of the resistor cable together. Measure the insulation resistance between the combined conductors and the PE conductor by using a measuring voltage of 1000 V DC. The insulation resistance must be greater than 1 Mohm.



Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems

■ EMC filter

A drive with the internal EMC filter connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the EMC filter. See sections *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems* on page 117, and *Guidelines for installing the drive to a TT system* on page 118.



WARNING! Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

Note: When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section *EMC compatibility and motor cable length* on page 304.

■ Ground-to-phase varistor


A drive with the ground-to-phase varistor connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the varistor. See sections *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems* on page 117, and *Guidelines for installing the drive to a TT system* on page 118.



WARNING! Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

■ When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems

Frame	Symmetrically grounded TN-S systems, ie. center-grounded-ye (A)	Corner grounded delta (B1) and midpoint-grounded delta (B2) systems	IT systems (ungrounded or high-resistance grounded ohms) (C)
R1...R3	Do not disconnect EMC or VAR screws.	Disconnect EMC screw. Do not disconnect VAR screw.	Disconnect EMC and VAR screws.
R4...R5	Do not disconnect EMC or VAR screws.	See Note 1 below.	Disconnect EMC screws (2 pcs) and VAR screw.
R6...R9	Do not disconnect EMC or VAR screws.	Do not disconnect EMC AC or VAR screws. Disconnect EMC DC screw.	Disconnect EMC screws (2 pcs) and VAR screw.



Note 1: Frames R4 and R5 are not evaluated for use on corner-grounded or midpoint-grounded delta systems by IEC standards.



Note 2: These are the EMC filter and varistor screws in different drive frame sizes.


Frame	EMC filter screws	Ground-to-phase varistor screw
R1...R3	EMC screw	VAR
R4...R5	Two EMC screws	VAR
R6...R9	Two EMC screws	VAR

■ Guidelines for installing the drive to a TT system

The drive can be installed to a TT system under these conditions:

1. Residual current device has been installed in the supply system.
2. These screws have been disconnected. Otherwise EMC filter and ground-to-phase varistor capacitor leakage current will cause the residual current device to trip.

Frame size	EMC filter screws	Ground-to-phase varistor screw
R1...R3	EMC screw	VAR
R4...R5	Two EMC screws	VAR
R6...R9	Two EMC screws	VAR



The diagram shows a three-phase supply system with lines L1, L2, and L3, and a neutral line N. The supply lines are connected to the drive through three inductors. The neutral line N is connected to ground. The drive is also connected to ground. The drive is labeled 'Drive'.

3AXD10000681917

Note:

- Because the EMC filter screws have been disconnected, ABB does not guarantee the EMC category.
- ABB does not guarantee the functioning of the ground leakage detector built inside the drive.
- In large systems the residual current device can trip without a real reason.

■ Identifying different types of electrical power systems

To identify the electrical power system type, find out the supply transformer connection. If that is not possible, measure these voltages at the distribution board before you connect power to the drive:

1. input voltage line to line (U_{L-L})
2. input voltage line 1 to ground (U_{L1-G})
3. input voltage line 2 to ground (U_{L2-G})
4. input voltage line 3 to ground (U_{L3-G}).

The line-to-ground voltages in relation to the line-to-line voltage of the electrical power system types are shown below.


U_{L-L}	U_{L1-G}	U_{L2-G}	U_{L3-G}	Electrical power system type
X	$0.58 \cdot X$	$0.58 \cdot X$	$0.58 \cdot X$	Symmetrically grounded TN system (TN-S system)
X	$1.0 \cdot X$	$1.0 \cdot X$	0	Corner-grounded delta system (non-symmetrical)
X	$0.866 \cdot X$	$0.5 \cdot X$	$0.5 \cdot X$	Midpoint-grounded delta system (non-symmetrical)
X	Varying level versus time	Varying level versus time	Varying level versus time	IT systems (ungrounded or high-resistance-grounded [>30 ohms]) non-symmetrical
X				TT system (the protective earth connection for the consumer is provided by a local earth electrode, and there is another independently installed at the generator).

■ Frames R1...R3


To disconnect the internal EMC filter or ground-to-phase varistor, if needed, do as follows:

1. Switch off the power from the drive.
2. Open the front cover, if not already opened, see page 124.
3. To disconnect the internal EMC filter, remove the EMC screw (3a) and place it in the storage place (3b).
4. To disconnect the ground-to-phase varistor, remove the varistor screw (4a) and place it in the storage place (4b).


R1



R2



R3



	Screw
A	EMC (DC)
B	VAR




■ Frames R4...R9


To disconnect the internal EMC filter or ground-to-phase varistor, if needed, do as follows:

1. Switch off the power from the drive.
2. Open the cover, if not already opened. Frame R4: see page 124, frame R5: see page 131, frames R6...R9: see page 79.
3. To disconnect the internal EMC filter, remove the two EMC screws.
4. To disconnect the ground-to-phase varistor, remove the varistor screw.

R4




R5



	Screw
A	EMC (DC)
B	EMC (AC)
C	VAR



R6...R9




	Screw
A	EMC (DC)
B	EMC (AC)
C	VAR



Connecting the power cables


■ Connection diagram




■ Connection procedure, frames R1...R4

1. Remove the front cover: Loosen the retaining screw with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).


IP21 (UL Type 1),
R1...R2




IP21 (UL Type 12),
R3...R4



IP55 (UL Type 12),
R1...R3




IP55 (UL Type 12),
R4




WARNING! If you install the drive on any other system than symmetrically grounded TN-S system, see section [Examining the compatibility with IT \(ungrounded\), corner-grounded delta, midpoint-grounded delta and TT systems](#) on page 116 if you have to disconnect the EMC filter and ground-to-phase varistor.

2. Attach the residual voltage warning sticker in the local language.


R1




R2



R3...R4



3. Remove the rubber grommets for the motor and input power cables, as well as brake resistor cable, if used. Remove the grommets for the control cables when you are connecting them.





Note: The drive is shipped with grommet cones pointing up. They must be removed and inserted back pointing down.


Motor cable

4. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
5. Prepare the ends of the cable as illustrated in the figures. In frames R1 and R2 there are markings on the drive frame near the power cable terminals helping you to strip the wires to the correct length of 8 mm.

Two different motor cable types are shown (6a, 6b). **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.




6. Slide the cable through the hole in the cable entry and attach the grommet to the hole.




7. Connect the motor cable:

- Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable. (7a)
- Connect the twisted shield of the cable to the grounding terminal. (7b)
- Connect the phase conductors of the cable to the T1/U, T2/V and T3/W terminals. Tighten the screws to the torque given in the table. (7c).


R1...R2



R3



R4



Frame size	R1		R2	
	N·m	lbf·ft	N·m	lbf·ft
T1/U, T2/V, T3/W	1.0	0.7	1.5	1.1
PE, ⊕	1.5	1.1	1.5	1.1
	1.2	0.9	1.2	0.9


Frame size	R3		R4	
	N·m	lbf·ft	N·m	lbf·ft
T1/U, T2/V, T3/W	3.5	2.6	4.0	3.0
PE, ⊕	1.5	1.1	2.9	2.1
	1.2	0.9	1.2	0.9

Input power cable

8. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable. **Frame R1:** Make sure there is no optional I/O extension module installed in option slot 2 at this point.
9. Prepare the ends of the cable as illustrated in the figure. If you use aluminum cables, put grease to the peeled aluminum cable before connecting it to the drive. **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.




10. Slide the cable through the hole in the cable entry and attach the grommet to the hole.




11. Connect the input power cable:

- Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable. (11a)
- Connect the twisted shield of the cable to the grounding terminal. (11b)
- Connect the additional PE conductor (see the note on page 21 in chapter *Safety instructions*) of the cable (11c). 21
- Connect the phase conductors of the cable to the L1, L2 and L3 terminals. Tighten the screws to the torque given in the table. (11d).


R1...R2



R3



R4





Frame size	R1		R2	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	1.0	0.7	1.5	1.1
PE, ⚡	1.5	1.1	1.5	1.1
⊕	1.2	0.9	1.2	0.9

Frame size	R3		R4	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	3.5	2.6	4.0	3.0
PE, ⚡	1.5	1.1	2.9	2.1
⊕	1.2	0.9	1.2	0.9



Grounding shelf


12. Frames R1...R2, R4: Install the grounding shelf (included with the mounting screws in a plastic bag in the delivery).



Brake resistor cable (if used)


Frames R1...R3 only

13. Repeat steps 4...6 for the brake resistor cable. Cut off one phase conductor..




14. Connect the cable as the motor cable in step 7. Ground the shield 360 degrees (14a). Connect the twisted shield to the grounding terminal (14b) and the conductors to the R+ and R- terminals (14c) and tighten to the torque given in the table.

R1...R2



R3




Frame size	R1		R2		R3	
	N·m	lbf·ft	N·m	lbf·ft	N·m	lbf·ft
R+, R-	1.0	0.7	1.5	1.1	3.5	2.6
PE, ⚡	1.5	1.1	1.5	1.1	1.5	1.1
	1.2	0.9	1.2	0.9	1.2	0.9

Finalization

Note: Frame R1: You have to install any optional I/O extension module, if used, in options slot 2 at this point. See section *Installing option modules* on page 157.

15. Secure the cables outside the unit mechanically.
16. Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.



■ Connection procedure, frame R5


IP21 (UL Type 1)

1. Remove the module cover: Loosen the retaining screws with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).
Remove the box cover: Loosen the retaining screws with a screwdriver (1d) and slide the cover downwards (1e).


IP55 (UL Type 12)

1. Remove the front cover: Loosen the retaining screws with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).


IP21 (UL Type 1)



IP21 (UL Type 1)




IP55 (UL Type 12)



WARNING! If you install the drive on any other system than symmetrically grounded TN-S system, see section [Examining the compatibility with IT \(ungrounded\), corner-grounded delta, midpoint-grounded delta and TT systems](#) on page 116 if you have to disconnect the EMC filter and ground-to-phase varistor.




2. Attach the residual voltage warning sticker in the local language next to the control unit.
3. Remove the shroud on the power cable terminals by releasing the clips with a screwdriver (3a) and pulling the shroud out (3b).




Motor cable

Use symmetrical shielded cable for motor cabling. If the cable shield is the sole PE conductor for drive or motor, make sure that it has sufficient conductivity for the PE.

4. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
5. Prepare the ends of the motor cable as illustrated in figures 5a and 5b (two different motor cable types are shown). If you use aluminum cables, put grease to the peeled aluminum cable before connecting it to the drive. **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.



6. Slide the cable through the hole of the bottom plate and attach the grommet to the hole.
7. Connect the motor cable:
 - Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable (7a).
 - Connect the twisted shield of the cable to the grounding terminal (7b).
 - Connect the phase conductors of the cable to the T1/U, T2/V and T3/W terminals (7c). Tighten the screws to the torque given in the table.




Frame size	T1/U, T2/V, T3/W		PE, ⊕			⊕ ⊖	
	N·m	lbf·ft	M	N·m	lbf·ft	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1.6	1.2	0.9




Input power cable

8. Repeat steps 4...6 for the input power cable.



9. Connect the input power cable. Use terminals L1, L2 and L3. Tighten the screws to the torque given in the table.


10. Install the cable box plate. Position the plate (10a) and tighten the screw (10b).



Frame size	L1, L2, L3		PE, \oplus			\ominus	
	N·m	lbf·ft	M	N·m	lbf·ft	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1.6	1.2	0.9




11. Reinstall the shroud on the power terminals by putting the tabs at the top of the shroud in their counterparts on the drive frame (11a) and then pressing the shroud in place (11b).



Finalization


12. Secure the cables outside the unit mechanically.
13. Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.



■ Connection procedure, frames R6...R9


⚠ WARNING! If you install the drive on any other system than symmetrically grounded TN-S system, see section *Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems* on page 116 if you have to disconnect the EMC filter and ground-to-phase varistor.

1. Attach the residual voltage warning sticker in the local language next to the control unit.
2. Remove the side plates of the cable box: Remove the retaining screws (2a) and slide the walls out (2b).




3. Remove the shroud on the power cable terminals by releasing the clips with a screwdriver (3a) and pulling the shroud out (3b).
4. Knock out holes in the shroud for the cables to be installed.
5. Frames R8...R9: If you install parallel cables, also knock out holes in the lower shroud for the cables to be installed.


R6...R9



R6...R9




R8...R9



Motor cable

6. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
7. Prepare the ends of the input power cable and motor cable as illustrated in the figure. If you use aluminum cables, put grease to the peeled aluminum cable before connecting it to the drive. Two different motor cable types are shown in the figures (7a, 7b). **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.




8. Slide the cables through the holes in the cable entry and attach the grommets to the holes (the motor cable to the right and the input power cable to the left).
9. Connect the motor cable:
 - Ground the shield 360 degrees under the grounding clamps.
 - Connect the twisted shield of the cable to the grounding terminal (9a).
 - Connect the phase conductors of the cable to terminals T1/U, T2/V and T3/W. Tighten the screws to the torque given in the table (9b).

Note 1 for frames R8...R9: If you connect only one conductor to the connector, ABB recommends that you put it under the upper pressure plate. If you use parallel power cables, put the first conductor under the lower pressure plate and the second under the upper one.

Note 2 for frames R8...R9: The connectors are detachable but ABB does not recommend that you detach them. If you do, detach and reinstall the connectors as described in section [Detaching and reinstalling the connectors](#) on page 139.

Input power cable

10. Connect the input power cable as in step 9. Use terminals L1, L2 and L3.



Frame size	L1, L2, L3, T1/U, T2/V, T3/W		PE, ⏚		⊕	
	N·m	lbf-ft	N·m	lbf-ft	N·m	lbf-ft
R6	30	22	9.8	7.2	1.2	0.9
R7	40	30	9.8	7.2	1.2	0.9
R8	40	30	9.8	7.2	1.2	0.9
R9	70	52	9.8	7.2	1.2	0.9

Detaching and reinstalling the connectors

This is possible but not recommended.

Terminals T1/U, T2/V and T3/W

- Remove the nut that attaches the connector to its busbar.
- Put the conductor under the connector pressure plate and pre-tighten the conductor.
- Put the connector back to its busbar. Start the nut, and turn it at least two rotations by hand.



WARNING! Before using tools, make sure that the nut/screw is not cross-threading. Cross-threading will damage the drive and cause danger.

- Tighten the nut to a torque of 30 N·m (22 lbf-ft).
- Tighten the conductor(s) to 40 N·m (30 lbf-ft) for frame R8 or to 70 N·m (52 lbf-ft) for frame R9.



Terminals L1, L2 and L3

- Remove the combi screw that attaches the connector to its terminal post, and pull the connector off.
- Put the conductor under the connector pressure plate and pre-tighten the conductor.
- Put the connector back onto the terminal post. Start the combi screw, and turn it at least two rotations by hand.




WARNING! Before using tools, make sure that the nut/screw is not cross-threading. Cross-threading will damage the drive and cause danger.


- Tighten the combi screw to a torque of 30 N·m (22 lbf·ft).
- Tighten the conductor(s) to 40 N·m (30 lbf·ft) for frame R8 or to 70 N·m (52 lbf·ft) for frame R9.

11. **Frames R8...R9:** If you install parallel cables, install the second grounding shelf for the parallel power cables (11a). Repeat steps 6...11 (11b).


R8...R9




R8...R9



12. Install the grounding shelf of the control cables.
13. Reinstall the shroud on the power terminals.
14. Secure the cables outside the unit mechanically.



15. Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.



DC connection

The UDC+ and UDC- terminals (as standard in frames R4...R9) are for using external brake chopper units.

Connecting the control cables


See section [Default I/O connection diagram \(ABB standard macro\)](#) on page 143 for the default I/O connections of the ABB standard macro. For other macros, see [ACS580 firmware manual\(3AXD50000016097 \[English\]\)](#).

Connect the cables as described under [Control cable connection procedure R1...R9](#) on page 151.



■ Default I/O connection diagram (ABB standard macro)

R1...R5



Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).
 Digital inputs DI1...DI5 also support 10...24 V AC.

Wire sizes:


0.2...2.5 mm² (24...14 AWG): Terminals +24V, DGND, DCOM, B+, A-, DGND, Ext. 24V

0.14...1.5 mm² (26...16 AWG): Terminals DI, AI, AO, AGND, RO, STO

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)



R6...R9



See the notes on page 145.

Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).

Digital inputs DI1...DI5 also support 10...24 V AC

Wire sizes: 0.14...2.5 mm² (26...16 AWG): All terminals

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)



Notes:

- 1) Current [0(4)...20 mA, $R_{in} = 100 \text{ ohm}$] or voltage [0(2)...10 V, $R_{in} > 200 \text{ kohm}$]. Change of setting requires changing the corresponding parameter.
- 2) Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V).
- 3) AI1 is used as a speed reference if vector control is selected.
- 4) In scalar control (default): See **Menu > Primary settings > Start, stop, reference > Constant speeds / constant frequencies** or parameter group 28 Frequency reference chain.
In vector control: See **Menu > Primary setting > Start, stop, reference > Constant speeds / constant frequencies** or parameter group 22 Speed reference selection.

DI3	DI4	Operation/Parameter	
		Scalar control (default)	Vector control
0	0	Set frequency through AI1	Set speed through AI1
1	0	28.26 Constant frequency 1	22.26 Constant speed 1
0	1	28.27 Constant frequency 2	22.27 Constant speed 2
1	1	28.28 Constant frequency 3	22.28 Constant speed 3

- 5) In scalar control (default): See **Menu - Primary settings - Ramps** or parameter group 28 Frequency reference chain.
In vector control: See **Menu - Primary settings - Ramps** or parameter group 23 Speed reference ramp.





DI5	Ramp set	Parameters	
		Scalar control (default)	Vector control
0	1	28.72 Freq acceleration time 1	23.12 Acceleration time 1
		28.73 Freq deceleration time 1	23.13 Deceleration time 1
1	2	28.74 Freq acceleration time 2	23.14 Acceleration time 2
		28.75 Freq deceleration time 2	23.15 Deceleration time 2

- 6) Connected with jumpers at the factory.
- 7) Use shielded twisted-pair cables for digital signals.
- 8) Ground the outer shield of the cable 360 degrees under the grounding clamp on the grounding shelf for the control cables.

Further information on the usage of the connectors and switches is given in the sections below. See also section [Control connection data](#) on page 305.




Switches

Switch	Description	Position	
S4 (TERM)	Modbus link termination. Must be set to the terminated (ON) position when the drive is the first or last unit on the link.	 ON	Bus not terminated (default)
		 TERM	Bus terminated
S5 (BIAS)	Activates on the biasing voltages to the bus. One (and only one) device, preferably at the end of the bus must have the bias on.	 ON	Bias off (default)
		 BIAS	Bias on

■ Additional information on I/O connections

PNP configuration for digital inputs


Internal and external +24 V power supply connections for PNP configuration are shown in the figure below.



WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

NPN configuration for digital inputs

Internal and external +24 V power supply connections for NPN configuration are shown in the figure below.




WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

Connection for obtaining 0...10 V from analog output 2 (AO2)

To obtain 0...10 V from analog output AO2, connect a 500 ohm resistor (or two 1 kohm resistors in parallel) between the analog output 2 AO2 and analog common ground AGND.

Examples are shown in the figure below.




Connection examples of two-wire and three-wire sensors

Hand/Auto, Hand/PID, and PID macros (see *ACS580 firmware manual* (3AXD50000016097 [English])) use analog input 2 (AI2). The macro wiring diagrams on these pages use an externally powered sensor (connections not shown). The figures below give examples of connections using a two-wire or three-wire sensor/transmitter supplied by the drive auxiliary voltage output.


Note: Maximum capability of the auxiliary 24 V DC (250 mA) output must not be exceeded.

Two-wire sensor/transmitter



Three-wire sensor/transmitter

Note: The sensor is supplied through its current output and the drive feeds the supply voltage (+24 V DC). Thus the output signal must be 4...20 mA, not 0...20 mA.




DI5 as frequency input

For setting the parameters for the digital frequency input, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]).

DI6 as PTC input


If DI6 is used as a PTC input, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]) for how to set parameters accordingly.

Note: If DI6 is used as PTC input, the wiring and the PTC sensor need to be double isolated. Otherwise the CMOD-02 I/O extension module must be used.



AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1)

One, two or three Pt100 sensors; one, two or three Pt1000 sensors; or one Ni1000, KTY83 or KTY84 sensor for motor temperature measurement can be connected between an analog input and output as shown below. Do not connect both ends of the cable shields directly to ground. If a capacitor cannot be used at one end, leave that end of the shield unconnected.



WARNING! As the inputs pictured above are not insulated according to IEC 60664, the connection of the motor temperature sensor requires double or reinforced insulation between motor live parts and the sensor. If the assembly does not fulfill the requirement, the I/O board terminals must be protected against contact and must not be connected to other equipment or the temperature sensor must be isolated from the I/O terminals.



Safe torque off (X4)

For the drive to start, both connections (+24 V DC to IN1 and +24 V DC to IN2) must be closed. By default, the terminal block has jumpers to close the circuit. Remove the jumpers before connecting an external Safe torque off circuitry to the drive. See chapter [Safe torque off function](#) on page 363.

Note: Only 24 V DC can be used for STO. Only PNP input configuration can be used.

■ Control cable connection procedure R1...R9



WARNING! Obey the instructions in chapter *Safety instructions* on page 15. If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section *Electrical safety precautions* on page 19 before you start the work.
2. Remove the front cover(s) if not already removed. See page 124 (R1...R4), page 131 (R5) or page 79 (R6...R9).

Analog signals

The figures for frames R1...R2 and R3 (page 153), R4 (page 154), R5 (page 155) and R6...R9 (page 156) show an example of connecting a cable. Make the connections according to the macro in use.

3. Cut an adequate hole into the rubber grommet and slide the grommet onto the cable. Slide the cable through a hole in the cable entry and attach the grommet to the hole.
4. Ground the outer shield of the cable 360 degrees under the grounding clamp. Keep the cable unstripped as close to the terminals of the control unit as possible. Frames R5...R9: Secure the cables mechanically at the clamps below the control unit.
Ground also the pair-cable shields and grounding wire at the SCR terminal.
5. Route the cable as shown in the figures on pages 153 (R1...R2 and R3), 154 (R4), 155 (R5) or 156 (R6...R9).
6. Connect the conductors to the appropriate terminals of the control unit and tighten to 0.5...0.6 N·m (0.4 lbf·ft).

Digital signals

The figures for frames R1...R2 and R3 (page 153), R4 (page 154), R5 (page 155) and R6...R9 (page 156) show an example of connecting a cable. Make the connections according to the macro in use.

7. Cut an adequate hole into the rubber grommet and slide the grommet onto the cable. Slide the cable through the hole in the cable entry and attach the grommet to the hole.
8. Ground the outer shield of the cable 360 degrees under the grounding clamp. Keep the cable unstripped as close to the terminals of the control unit as possible. Frames R5...R9: Secure the cables mechanically at the clamps below the control unit.
If you use double-shielded cables, ground also the pair-cable shields and grounding wire at the SCR terminal.
9. Route the cable as shown in the figures on pages 153 (R1...R2 and R3), 154 (R4), 155 (R5) or 156 (R6...R9).




10. Connect the conductors to the appropriate terminals of the control unit and tighten to 0.5...0.6 N·m (0.4 lbf·ft).
11. Tie all control cables to the provided cable tie mounts.

Note:

- Leave the other ends of the control cable shields unconnected or ground them indirectly via a high-frequency capacitor with a few nanofarads, eg, 3.3 nF / 630 V. The shield can also be grounded directly at both ends if they are *in the same ground line* with no significant voltage drop between the end points.
- Keep any signal wire pairs twisted as close to the terminals as possible. Twisting the wire with its return wire reduces disturbances caused by inductive coupling.




R1...R2



R1...R2: 0.5...0.6 N·m (0.4 lbf·ft)


R3




R3: 0.5...0.6 N·m (0.4 lbf·ft)



R4




R5




R6...R9



0.5...0.6 N·m
(0.4 lbf·ft)



0.5...0.6 N·m
(0.4 lbf·ft)



M4×20



Installing option modules

Note: If you will install the FPBA-01 module, see section [FPBA-01 PROFIBUS DP adapter module connectors](#) on page 100 for suitable connector types.

■ Mechanical installation of option modules

See section [Overview of power and control connections](#) page 43 for the available slots for each module. Install the option modules as follows:



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur.

Note: Slot 2 in frames R1...R5 is at U_{DC} potential. You must disconnect power supplies before installing or removing an I/O extension module.

Stop the drive and do the steps in section [Electrical safety precautions](#) on page 19 before you start the work.

1. Remove the front cover(s) if not already removed. See page 124 (R1...R4), page 131 (R5) or page 79 (R6...R9).

The figures for frames R1...R5 (page 158) and R6...R9 (page 159) show an example of installing option modules.

Option slot 2 (I/O extension modules)

2. Frame R1 only: Install the option mounting.
3. Put the module carefully into its position on the control unit.
4. Tighten the mounting screw.
5. Tighten the grounding screw (CHASSIS). **Note:** The screw grounds the module. It is necessary for fulfilling the EMC requirements and for proper operation of the module.


Note: Frame R1: The module in option slot 2 covers the power terminals. Do not install a module in option slot 2 before you have installed the power cables.

Option slot 1 (fieldbus adapter modules)


6. Put the module carefully into its position on the control unit.
 7. Tighten the mounting screw (CHASSIS). **Note:** The screw tightens the connections and grounds the module. It is necessary for fulfilling the EMC requirements and for proper operation of the module.
-




R1...R2



R3...R5



R6...R9




■ Wiring the modules

For the optional I/O extension modules CHDI-01, CMOD-01 and CMOD-02 and adapter module CBAI-01, see chapter [Optional I/O extension and adapter modules](#) on page 383 for specific installation and wiring instructions. For other option modules, for example, CPTC-02, see the appropriate option module manual.



■ Reinstalling grommets

UL Type 12: To maintain UL Type 12, reinstall grommets (top of the grommets downwards) to all cable entry holes without conduits.




Reinstalling covers


■ Reinstalling cover, frames R1...R4

1. Reinstall the cover: Put the tabs on the cover top in their counterparts on the housing (1a) and then press the cover (1b).
2. Tighten the retaining screw at the bottom with a T20 Torx screwdriver.


IP21 (UL Type 1) R1...R2




IP21 (UL Type 1) R3...R4



IP55 (UL Type 12) R1...R3



IP55 (UL Type 12) R4



■ Reinstalling covers, frame R5


IP21 (UL Type 1)

1. Reinstall the box cover: Slide the cover upwards (1a) and tighten the retaining screws (1b) with a T20 Torx screwdriver.
2. Reinstall the module cover: Press the cover at the bottom (2a) and tighten the retaining screws (2b).


IP55 (UL Type 12)

1. Reinstall the front cover: Press the cover at the bottom (1a) and tighten the retaining screws (1b) with a T20 Torx screwdriver.


IP21 (UL Type 1)



IP21 (UL Type 1)



IP55 (UL Type 12)



■ Reinstalling side plates and covers, frames R6...R9


IP21 (UL Type 1)

1. Reinstall the side plates of the cable box. Tighten the retaining screws with a T20 Torx screwdriver.
2. Slide the cover of the cable box on the module from below until the cover snaps into place.
3. Reinstall the module cover. Tighten the two retaining screws with a screwdriver.


IP55 (UL Type 12)

1. Reinstall the module cover. Tighten the retaining screws with a screwdriver with a T20 Torx screwdriver.


IP21 (UL Type 1)




IP21 (UL Type 1)



IP21 (UL Type 1)



IP55 (UL Type 1)




Connecting a PC

To be able to connect a PC to the drive, you need an assistant control panel (ACS-AP-I, ACS-AP-S or ACS-AP-W). It is also possible to use the CCA-01 configuration adapter when the drive is not connected to the power supply network or external 24 V supply; the CCA-01 does not work if the drive is powered.

Connect a PC to the drive with a USB data cable (USB Type A <-> USB Type Mini-B) as follows:

1. Lift the USB connector cover from bottom upwards.
2. Put the USB cable Mini-B plug in the control panel USB connector.
3. Put the USB cable A-plug in the USB connector of the PC (3a). The panel displays text “USB connected” (3b).

Note: Panel keys cannot be used when a USB data cable is connected to the panel.



For information on using the Drive composer PC tool, see *Drive composer PC tool user*(3AUA0000094606 [English]).

You can connect a remote ACS-AP-I, ACS-AP-S or ACS-AP-W control panel to the drive, or to chain the control panel or a PC to several drives on a panel bus with a CDPI-01 communication adapter module. See *CDPI-01 communication adapter module user* (3AXD5000009929 [English]).

7

Electrical installation – North America

Contents of this chapter

This chapter describes how to measure the insulation of the assembly and examine the compatibility with other than symmetrically grounded TN-S systems. It then shows how to connect the power and control cables, install optional modules and connect a PC.

Warnings



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur.

Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.

Required tools

To do the electrical installation, you need the these tools:

- wire stripper
- screwdriver set (Torx, flat and/or Phillips, as appropriate)
- torque wrench.

Measuring the insulation of the assembly

Measuring the insulation is typically not required in North American installations.

■ Drive

Do not make any voltage tolerance or insulation resistance tests on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.

■ Input power cable


Measure the insulation of the input power cable according to local regulations before connecting it to the drive.

■ Motor and motor cable

Measure the insulation of the motor and motor cable as follows:

1. Check that the motor cable is disconnected from the drive output terminals T1/U, T2/V and T3/W.
2. Measure the insulation resistance between the phase conductors and between each phase conductor and the Protective Earth conductor. Use a measuring voltage of 1000 V DC. The insulation resistance of an ABB motor must be greater than 100 Mohm (reference value at 25 °C). For the insulation resistance of other motors, please consult the manufacturer's instructions.


Note: Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.



■ Brake resistor assembly for R1...R3

Measure the insulation of the brake resistor assembly (if present) as follows:

1. Make sure that the resistor cable is connected to the resistor, and disconnected from the drive output terminals R+ and R-.
2. At the drive end, connect the R+ and R- conductors of the resistor cable together. Measure the insulation resistance between the combined conductors and the PE conductor by using a measuring voltage of 1000 V DC. The insulation resistance must be greater than 1 Mohm.



Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems

■ EMC filter

To connect the drive to symmetrically grounded TN-S systems, you should connect the internal EMC filter if you are concerned with EMC issues. See section [When to connect EMC filter or disconnect ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems](#) on page 169.



WARNING! Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

Note: When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section [EMC compatibility and motor cable length](#) on page 304.

■ Ground-to-phase varistor

To connect the drive other systems than symmetrically grounded TN-S systems, you may need to disconnect the varistor. See sections [When to connect EMC filter or disconnect ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems](#) on page 169, and [Guidelines for installing the drive to a TT system](#) on page 170.



WARNING! Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

■ **When to connect EMC filter or disconnect ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems**

Configure the EMC filter based on the electrical system of the installation site					
Frame size	Screw label	Factory default screw material	Symmetrically grounded TN systems (TN-S systems), ie. center-grounded-wye (A)	Corner-grounded delta (B1) and midpoint-grounded (B2) delta systems	IT systems (ungrounded or high-resistance grounded [>30 ohms]) (C)
R1...R3	EMC (DC)	Plastic	Optional metal screw ¹⁾	Do not disconnect the plastic screw ²⁾	Do not disconnect the plastic screw ²⁾
	VAR	Metal	Do not disconnect the metal screw	Remove the metal screw	Remove the metal screw
R4...R9 ³⁾	EMC (AC)	Plastic	Optional metal screw ¹⁾	Do not disconnect the plastic screw ²⁾	Do not disconnect the plastic screw ²⁾
	EMC (DC)	Plastic	Optional metal screw ¹⁾	Do not disconnect the plastic screw ²⁾	Do not disconnect the plastic screw ²⁾
	VAR	Metal	Do not disconnect the metal screw	Do not disconnect the metal screw	Remove the metal screw

A

B1

C

A

B2



- 1) You can install metal screw and connect the EMC filter if you are concerned with EMC issues.
- 2) Metal screw must not be used, plastic screw may be maintained or removed from the AC EMC circuit.
- 3) Frames R4 and R5 are evaluated for use on corner-grounded delta networks by

UL standards. (R4 and R5 frames are not to be used on IEC installations of corner grounded networks.)

Note 1: The VAR screw on R1...R3 also connects the EMC (AC) circuit internally within the drive.

Note 2: Failure to remove a metal screw, when indicated in the table above, may result in drive failure.

Note 3: These are the EMC filter and varistor screws and their material in different drive frame sizes.


Frame	EMC filter screws	Ground-to-phase varistor screw
R1...R3	Plastic EMC (DC)	Metal VAR
R4...R9	Plastic EMC (DC), Plastic EMC (AC)	Metal VAR

■ Guidelines for installing the drive to a TT system

The drive can be installed to a TT system under these conditions:

1. Residual current device has been installed in the supply system.
2. EMC filter screws have been disconnected (= they are plastic screws or there is no screw). Otherwise EMC filter leakage current will cause the residual current device to trip. For R1...R3, the VAR screw must plastic, and for R4...R9, the VAR screw must metal.

Frame size	EMC filter screws	Ground-to-phase varistor screw
R1...R3	Plastic EMC (DC)	Plastic VAR (remove metal VAR screw)
R4...R9	Plastic EMC (DC), Plastic EMC (AC)	Metal VAR



3AXD10000681917

Note:

- ABB does not guarantee the EMC category because the EMC filter screws have been disconnected.
- ABB does not guarantee the functioning of the ground leakage detector built inside the drive.
- In large systems the residual current device can trip without a real reason.

■ Identifying different types of electrical power systems

To identify the electrical power system type, find out the supply transformer connection. If that is not possible, measure these voltages at the distribution board before you connect power to the drive:

1. input voltage line to line (U_{L-L})
2. input voltage line 1 to ground (U_{L1-G})
3. input voltage line 2 to ground (U_{L2-G})
4. input voltage line 3 to ground (U_{L3-G}).

The line-to-ground voltages in relation to the line-to-line voltage of the electrical power system types are shown below. See the diagrams on page 169.

U_{L-L}	U_{L1-G}	U_{L2-G}	U_{L3-G}	Electrical power system type
X	$0.58 \cdot X$	$0.58 \cdot X$	$0.58 \cdot X$	Symmetrically grounded TN system (TN-S system)
X	$1.0 \cdot X$	$1.0 \cdot X$	0	Corner-grounded delta system (non-symmetrical)
X	$0.866 \cdot X$	$0.5 \cdot X$	$0.5 \cdot X$	Midpoint-grounded delta system (non-symmetrical)
X	Varying level versus time	Varying level versus time	Varying level versus time	IT systems (ungrounded or high-resistance-grounded [>30 ohms]) non-symmetrical
X				TT system (the protective earth connection for the consumer is provided by a local earth electrode, and there is another independently installed at the generator.


■ Frames R1...R3, disconnecting EMC or varistor screws

Extra screws to configure the drive for different networks are provided in the drive shipment.


To disconnect the internal EMC filter or ground-to-phase varistor, if needed (see page 168), do as follows.

1. Switch off the power from the drive.
2. Open the front cover, if not already opened, see page 178.
3. The internal DC EMC filter is disconnected by default with a plastic screw (3a).
4. To disconnect the ground-to-phase varistor, replace the metal varistor screw (4a) with the plastic screw provided in the package, and place the metal screw in the storage place (4b).

R1




R2



	Screw	Default material
A	EMC (DC)	Plastic
B	VAR	Metal

R3



	Screw	Default material
A	EMC (DC)	Plastic
B	VAR	Metal


■ Frames R4...R9, disconnecting EMC or varistor screws

Extra screws to configure the drive for different networks are provided in the drive shipment.

To disconnect the internal EMC filter or ground-to-phase varistor, if needed (see page 168), do as follows:


1. Switch off the power from the drive.
2. Open the cover, if not already opened. Frame R4: see page 178, frame R5: see page 183, frames R6...R9: see page 79.
3. To disconnect the internal EMC filters:
 The DC EMC filter is disconnected by default with a plastic screw (3a).
 The AC EMC filter is disconnected by default with a plastic screw (3b).
4. To disconnect the ground-to-phase varistor, replace the metal varistor screw (4) with the plastic screw provided in the package, or just remove the metal screw.

R4




	Screw	Default material
A	EMC (DC)	Plastic
B	EMC (AC)	Plastic
C	VAR	Metal

R5



	Screw	Default material
A	EMC-DC	Plastic
B	EMC-AC	Plastic
C	VAR	Metal

R6...R9




	Screw	Default material
A	EMC DC	Plastic
B	EMC AC	Plastic
C	VAR	Metal



Connecting the power cables

■ Connection diagram




6	<p><u>With a conduit:</u> Use a separate grounding cable if the conduit does not meet the requirements for the PE conductor (see page 89) or there is no grounding conductor inside the conduit.</p> <p>Note: ABB prefers the use of a symmetrical shielded motor cable (VFD cable), see the note at the bottom of the table.</p> <p><u>With a shielded cable:</u> Use a separate grounding cable if the shield does not meet the requirements for the PE conductor (see page 89) or there is no symmetrically constructed grounding conductor in the cable (see page 92).</p>
7	<p>du/dt or common mode filter (optional), see page 415.</p>
<p>Note:</p> <p><u>With a shielded cable:</u> If there is a symmetrical grounding conductor in the motor cable in addition to the conductive shield, connect the grounding conductor to the grounding terminal at the drive and motor ends.</p> <p>ABB does not recommend an asymmetrically constructed motor cable or a conduit for motor cabling for motors above 30 kW (40 hp) (see page 89). Connecting its fourth conductor at the motor end increases bearing currents and causes extra wear.</p> <p>For a single phase connection, use terminals L1 and L2.</p>	


■ Connection procedure, frames R1...R4

1. Remove the front cover: Loosen the retaining screw with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).


IP21 (UL Type 1),
R1...R2




IP21 (UL Type 12),
R3...R4



IP55 (UL Type 12),
R1...R3




IP55 (UL Type 12),
R4




⚠ WARNING! If you install the drive on any other system than symmetrically grounded TN-S system, see section [Examining the compatibility with IT \(ungrounded\), corner-grounded delta, midpoint-grounded delta and TT systems](#) on page 168 if you have to disconnect the EMC filter and ground-to-phase varistor.

2. Attach the residual voltage warning sticker in the local language.


R1



R2





R3...R4




UL
NEC

3. Remove the rubber grommets, if present, for the motor and input power cabling, as well as brake resistor cabling, if used. Remove the grommets for the control cabling when you are connecting them.
4. Attach the cable conduits to the cable entry holes in place of the removed grommets.



Motor cabling

5. Strip the ends of the conductors.




6. Slide the conductors through the conduit.


7. Connect the conductors:

- Connect the grounding conductor to the grounding terminal. (7a)
- Connect the phase conductors to the T1/U, T2/V and T3/W terminals. Tighten the screws to the torque given in the table (7b).


R1...R2



R3



R4




Frame size	R1		R2	
	N-m	lbf-ft	N-m	lbf-ft
T1/U, T2/V, T3/W	1.0	0.7	1.5	1.1
PE, (⊕)	1.5	1.1	1.5	1.1

Frame size	R3		R4	
	N-m	lbf-ft	N-m	lbf-ft
T1/U, T2/V, T3/W	3.5	2.6	4.0	3.0
PE, (⊕)	1.5	1.1	2.9	2.1


Input power cabling

8. Strip the ends of the conductors as for the motor cabling.
9. Slide the conductors through the conduit.
10. Connect the conductors:
 - Connect the grounding conductor to the grounding terminal. (10a)
 - Connect the phase conductors to the L1, L2 and L3 terminals. Tighten the screws to the torque given in the table. (10b).


R1...R2



R3



R4




Frame size	R1		R2	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	1.0	0.7	1.5	1.1
PE, Ⓧ	1.5	1.1	1.5	1.1

Frame size	R3		R4	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	3.5	2.6	4.0	3.0
PE, Ⓧ	1.5	1.1	2.9	2.1

Brake resistor cabling (if used)


Frames R1...R3 only

11. Repeat steps 5...6 for the brake resistor conductors. Use only two phase conductors and the ground conductor.




12. Connect the grounding conductor to the grounding terminal (12a) and the other conductors to the R+ and R- terminals (12b). Tighten the screws to the torque given in the table.

R1...R2



R3...R4



Frame size	R1		R2		R3	
	N·m	lbf·ft	N·m	lbf·ft	N·m	lbf·ft
R+, R-	1.0	0.7	1.5	1.1	3.5	2.6
PE, ⚡	1.5	1.1	1.5	1.1	1.5	1.1



Finalization

Note: Frame R1: You have to install any optional I/O extension module, if used, in options slot 2 at this point. See section [Installing option modules](#) on page 211.

13. Secure the conduits outside the unit mechanically.

■ Connection procedure, frame R5


IP21 (UL Type 1)

1. Remove the module cover: Loosen the retaining screws with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).
Remove the box cover: Loosen the retaining screws with a screwdriver (1d) and slide the cover downwards (1e).


IP55 (UL Type 12)

1. Remove the front cover: Loosen the retaining screws with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).


IP21 (UL Type 1)



IP21 (UL Type 1)




IP55 (UL Type 12)




⚠ WARNING! If you install the drive on any other system than symmetrically grounded TN-S system, see section [Examining the compatibility with IT \(ungrounded\), corner-grounded delta, midpoint-grounded delta and TT systems](#) on page 168 if you have to disconnect the EMC filter and ground-to-phase varistor.

2. Attach the residual voltage warning sticker in the local language next to the control unit.
3. Remove the shroud on the power cable terminals by releasing the clips with a screwdriver (3a) and pulling the shroud out (3b).




4. Remove the rubber grommets, if present, for the motor and input power cabling. Remove the grommets for the control cabling when you are connecting them.
5. Attach the cable conduits for the motor and input cabling to the cable entry holes.



Motor cabling


6. Strip the ends of the conductors.



7. Slide the conductors through the conduit.

8. Connect the conductors:



- Connect the grounding conductor to the grounding terminal (8a).
- Connect the phase conductors to the T1/U, T2/V and T3/W terminals (8b). Tighten the screws to the torque given in the table.



Frame size	T1/U, T2/V, T3/W		PE, ⊕		
	N·m	lbf·ft	M	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1.6


Input power cabling

9. Repeat steps 6...7 for the conductors.
10. Connect the conductors as for the motor cabling. Use terminals L1, L2 and L3. Tighten the screws to the torque given in the table.
11. Install the cable box plate. Position the plate (11a) and tighten the screw (11b).



Frame size	L1, L2, L3		PE, ⚡		
	N·m	lbf·ft	M	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1.6

12. Reinstall the shroud on the power terminals by putting the tabs at the top of the shroud in their counterparts on the drive frame (12a) and then pressing the shroud in place (12b).




Finalization

13. Secure the conduits outside the unit mechanically.

■ Connection procedure, frames R6...R9


⚠ WARNING! If you install the drive on any other system than symmetrically grounded TN-S system, see section *Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems* on page 168 if you have to disconnect the EMC filter and ground-to-phase varistor.

1. Attach the residual voltage warning sticker in the local language next to the control unit.
2. Remove the side plates of the cable box: Remove the retaining screws (2a) and slide the walls out (2b).




3. Remove the shroud on the power cable terminals by releasing the clips with a screwdriver (3a) and pulling the shroud out (3b).
4. Knock out holes in the shroud for the cabling to be installed.
5. Frames R8...R9: If you install parallel cabling, also knock out holes in the lower shroud.


R6...R9



R6...R9




R8...R9




6. Remove the rubber grommets, if present, for the motor and input power cabling. Remove the grommets for the control cabling when you are connecting them.

7. Attach the cable conduits for the motor and input cabling to the cable entry holes.



Motor cabling


8. Strip the ends of the conductors.



9. Slide the conductors through the conduit.

10. Connect the conductors:

- Connect the grounding conductor to the grounding terminal (10a).
- Connect the phase conductors to terminals T1/U, T2/V and T3/W. Tighten the screws to the torque given in the table (10b).



Frame size	L1, L2, L3, T1/U, T2/V, T3/W		PE, ⊕	
	N·m	lbf·ft	N·m	lbf·ft
R6	30	22	9.8	7.2
R7	40	30	9.8	7.2
R8	40	30	9.8	7.2
R9	70	52	9.8	7.2




Note 1 for frames R8...R9: If you connect only one conductor to the connector, ABB recommends that you put it under the upper pressure plate. If you use parallel power cabling, put the first conductor under the lower pressure plate and the second under the upper one.

Note 2 for frames R8...R9: The connectors are detachable but ABB does not recommend that you detach them. If you do, detach and reinstall the connectors as described in section [Detaching and reinstalling the connectors](#) on page 191.

Input power cabling

11. Repeat steps 8...10 for the conductors. Use terminals L1, L2 and L3.



Frame size	L1, L2, L3, T1/U, T2/V, T3/W		PE, Ⓧ	
	N·m	lbf·ft	N·m	lbf·ft
R6	30	22	9.8	7.2
R7	40	30	9.8	7.2
R8	40	30	9.8	7.2
R9	70	52	9.8	7.2

Detaching and reinstalling the connectors

This is possible but not recommended.

Terminals T1/U, T2/V and T3/W

- Remove the nut that attaches the connector to its busbar.
- Put the conductor under the connector pressure plate and pre-tighten the conductor.
- Put the connector back to its busbar. Start the nut, and turn it at least two rotations by hand.



WARNING! Before using tools, make sure that the nut/screw is not cross-threading. Cross-threading will damage the drive and cause danger.

- Tighten the nut to a torque of 30 N·m (22 lbf·ft).
- Tighten the conductor(s) to 40 N·m (30 lbf·ft) for frame R8 or to 70 N·m (52 lbf·ft) for frame R9.

Terminals L1, L2 and L3


- Remove the combi screw that attaches the connector to its terminal post, and pull the connector off.
- Put the conductor under the connector pressure plate and pre-tighten the conductor.
- Put the connector back onto the terminal post. Start the combi screw, and turn it at least two rotations by hand.

⚠ WARNING! Before using tools, make sure that the nut/screw is not cross-threading. Cross-threading will damage the drive and cause danger.


- Tighten the combi screw to a torque of 30 N·m (22 lbf-ft).
- Tighten the conductor(s) to 40 N·m (30 lbf-ft) for frame R8 or to 70 N·m (52 lbf-ft) for frame R9.

12. Frames R8...R9: Connect the parallel motor (11a) and input power (11b) cabling conductors, if used. Repeat steps 8...11.


R8...R9



R8...R9



13. Reinstall the shroud on the power terminals.



14. Secure the conduits outside the unit mechanically.

DC connection

The UDC+ and UDC- terminals (as standard in frames R4...R9) are for using external brake chopper units.



Connecting the control cables


See section [Default I/O connection diagram \(ABB standard macro\)](#) on page 195 for the default I/O connections of the ABB standard macro. For other macros, see [ACS580 firmware manual\(3AXD50000016097 \[English\]\)](#).

Connect the cables as described under [Control cable connection procedure R1...R9](#) on page 205.



■ Default I/O connection diagram (ABB standard macro)

R1...R5



Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).
 Digital inputs DI1...DI5 also support 10...24 V AC.

Wire sizes:


0.2...2.5 mm² (24...14 AWG): Terminals +24V, DGND, DCOM, B+, A-, DGND, Ext. 24V

0.14...1.5 mm² (26...16 AWG): Terminals DI, AI, AO, AGND, RO, STO

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)



R6...R9



See the notes on page 197.

Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).

Digital inputs DI1...DI5 also support 10...24 V AC.

Wire sizes: 0.14...2.5 mm² (26...16 AWG); All terminals

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)

Notes:

- 1) Current [0(4)...20 mA, $R_{in} = 100 \text{ ohm}$] or voltage [0(2)...10 V, $R_{in} > 200 \text{ kohm}$]. Change of setting requires changing the corresponding parameter.
- 2) Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V) minus the power taken by the option modules installed on the board.
- 3) AI1 is used as a speed reference if vector control is selected.
- 4) In scalar control (default): See **Menu > Primary settings > Start, stop, reference > Constant speeds / constant frequencies** or parameter group 28 Frequency reference chain.
In vector control: See **Menu > Primary setting > Start, stop, reference > Constant speeds / constant frequencies** or parameter group 22 Speed reference selection.

DI3	DI4	Operation/Parameter	
		Scalar control (default)	Vector control
0	0	Set frequency through AI1	Set speed through AI1
1	0	28.26 Constant frequency 1	22.26 Constant speed 1
0	1	28.27 Constant frequency 2	22.27 Constant speed 2
1	1	28.28 Constant frequency 3	22.28 Constant speed 3

- 5) In scalar control (default): See **Menu - Primary settings - Ramps** or parameter group 28 Frequency reference chain.
In vector control: See **Menu - Primary settings - Ramps** or parameter group 23 Speed reference ramp.





DI5	Ramp set	Parameters	
		Scalar control (default)	Vector control
0	1	28.72 Freq acceleration time 1	23.12 Acceleration time 1
		28.73 Freq deceleration time 1	23.13 Deceleration time 1
1	2	28.74 Freq acceleration time 2	23.14 Acceleration time 2
		28.75 Freq deceleration time 2	23.15 Deceleration time 2

- 6) Connected with jumpers at the factory.
- 7) Use shielded twisted-pair cables for digital signals.
- 8) Ground the outer shield of the cable 360 degrees under the grounding clamp on the grounding shelf for the control cables.

Further information on the usage of the connectors and switches is given in the sections below. See also section [Control connection data](#) on page 305.




Switches

Switch	Description	Position	
S4 (TERM)	Modbus link termination. Must be set to the terminated (ON) position when the drive is the first or last unit on the link.	ON  TERM	Bus not terminated (default)
		ON  TERM	Bus terminated
S5 (BIAS)	Activates on the biasing voltages to the bus. One (and only one) device, preferably at the end of the bus must have the bias on.	ON  BIAS	Bias off (default)
		ON  BIAS	Bias on



PNP configuration for digital inputs


Internal and external +24 V power supply connections for PNP configuration are shown in the figure below.



WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

NPN configuration for digital inputs

Internal and external +24 V power supply connections for NPN configuration are shown in the figure below.




WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

Connection for obtaining 0...10 V from analog output 2 (AO2)

To obtain 0...10 V from analog output AO2, connect a 500 ohm resistor (or two 1 kohm resistors in parallel) between the analog output 2 AO2 and analog common ground AGND.

Examples are shown in the figure below.




Connection examples of two-wire and three-wire sensors

Hand/Auto, Hand/PID, and PID macros (see *ACS580 firmware manual* (3AXD50000016097 [English])) use analog input 2 (AI2). The macro wiring diagrams on these pages use an externally powered sensor (connections not shown). The figures below give examples of connections using a two-wire or three-wire sensor/transmitter supplied by the drive auxiliary voltage output.


Note: Maximum capability of the auxiliary 24 V DC (250 mA) output must not be exceeded.

Two-wire sensor/transmitter



Three-wire sensor/transmitter

Note: The sensor is supplied through its current output and the drive feeds the supply voltage (+24 V DC). Thus the output signal must be 4...20 mA, not 0...20 mA.




DI5 as frequency input

For setting the parameters for the digital frequency input, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]).

DI6 as PTC input


If DI6 is used as a PTC input, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]) for how to set parameters accordingly.

Note: If DI6 is used as PTC input, the wiring and the PTC sensor need to be double isolated. Otherwise the CMOD-02 I/O extension module must be used.



AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1)

One, two or three Pt100 sensors; one, two or three Pt1000 sensors; or one Ni1000, KTY83 or KTY84 sensor for motor temperature measurement can be connected between an analog input and output as shown below. Do not connect both ends of the cable shields directly to ground. If a capacitor cannot be used at one end, leave that end of the shield unconnected.



WARNING! As the inputs pictured above are not insulated according to IEC 60664, the connection of the motor temperature sensor requires double or reinforced insulation between motor live parts and the sensor. If the assembly does not fulfill the requirement, the I/O board terminals must be protected against contact and must not be connected to other equipment or the temperature sensor must be isolated from the I/O terminals.

Safe torque off (X4)



For the drive to start, both connections (+24 V DC to IN1 and +24 V DC to IN2) must be closed. By default, the terminal block has jumpers to close the circuit. Remove the jumpers before connecting an external Safe torque off circuitry to the drive. See chapter [Safe torque off function](#) on page 363.

Note: Only 24 V DC can be used for STO. Only PNP input configuration can be used.

■ Control cable connection procedure R1...R9



WARNING! Obey the instructions in chapter *Safety instructions* on page 15. If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section *Electrical safety precautions* on page 19 before you start the work.
2. Remove the front cover(s) if not already removed. See page 178 (R1...R4), page 183 (R5) or page 79 (R6...R9).

Analog signals

The figures for frames R1...R2 and R3 (page 207), R4 (page 208), R5 (page 209) and R6...R9 (page 210) show an example of connecting a cable. Make the connections according to the macro in use.

3. Remove the rubber grommets from the cable entry for the cables to be connected. Attach cable conduits to the empty cable entry holes. Slide the cables through the cable conduits.
4. Frames R5...R9: Secure the cables mechanically at the clamps below the control unit.
Ground the pair-cable shields and grounding wire at the SCR terminal, or either, you may ground the shield at the source of the signal, but do not ground it at both the source of the signal and the SCR terminal.
5. Route the cable as shown in the figures on pages 207 (R1...R2 and R3), 208 (R4), 209 (R5) or 210 (R6...R9).
6. Connect the conductors to the appropriate terminals of the control unit and tighten to 0.5...0.6 N·m (0.4 lbf·ft).

Digital signals

The figures for frames R1...R2 and R3 (page 207), R4 (page 208), R5 (page 209) and R6...R9 (page 210) show an example of connecting a cable. Make the connections according to the macro in use.

7. Remove the rubber grommets from the cable entry for the cables to be connected. Attach cable conduits to the empty cable entry holes. Slide the cables through the cable conduits.
8. Frames R5...R9: Secure the cables mechanically at the clamps below the control unit.
If you use double-shielded cables, ground the pair-cable shields and grounding wire at the SCR terminal.
9. Route the cable as shown in the figures on pages 207 (R1...R2 and R3), 208 (R4), 209 (R5) or 210 (R6...R9).




10. Connect the conductors to the appropriate terminals of the control unit and tighten to 0.5...0.6 N·m (0.4 lbf·ft).
11. Tie all control cables to the provided cable tie mounts.

Note:


- Leave the other ends of the control cable shields unconnected or ground them indirectly via a high-frequency capacitor with a few nanofarads, eg, 3.3 nF / 630 V. The shield can also be grounded directly at both ends if they are *in the same ground line* with no significant voltage drop between the end points.
- Keep any signal wire pairs twisted as close to the terminals as possible. Twisting the wire with its return wire reduces disturbances caused by inductive coupling.

R1...R2



R1...R2: 0.4 lbf-ft


R3




R3: 0.4 lbf-ft




R4



R5



R6...R9



Installing option modules

Note: In North American deliveries, options may also be ordered as factory installed.

Note: If you will install the FPBA-01 module, see section [FPBA-01 PROFIBUS DP adapter module connectors](#) on page 100 for suitable connector types.

■ Mechanical installation of option modules

See section [Overview of power and control connections](#) page 43 for the available slots for each module. Install the option modules as follows:



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur.

Note: Slot 2 in frames R1...R5 is at U_{DC} potential. You must disconnect power supplies before installing or removing an I/O extension module.

Stop the drive and do the steps in section [Electrical safety precautions](#) on page 19 before you start the work.

1. Remove the front cover(s) if not already removed. See page 178 (R1...R4), page 183 (R5) or page 79 (R6...R9).

The figures for frames R1...R5 (page 212) and R6...R9 (page 213) show an example of installing option modules.

Option slot 2 (I/O extension modules)

2. Frame R1 only: Install the option mounting.
3. Put the module carefully into its position on the control unit.
4. Tighten the mounting screw.
5. Tighten the grounding screw (CHASSIS). **Note:** The screw grounds the module. It is necessary for fulfilling the EMC requirements and for proper operation of the module.


Note: Frame R1: The module in option slot 2 covers the power terminals. Do not install a module in option slot 2 before you have installed the power cables.

Option slot 1 (fieldbus adapter modules)


6. Put the module carefully into its position on the control unit.
 7. Tighten the mounting screw (CHASSIS). **Note:** The screw tightens the connections and grounds the module. It is necessary for fulfilling the EMC requirements and for proper operation of the module.
-




R1...R2



R3...R5



R6...R9




■ Wiring the modules

For the optional I/O extension modules CHDI-01, CMOD-01 and CMOD-02 and adapter module CBAI-01, see chapter [Optional I/O extension and adapter modules](#) on page 383 for specific installation and wiring instructions. For other option module, for example, CPTC-02, see the appropriate option module.

■ Reinstalling grommets

UL Type 12: To maintain UL Type 12, reinstall grommets (top of the grommets downwards) to all cable entry holes without conduits.




Reinstalling covers


■ Reinstalling cover, frames R1...R4

1. Reinstall the cover: Put the tabs on the cover top in their counterparts on the housing (1a) and then press the cover (1b).
2. Tighten the retaining screw at the bottom with a T20 Torx screwdriver.


IP21 (UL Type 1) R1...R2




IP21 (UL Type 1) R3...R4



IP55 (UL Type 12) R1...R3



IP55 (UL Type 12) R4



■ Reinstalling covers, frame R5


IP21 (UL Type 1)

1. Reinstall the box cover: Slide the cover upwards (1a) and tighten the retaining screws (1b) with a T20 Torx screwdriver.
2. Reinstall the module cover: Press the cover at the bottom (2a) and tighten the retaining screws (2b).


IP55 (UL Type 12)

1. Reinstall the front cover: Press the cover at the bottom (1a) and tighten the retaining screws (1b) with a T20 Torx screwdriver.


IP21 (UL Type 1)



IP21 (UL Type 1)



IP55 (UL Type 12)



■ Reinstalling side plates and covers, frames R6...R9


IP21 (UL Type 1)

1. Reinstall the side plates of the cable box (1a). Tighten the retaining screws with a screwdriver with a T20 Torx screwdriver (1b).
2. Slide the cover of the cable box on the module from below until the cover snaps into place.
3. Reinstall the module cover. Tighten the two retaining screws with a screwdriver.


IP55 (UL Type 12)

1. Reinstall the side plates of the cable box. Tighten the retaining screws with a screwdriver with a T20 Torx screwdriver.


IP21 (UL Type 1)




IP21 (UL Type 1)



IP21 (UL Type 1)



IP55 (UL Type 12)



Installing UL Type 12 hood

See *UL Type 12 hood quick installation guide for ACS580-01, ACH580-01 and ACQ580-01 frames R1 to R9* (3AXD50000196067 [English]) which is included in the hood package.




Connecting a PC

To be able to connect a PC to the drive, you need an assistant control panel (ACS-AP-I, ACS-AP-S or ACS-AP-W). It is also possible to use the CCA-01 configuration adapter when the drive is not connected to the power supply network or external 24 V supply; the CCA-01 does not work if the drive is powered.

Connect a PC to the drive with a USB data cable (USB Type A <-> USB Type Mini-B) as follows:

1. Lift the USB connector cover from bottom upwards.
2. Put the USB cable Mini-B plug in the control panel USB connector.
3. Put the USB cable A-plug in the USB connector of the PC (3a). The panel displays text “USB connected” (3b).

Note: Panel keys cannot be used when a USB data cable is connected to the panel.



For information on using the Drive composer PC tool, see *Drive composer PC tool user's manual* (3AUA0000094606 [English]).

You can connect a remote ACS-AP-I, ACS-AP-S or ACS-AP-W control panel to the drive, or to chain the control panel or a PC to several drives on a panel bus with a CDPI-01 communication adapter module. See *CDPI-01 communication adapter module user's manual* (3AXD5000009929 [English]).



8

Installation checklist

Contents of this chapter

This chapter contains an installation checklist which you must complete before you start up the drive.

Warnings



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur.

Checklist

Do the steps in section [Electrical safety precautions](#) on page 19 before you start the work. Go through the checklist together with another person.

<input checked="" type="checkbox"/>	Make sure that ...
<input type="checkbox"/>	The ambient operating conditions meet the specification in section Ambient conditions on page 312.
<input type="checkbox"/>	<p><u>If the drive will be connected to another system than symmetrically grounded TN-S system:</u> Examine if you must disconnect the EMC filter or ground-to-phase varistor. See section</p> <ul style="list-style-type: none"> • <u>IEC:</u> Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems on page 116, or • <u>North America:</u> Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems on page 168.

<input checked="" type="checkbox"/>	Make sure that ...
<input type="checkbox"/>	If the drive has not been powered (either in storage or unused) over one year: The electrolytic DC capacitors in the DC link of the drive have been reformed. See section Reforming the capacitors on page 236.
<input type="checkbox"/>	There is an adequately sized protective earth (ground) conductor between the drive and the switchboard.
<input type="checkbox"/>	There is an adequately sized protective earth (ground) conductor between the motor and the drive.
<input type="checkbox"/>	All protective earth (ground) conductors have been connected to the appropriate terminals and the terminals have been tightened (pull conductors to check).
<input type="checkbox"/>	The supply voltage matches the nominal input voltage of the drive. See the type designation label.
<input type="checkbox"/>	The input power cable has been connected to appropriate terminals, the phase order is correct, and the terminals have been properly tightened. (Pull conductors to check.)
<input type="checkbox"/>	Appropriate supply fuses and disconnectors have been installed.
<input type="checkbox"/>	The motor cable has been connected to appropriate terminals, the phase order is right, and the terminals have been tightened. (Pull conductors to check.)
<input type="checkbox"/>	The brake resistor cable (if present) has been connected to appropriate terminals, and the terminals have been tightened. (Pull conductors to check.)
<input type="checkbox"/>	The motor cable (and brake resistor cable, if present) has been routed away from other cables.
<input type="checkbox"/>	The control cables (if any) have been connected to the control unit.
<input type="checkbox"/>	If a drive bypass connection will be used: The direct-on-line contactor of the motor and the drive output contactor are either mechanically or electrically interlocked (cannot be closed simultaneously).
<input type="checkbox"/>	There are no tools, foreign objects or dust from drilling inside the drive.
<input type="checkbox"/>	Drive and motor connection box covers are in place.
<input type="checkbox"/>	The motor and the driven equipment are ready for start-up.



Maintenance and hardware diagnostics

Contents of this chapter

This chapter contains preventive maintenance instructions and LED indicator descriptions.

Maintenance intervals

The table below shows the maintenance tasks which can be done by the end user. The complete maintenance schedule is available on the Internet (www.abb.com/driveservices). For more information, consult your local ABB Service representative (www.abb.com/searchchannels).

Maintenance and component replacement intervals are based on the assumption that the equipment is operated within the specified ratings and ambient conditions. ABB recommends annual drive inspections to ensure the highest reliability and optimum performance.

Note: Long term operation near the specified maximum ratings or ambient conditions may require shorter maintenance intervals for certain components. Consult your local ABB Service representative for additional maintenance recommendations.

■ Description of symbols

Action	Description
I	Inspection (visual inspection and maintenance action if needed)
P	Performance of on/off-site work (commissioning, tests, measurements or other work)
R	Replacement

■ Recommended annual actions by the user

Action	Description
P	Quality of supply voltage
I	Spare parts
P	DC circuit capacitors reforming for spare modules and spare capacitors (page 236)
I	Tightness of terminals
I	Dustiness, corrosion or temperature
P	Heat sink cleaning (page 225)

■ Recommended maintenance actions by the user

Component	Years from start-up						
	3	6	9	12	15	18	21
Cooling							
Fans, IP21 (UL Type 1) frames R1 to R9							
Main cooling fan R1...R4: page 227, R5: page 229		R		R		R	
Main cooling fan LONGLIFE R6...R8: page 229, R9: page 230			R			R	
Auxiliary cooling fan (LONGLIFE) for circuit boards, R5...R9 only: page 231			R			R	
Fans, IP55 (UL Type 12) frames R1 to R9							
Main cooling fan R1...R4: page 227, R5: page 229		R		R		R	
Main cooling fan LONGLIFE R6...R8: page 229, R9: page 230			R			R	
Auxiliary cooling fan for circuit boards R1...R2: page 232	R	R	R	R	R	R	R
Auxiliary cooling fan (LONGLIFE) for circuit boards R3: page 233, R4: page 234, R5...R9: page 231			R			R	
Second auxiliary cooling fan (LONGLIFE) R8 and R9: page 235			R			R	
Aging							
Control panel battery: page 237			R			R	
Functional safety							
Safety function test	I See the maintenance information of the safety function						
Safety component expiry (Mission time, T_M)	20 years						

Heatsink

The drive heatsink fins pick up dust from the cooling air. The drive can run into overtemperature warnings and faults if the heatsink is not clean. When necessary, clean the heatsink as follows.



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.



WARNING! Use a vacuum cleaner with antistatic hose and nozzle. Using a normal vacuum cleaner creates static discharges which can damage circuit boards.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Electrical safety precautions](#) on page 19 before you start the work.
 2. Remove the cooling fan(s). See section [Fans](#) on page 226.
 3. Blow clean, dry and oil free compressed air from bottom to top and simultaneously use a vacuum cleaner at the air outlet to trap the dust.
Note: If there is a risk of dust entering adjoining equipment, do the cleaning in another room.
 4. Reinstall the cooling fan(s).
-

Fans

See section [Maintenance intervals](#) on page [223](#) for the fan replacement interval in average operation conditions.

Parameter 05.04 Fan on-time counter indicates the running time of the cooling fan. Reset the counter after a fan replacement. See the firmware manual.

In a speed-controlled fan, the speed of the fan matches the cooling needs. This increases the life span of the fan.

Main fans are speed controlled. When the drive is stopped, the main fan runs at low speed until the drive cools down. IP21 (UL Type 1) frames R5...R9 and all IP55 (UL Type 12) frames have auxiliary fans that are not speed controlled and run all the time when the control unit is powered.

Replacement fans are available from the manufacturer. Do not use other than specified spare parts.

■ Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R1...R4



WARNING! Obey the instructions in chapter *Safety instructions* on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section *Electrical safety precautions* on page 19 before you start the work.

R1...R3




2. Lever the fan assembly off the drive frame with for example a screwdriver (2a) and pull out the fan assembly (2b) until you can unplug the fan power supply wires from the fan assembly (2c).

3. Install the fan assembly in reverse order.




R1...R2: Put the connector and extra length of wires in the groove so that the wires do not get caught in the revolving fan.

R3: Put the extra length of wires under the fan assembly so that the wires do not get caught in the revolving fan.

R1...R2





R3



R4

2. Lever the fan assembly off the drive frame with for example a screwdriver (2a) and pull out the fan assembly (2b).
3. Install the fan assembly in reverse order.

R4





■ Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R8



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Electrical safety precautions](#) on page 19 before you start the work.
2. Remove the two mounting screws of the fan mounting plate at the bottom of the drive.
3. Pull the fan mounting plate down from the side edge.
4. Unplug the fan power supply wires from the drive.
5. Lift the fan mounting plate off.
6. Remove the fan from the mounting plate.
7. Install the new fan in reverse order.






■ Replacing the main cooling fans, IP21 and IP55 (UL Type 1 and UL Type 12) frame R9



WARNING! Obey the instructions in chapter *Safety instructions* on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section *Electrical safety precautions* on page 19 before you start the work.
2. Remove the two mounting screws of the fan mounting plate.
3. Turn the mounting plate downwards.
4. Unplug the fan power supply wires from the drive.
5. Remove the fan mounting plate.
6. Remove the fans by removing the two mounting screws.
7. Install the new fans in reverse order.





■ Replacing the auxiliary cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R9



WARNING! Obey the instructions in chapter *Safety instructions* on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.




1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section *Electrical safety precautions* on page 19 before you start the work.
 2. Remove the front cover (see page 79).
 3. Unplug fan power supply wires from the drive.
 4. Release the retaining clips.
 5. Lift the fan off.
 6. Install the new fan in reverse order.
- Note:** Make sure that the arrow on the fan points up.




■ Replacing the auxiliary cooling fan, IP55 (UL Type 12) frames R1...R2

⚠ WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Electrical safety precautions](#) on page 19 before you start the work.
 2. Remove the control panel: Press the retaining clip of the IP55 panel cover (2a) and open the cover (2b). Press the retaining clip of the control panel at the top (2c) and pull it forward from the top edge (2d).
 3. Remove the front cover: Loosen the retaining screws with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).
 4. Unplug the fan power supply wires from the drive.
 5. Remove the fingerguard: Insert a screwdriver into the hole of the fingerguard (5a), bend the front edge of the fingerguard a little away from the drive frame with the screwdriver (5b) and pull the fingerguard out of the groove (5c).
 6. Pull off the fan.
 7. Install the new fan assembly in reverse order. Route the wires round the pins.
- Note:** Make sure that the arrow on the fan points to the same direction as the arrow on the drive frame.






■ Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R3

 **WARNING!** Obey the instructions in chapter *Safety instructions* on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section *Electrical safety precautions* on page 19 before you start the work.
2. Remove the control panel: Press the retaining clip of the IP55 panel cover (2a) and open the cover (2b). Press the retaining clip of the control panel at the top (2c) and pull it forward from the top edge (2d).
3. Remove the front cover: Loosen the retaining screw with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).
4. Unplug the fan power supply wires from the drive.
5. Detach the fan cable from the holders.
6. Pull off the plastic housing.
7. Pull off the fan.
8. Install the new fan and housing in reverse order.

Note: Make sure that the arrow on the fan points to the same direction as the arrow on the plastic housing (down).






■ Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R4



WARNING! Obey the instructions in chapter *Safety instructions* on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section *Electrical safety precautions* on page 19 before you start the work.
2. Remove the control panel: Press the retaining clip of the IP55 panel cover (2a) and open the cover (2b). Press the retaining clip of the control panel at the top (2c) and pull it forward from the top edge (2d).
3. Remove the front cover: Loosen the retaining screws (6 pieces) with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).
4. Unplug the fan power supply wires from the drive.
5. Detach the fan cable from the clips.
6. Pull the fan off.
7. Install the new fan in reverse order.

Note: Make sure that the arrow on the fan points down.






■ Replacing the second auxiliary cooling fan, IP55 (UL Type 12) frames R8...R9



WARNING! Obey the instructions in chapter *Safety instructions* on page 15. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section *Electrical safety precautions* on page 19 before you start the work.
2. Remove the front cover: Loosen the retaining screws (14 pieces) with a screwdriver (2a) and lift the cover from the bottom outwards (2b) and then up (2c).
3. Remove the lower cover panel from the cover.
4. Unplug the fan power supply wires from the connector on the other side of the IP55 (UL Type 12) front cover.
5. Remove the retaining screws (5a) and pull off the fan (5b).
6. Install the new fan in reverse order.
Note: Make sure that the arrow on the fan points up.



Capacitors

The drive intermediate DC circuit employs several electrolytic capacitors. Their lifespan depends on the operating time of the drive, loading and ambient temperature. Capacitor life can be prolonged by lowering the ambient temperature.

Capacitor failure is usually followed by damage to the drive and an input cable fuse failure, or a fault trip. Contact the manufacturer if capacitor failure is suspected. Replacements are available from the manufacturer. Do not use other than specified spare parts.

■ Reforming the capacitors

The capacitors must be reformed if the drive has not been powered (either in storage or unused) for a year or more. See section *Type designation label* on page 47 for how to find out the manufacturing date from the serial number.

For information on reforming the capacitors, see *Converter module capacitor reforming instructions* (3BFE64059629 [English]), available on the Internet (go to <http://www.abb.com> and enter the document code in the Search field).

Control panel

■ Cleaning the control panel

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.


■ Replacing the battery in the control panel

A battery is used in all control panels, except the basic control panel that does not support the clock function, to keep the clock operating in memory during power interruptions.

The expected life for the battery is greater than ten years.

Note: The battery is NOT required for any control panel or drive functions, except the clock.

1. Remove the control panel from the drive. See section [Control panel](#) on page 46.
2. To remove the battery, use a coin to rotate the battery cover on the back of the control panel.
3. Replace the battery with type CR2032. Dispose the old battery according to local disposal rules or applicable laws.



LEDs

■ Drive LEDs

There is a green POWER and a red FAULT LED on the front of the drive. They are visible through the panel cover but invisible if a control panel is attached to the drive. The table below describes the drive LED indications.

Drive LEDs POWER and FAULT, on the front of the drive, under the control panel / panel cover				
If a control panel is attached to the drive, switch to remote control (otherwise a fault will be generated), and then remove the panel to be able to see the LEDs				
LEDs off	LED lit and steady		LED blinking	
No power	Green (POWER)	Power supply on the board OK	Green (POWER)	<u>Blinking:</u> Drive in an alarm state <u>Blinking for one second:</u> Drive selected on the control panel when multiple drives are connected to the same panel bus.
	Red (FAULT)	Active fault in the drive. To reset the fault, press RESET from the control panel or switch off the drive power.	Red (FAULT)	Active fault in the drive. To reset the fault, switch off the drive power.

■ Control panel LEDs

The assistant control panel has one LED. The table below describes the control panel LED indications. For more information see *ACx-AP-x assistant control panels user's manual* (3AUA0000085685 [English]).

Control panel LED, at the left edge of the control panel			
LED off	LED lit and steady		LED blinking/flickering
Panel has no power	Green	Drive functioning normally. Connection between the drive and control panel may be faulty or lost, or the panel and drive may be incompatible. Check the control panel display.	Green <u>Blinking:</u> Active warning in the drive <u>Flickering:</u> Data transferred between the PC tool and drive through the USB connection of the control panel
	Red	Check the display to see where the fault is. <ul style="list-style-type: none"> • Active fault in the drive. Reset the fault. • Active fault in another drive in the panel bus. Switch to the drive in question and check and reset the fault. 	Red Active fault in the drive. To reset the fault, cycle the drive power.
			Blue Panels with a Bluetooth interface only. <u>Blinking:</u> Bluetooth interface is enabled. It is in discoverable mode and ready for pairing. <u>Flickering:</u> Data is transferred through the Bluetooth interface of the control panel.

Functional safety components


The mission time of functional safety components is 20 years which equals the time during which failure rates of electronic components remain constant. This applies to the components of the standard Safe torque off circuit as well as any modules, relays and, typically, any other components that are part of functional safety circuits.

The expiry of mission time terminates the certification and SIL/PL classification of the safety function. The following options exist:

- Renewal of the whole drive and all optional functional safety module(s) and components.
- Renewal of the components in the safety function circuit. In practice, this is economical only with larger drives that have replaceable circuit boards and other components such as relays.

Note that some of the components may already have been renewed earlier, restarting their mission time. The remaining mission time of the whole circuit is however determined by its oldest component.

Contact your local ABB service representative for more information.



Technical data

Contents of this chapter

This chapter contains the technical specifications of the drive, for example ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE, UL and other approval marks.

Electrical ratings

IEC ratings at $U_n = 230\text{ V}$

Type ACS580 -01-	Input rating	Output ratings							Frame size
		Max. current	Nominal use		Light-duty use		Heavy-duty use		
		I_1	I_{\max}	I_2	P_n	I_{Ld}	P_{Ld}	I_{Hd}	
	A	A	A	kW	A	kW	A	kW	
3-phase $U_n = 230\text{ V}$									
04A7-2	4.7	6.3	4.7	0.75	4.6	0.75	3.5	0.55	R1
06A7-2	6.7	8.9	6.7	1.1	6.6	1.1	4.6	0.75	R1
07A6-2	7.6	11.9	7.6	1.5	7.5	1.5	6.6	1.1	R1
012A-2	12.0	19.1	12.0	3.0	11.8	3.0	7.5	2.2	R1
018A-2	16.9	22.0	16.9	4.0	16.7	4.0	10.6	3.0	R1
025A-2	24.5	32.7	24.5	5.5	24.2	5.5	16.7	4.0	R2
032A-2	31.2	43.6	31.2	7.5	30.8	7.5	24.2	5.5	R2
047A-2	46.7	62.4	46.7	11	46.2	11	30.8	7.5	R3
060A-2	60	83.2	60	15	59.4	15	46.2	11	R3
089A-2	89	135	89	22	88	22	74.8	18.5	R5
115A-2	115	158	115	30	114	30	88.0	22.0	R5
144A-2	144	205	144	37	143	37	114	30	R6
171A-2	171	257	171	45	169	45	143	37	R7
213A-2	213	304	213	55	211	55	169	45	R7
276A-2	276	380	276	75	273	75	211	55	R8

Type ACS580-01-	Input ratings		Output ratings		Frame size
	I_1	I_2	P_n		
	A	A ¹⁾	kW		
1-phase $U_n = 230\text{ V}$					
04A7-2	3.3	2.2	0.37		R1
06A7-2	4.6	3.2	0.55		R1
07A6-2	6.3	4.2	0.75		R1
012A-2	8.9	6.0	1.1		R1
018A-2	11.8	6.8	1.5		R1
025A-2	17.3	9.6	2.2		R2
032A-2	30.4	15.2	4.0		R2
047A-2	42	22.0	5.5		R3
060A-2	55	28.0	7.5		R3
089A-2	81	42	11.0		R5
115A-2	111	54	15.0		R5
144A-2	137	68	18.5		R6
171A-2	153	80	22.0		R7
213A-2	209	104	30.0		R7
276A-2	258	130	37.0		R8

¹⁾ Continuous current, no overloadability

See definitions and notes on page [245](#).



■ IEC ratings at $U_n = 400$ V

Type ACS580 -01-	Input rating	Output ratings							Frame size
		Max. current	Nominal use		Light-duty use		Heavy-duty use		
		I_1	I_{\max}	I_2	P_n	I_{Ld}	P_{Ld}	I_{Hd}	
	A	A	A	kW	A	kW	A	kW	
3-phase $U_n = 400$ V									
02A7-4	2.6	3.2	2.6	0.75	2.5	0.75	1.8	0.6	R1
03A4-4	3.3	4.7	3.3	1.1	3.1	1.1	2.6	0.8	R1
04A1-4	4.0	5.9	4.0	1.5	3.8	1.5	3.3	1.1	R1
05A7-4	5.6	7.2	5.6	2.2	5.3	2.2	4.0	1.5	R1
07A3-4	7.2	10.1	7.2	3.0	6.8	3.0	5.6	2.2	R1
09A5-4	9.4	13.0	9.4	4.0	8.9	4.0	7.2	3.0	R1
12A7-4	12.6	15.3	12.6	5.5	12.0	5.5	9.4	4.0	R1
018A-4	17.0	22.7	17.0	7.5	16.2	7.5	12.6	5.5	R2
026A-4	25.0	30.6	25.0	11.0	23.8	11.0	17.0	7.5	R2
033A-4	32.0	44.3	32.0	15.0	30.4	15.0	24.6	11.0	R3
039A-4	38.0	56.9	38.0	18.5	36.1	18.5	31.6	15.0	R3
046A-4	45.0	67.9	45.0	22.0	42.8	22.0	37.7	18.5	R3
062A-4	62	81	62	30	58	30	45	22.0	R4
073A-4	73	109.8	73	37	68	37	61	30.0	R4
088A-4	88	129.6	88	45	83	45	72	37	R5
106A-4	106	156.6	106	55	100	55	87	45	R5
145A-4	145	178	145	75	138	75	105	55	R6
169A-4	169	247	169	90	161	90	145	75	R7
206A-4	206	287	206	110	196	110	169	90	R7
246A-4	246	350	246	132	234	132	206	110	R8
293A-4	293	418	293	160	278	160	246 ¹⁾	132	R8
363A-4	363	498	363	200	345	200	293	160	R9
430A-4	430	545	430	250	400	200	363 ²⁾	200	R9
500A-4	500	600	500	250	500	250	373	200	R9

See definitions and notes on page 245.

■ IEC ratings at $U_n = 480$ V

Type ACS580 -01-	Input rating	Output ratings							Frame size
		Max. current	Nominal use				Heavy-duty use		
			I_{Ld}	P_{Ld}		I_{Hd}	P_{Hd}		
				A	kW		hp	A	
3-phase $U_n = 480$ V									
02A7-4	2.1	2.9	2.1	0.75	1.0	1.6	0.55	0.75	R1
03A4-4	3.0	3.8	3.0	1.1	1.5	2.1	0.75	1.0	R1
04A1-4	3.4	5.4	3.5	1.5	2.0	3.0	1.1	1.5	R1
05A7-4	4.8	6.1	4.8	2.2	3.0	3.4	1.5	2.0	R1
07A3-4	6.0	7.2	6.0	3.0	3.0	4.0	2.2	3.0	R1
09A5-4	7.6	8.6	7.6	4.0	5.0	4.8	3.0	3.0	R1
12A7-4	11.0	13.7	12.0	5.5	7.5	7.6	4.0	5.0	R1
018A-4	14.0	19.8	14.0	7.5	10.0	11.0	5.5	7.5	R2
026A-4	21.0	25.2	23.0	11.0	15.0	14.0	7.5	10.0	R2
033A-4	27.0	37.8	27.0	15.0	20.0	21.0	11.0	15.0	R3
039A-4	34.0	48.6	34.0	18.5	25.0	27.0	15.0	20.0	R3
046A-4	40.0	61.2	44.0	22.0	30.0	34.0	18.5	25.0	R3
062A-4	52	76	52	30	40	40	22	30	R4
073A-4	65	104	65	37	50	52	30	40	R4
088A-4	77	122	77	45	60	65	37	50	R5
106A-4	96	148	96	55	75	77	45	60	R5
145A-4	124	178	124	75	100	96	55	75	R6
169A-4	156	247	156	90	125	124	75	100	R7
206A-4	180	287	180	110	150	156	90	125	R7
246A-4	240	350	240	132	200	180	110	150	R8
293A-4	260	418	260	160	200	240 ¹⁾	132	150	R8
363A-4	361	542	361	200	300	302	160	250	R9
430A-4	414	542	414	250	350	361 ²⁾	200	300	R9

Definitions

- U_n Nominal output voltage of the drive. For input voltage range U_1 , see section [Electrical power network specification](#) on page 301. 50 Hz for IEC ratings and 60 Hz for UL (NEC) ratings.
- I_1 Nominal input current (rms) at 40 °C (104 °F)
- I_{max} Maximum output current. Available for two seconds at start.
- I_2 Nominal output current. Maximum continuous rms output current allowed (no overload).
- P_n Nominal power of the drive. Typical motor power (no overload). The kilowatt ratings apply to most IEC 4-pole motors. The horsepower (hp) ratings apply to most NEMA 4-pole motors.
- I_{Ld} Maximum current with 10% overload, allowed for one minute every ten minutes
- P_{Ld} Typical motor power in light-duty use (10% overload). The horsepower (hp) ratings apply to most NEMA 4-pole motors.

- I_{Hd}** Maximum current with 50% overload, allowed for one minute every ten minutes
- 1) Maximum current with 30% overload, allowed for one minute every ten minutes
 - 2) Maximum current with 25% overload, allowed for one minute every ten minutes
- P_{Hd}** Typical motor power in heavy-duty use (50% overload)
-

■ UL (NEC) ratings at $U_n = 208/230 \text{ V}$

Type ACS580 -01-	Input rating	Output ratings					Frame size
		Max. current	Light-duty use		Heavy-duty use		
	I_1 A	I_{\max} A	I_{Ld} A	P_{Ld} hp	I_{Hd} A	P_{Hd} hp	
3-phase $U_1 = 208...240 \text{ V}$, P_n at $U_n = 208/230 \text{ V}$, 60 Hz							
04A6-2	4.6	6.3	4.6	1.0	3.5	0.8	R1
06A6-2	6.6	8.9	6.6	1.5	4.6	1.0	R1
07A5-2	7.5	11.9	7.5	2.0	6.6	1.5	R1
10A6-2	10.6	14.3	10.6	3.0	7.5	2.0	R1
017A-2	16.7	22.6	16.7	5.0	10.6	3.0	R1
024A-2	24	32.7	24.2	7.5	16.7	5.0	R2
031A-2	31	43.6	30.8	10	24.2	7.5	R2
046A-2	46	62.4	46.2	15	30.8	10	R3
059A-2	59	83.2	59.4	20	46.2	15	R3
075A-2	75	107	74.8	25	59.4	20	R4
088A-2	88	135	88	30	74.8	25	R5
114A-2	114	158	114	40	88.0	30	R5
143A-2	143	205	143	50	114	40	R6
169A-2	169	257	169	60	143	50	R7
211A-2	211	304	211	75	169	60	R7
273A-2	273	380	273	100	211	75	R8

Type ACS580-01-	Input ratings	Output ratings		Frame size
	I_1 A	I_2 A ¹⁾	P_n Hp	
1-phase $U_n = 208 \text{ V}$				
04A6-2	3.3	2.2	0.5	R1
06A6-2	4.6	3.2	0.75	R1
07A5-2	6.3	4.2	1	R1
10A6-2	8.9	6.0	1.5	R1
017A-2	11.8	6.8	2	R1
024A-2	17.3	9.6	3	R2
031A-2	30.4	15.2	5	R2
046A-2	42	22	7.5	R3
059A-2	55	28	10	R3
075A-2	-	28	10	R4
088A-2	81	42	15	R5
114A-2	111	54	20	R5
143A-2	137	68	25	R6
169A-2	153	80	30	R7
211A-2	209	104	40	R7
273A-2	258	130	50	R8

¹⁾ Continuous current, no overloadability

See definitions and notes on page 249.

■ UL (NEC) ratings at $U_n = 480$ V

Type ACS580-01-	Input rating	Output ratings					Frame size
		Max. current	Light-duty use		Heavy-duty use		
		I_1	I_{Ld}	P_{Ld}	I_{Hd}	P_{Hd}	
A	A	A	hp	A	hp		
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz							
02A1-4	2.1	2.9	2.1	1.0	1.6	0.75	R1
03A0-4	3.0	4.1	3.0	1.5	2.1	1.0	R1
03A5-4	3.5	5.4	3.5	2.0	3.0	1.5	R1
04A8-4	4.8	6.5	4.8	3.0	3.4	2.0	R1
06A0-4	6.0	8.6	6.0	3.0	4.0	3.0	R1
07A6-4	7.6	10.8	7.6	5.0	4.8	3.0	R1
012A-4	12.0	15.3	12.0	7.5	7.6	5.0	R1
014A-4	14.0	21.6	14.0	10.0	11.0	7.5	R2
023A-4	23.0	30.5	23.0	15.0	14.0	10.0	R2
027A-4	27.0	41.4	27.0	20.0	21.0	15.0	R3
034A-4	34.0	48.6	34.0	25.0	27.0	20.0	R3
044A-4	44.0	61.2	44.0	30.0	34.0	25.0	R3
052A-4	52	79	52	40	40	30	R4
065A-4	65	94	65	50	52	40	R4
077A-4	77	117	77	60	65	50	R4
078A-4	77	117	77	60	65	50	R5
096A-4	96	139	96	75	77	60	R5
124A-4	124	173	124	100	96	75	R6
156A-4	156	223	156	125	124	100	R7
180A-4	180	281	180	150	156	125	R7
240A-4	240	324	240	200	180	150	R8
260A-4	260	418	260	200	240	150	R8
302A-4	302	468	302	250	260	200	R9
361A-4	361	498	361	300	302	250	R9
414A-4	414	544	414	350	361	300	R9

See definitions and notes on page 249.

■ UL (NEC) ratings at $U_n = 575 \text{ V}$

Type ACS580-01-	Input rating	Output ratings					Frame size
		Max. current	Nominal use		Heavy-duty use		
		I_1	I_{\max}	I_{Ld}	P_{Ld}	I_{Hd}	
A	A	A	hp	A	hp		
3-phase $U_1 = 525...600 \text{ V}$, P_n at $U_n = 575 \text{ V}$, 60 Hz							
02A7-6	2.7	4.3	2.7	2.0	2.4	1.5	R2
03A9-6	3.9	5.3	3.9	3.0	2.7	2.0	R2
06A1-6	6.1	8.2	6.1	5.0	3.9	3.0	R2
09A0-6	9.0	12.2	9.0	7.5	6.1	5.0	R2
011A-6	11.0	16.2	11.0	10	9.0	7.5	R2
017A-6	17.0	23.0	17.0	15	11.0	10	R2
022A-6	22	30.6	22	20	17	15	R3
027A-6	27	39.6	27	25	22	20	R3
032A-6	32	48.6	32	30	27	25	R3
041A-6	41	58	41	40	32	30	R5
052A-6	52	74	52	50	41	40	R5
062A-6	62	94	62	60	52	50	R5
077A-6	77	112	77	75	62	60	R5
099A-6	99	139	99	100	77	75	R7
125A-6	125	178	125	125	99	100	R7
144A-6	144	225	144	150	125	125	R8
192A-6	192	259	192	200	144	150	R9
242A-6	242	346	242	250	192	200	R9
271A-6	271	411	271	250	242	250	R9

Definitions

- U_n Nominal output voltage of the drive. For input voltage range U_1 , see section [Electrical power network specification](#) on page 301. 50 Hz for IEC ratings and 60 Hz for UL (NEC) ratings.
- I_1 Nominal input current (rms) at 40 °C (104 °F)
- I_{\max} Maximum output current. Available for two seconds at start.
- I_{Ld} Maximum current with 10% overload, allowed for one minute every ten minutes
- P_{Ld} Typical motor power in light-duty use (10% overload). The horsepower (hp) ratings apply to most NEMA 4-pole motors.
- I_{Hd} Maximum current with 50% overload, allowed for one minute every ten minutes
- 1) Maximum current with 30% overload, allowed for one minute every ten minutes
 - 2) Maximum current with 25% overload, allowed for one minute every ten minutes
- P_{Hd} Typical motor power in heavy-duty use (50% overload)

■ Conversion tables for IEC and North American type codes

IEC type ACS580-01-	North American type ACS580-01-	Frame size
3-phase $U_n = 230\text{ V}$		
04A7-2	04A6-2	R1
06A7-2	06A6-2	R1
07A6-2	07A5-2	R1
012A-2	10A6-2	R1
018A-2	017A-2	R1
025A-2	024A-2	R2
032A-2	031A-2	R2
047A-2	046A-2	R3
060A-2	059A-2	R3
-	075A-2	R4
089A-2	088A-2	R5
115A-2	114A-2	R5
144A-2	143A-2	R6
171A-2	169A-2	R7
213A-2	211A-2	R7
276A-2	273A-2	R8
346A-2	343A-2	R9
400A-2	396A-2	R9

IEC type ACS580-01-	North American type ACS580-01-	Frame size
3-phase $U_n = 480\text{ V}$		
02A7-4	02A1-4	R1
03A4-4	03A0-4	R1
04A1-4	03A5-4	R1
05A7-4	04A8-4	R1
07A3-4	06A0-4	R1
09A5-4	07A6-4	R1
12A7-4	012A-4	R1
018A-4	014A-4	R2
026A-4	023A-4	R2
033A-4	027A-4	R3
039A-4	034A-4	R3
046A-4	044A-4	R3
062A-4	052A-4	R4
073A-4	065A-4	R4
088A-4	078A-4	R5
106A-4	096A-4	R5
145A-4	124A-4	R6
169A-4	156A-4	R7
206A-4	180A-4	R7

IEC type ACS580-01-	North American type ACS580-01-	Frame size
246A-4	240A-4	R8
293A-4	260A-4	R8
293A-4	302A-4	R9
363A-4	361A-4	R9
430A-4	414A-4	R9

IEC type ACS580-01-	North American type ACS580-01-	Frame size
3-phase $U_n = 600$ V		
-	02A7-6	R2
-	03A9-6	R2
-	06A1-6	R2
-	09A0-6	R2
-	011A-6	R2
-	017A-6	R2
-	022A-6	R3
-	027A-6	R3
-	032A-6	R3
-	041A-6	R5
-	052A-6	R5
-	062A-6	R5
-	077A-6	R5
-	099A-6	R7
-	125A-6	R7
-	144A-6	R8
-	192A-6	R9
-	242A-6	R9
-	271A-6	R9

Note: IEC types not available

■ Sizing

Drive sizing is based on the rated motor current, and voltage and power. To achieve the rated motor power given in the table, the rated current of the drive must be higher than or equal to the rated motor current. Also the rated power of the drive must be higher than or equal to the rated motor power. The power ratings are the same regardless of the supply voltage within one voltage range.

Note: The ratings apply at ambient temperature of 40 °C (104 °F) for I_2 (I_{Ld} for UL (NEC)). Above these temperatures derating is required.

Note: The DriveSize dimensioning PC tool available from ABB (<http://new.abb.com/drives/software-tools/drivesize>) is recommended for selecting the drive, motor and gear combination.

Derating

The output load capacity (I_2 , I_{Ld} , I_{Hd} ; note that I_{max} is not derated) decreases in certain situations. In situations, where full motor power is required, oversize the drive so that the total derated output current provides sufficient capacity to supply the required nominal voltage to run the motor.

Note: The DriveSize dimensioning PC tool available from ABB (<http://new.abb.com/drives/software-tools/drivesize>) is also suitable for derating.

Note: If several situations are present at a time, the effects of derating are cumulative:

I_2 (derated) or I_{Ld} (derated) or I_{Hd} (derated) = (I_2 or I_{Ld} or I_{Hd}) x (switching frequency derating) x (altitude derating) x (ambient temperature derating), where no derating = 1.0.

Note: The motor may have a derating on it too.

Example 1, IEC: How to calculate the derated current

The IP21 / UL Type 1 drive type is ACS580-01-062A-4, which has drive output current of 62 A. Calculate the derated drive output current (I_2) at 4kHz switching frequency, at 1500 m altitude and at 50 °C ambient temperature as follows:

1. *Switching frequency derating by derating factor* (page 262):
No derating needed for 4 kHz.
2. *Altitude derating* (page 260):
The derating factor for 1500 m is $1 - 1/10\,000\text{ m} \cdot (1500 - 1000)\text{ m} = 0.95$.
The derated drive output current becomes $I_2 = 0.95 \cdot 62\text{ A} = 58.9\text{ A}$.
3. *Ambient temperature derating, IP21 (UL Type 1)* (page 254):
The derating factor for 50 °C ambient temperature = 0.90.
The derated drive output current becomes then $I_2 = 0.90 \cdot 58.9\text{ A} = 53.01\text{ A}$.

Example 1, UL (NEC): How to calculate the derated current

The IP21 / UL Type 1 drive type is ACS580-01-052A-4, which has drive output current of 52 A. Calculate the derated drive output current (I_{LD}) at 4kHz switching frequency, at 4921 ft (1500 m) altitude and at 50 °C ambient temperature as follows:

1. *Switching frequency derating by derating factor* (page 262):
No derating needed for 4 kHz.
 2. *Altitude derating* (page 260):
The derating factor for 4921 ft (1500 m) is $1 - 1/10\,000\text{ m} \cdot (1500 - 1000)\text{ m} = 0.95$.
The derated drive output current becomes $I_{LD} = 0.95 \cdot 52\text{ A} = 49.4\text{ A}$.
 3. *Ambient temperature derating, IP21 (UL Type 1)* (page 254):
The derating factor for 50 °C ambient temperature = 0.90.
The derated drive output current becomes then $I_{LD} = 0.90 \cdot 49.4\text{ A} = 44.46\text{ A}$.
-

Example 2, IEC: How to calculate the required drive

If your application requires continuous 12.0 A of motor current (I_2) at 8 kHz switching frequency, the supply voltage is 400 V and the drive is situated at 1500 m altitude and at 35 °C ambient temperature, calculate the appropriate IP21 / UL Type 1 drive size requirement as follows:

1. *Switching frequency derating by derating factor* (page 262):
The minimum size required is $I_2 = 12.0 \text{ A} / 0.65 = 18.46 \text{ A}$,
where 0.65 is the derating for 8 kHz switching frequency (frames R2...R3).
2. *Altitude derating* (page 260):
The derating factor for 1500 m is $1 - 1/10\,000 \text{ m} \cdot (1500 - 1000) \text{ m} = 0.95$.
The minimum size required becomes then $I_2 = 18.46 \text{ A} / 0.95 = 19.43 \text{ A}$.
3. *Ambient temperature derating, IP21 (UL Type 1)* (page 254):
No derating needed for 35 °C ambient temperature.

Referring to I_2 in the ratings tables (starting from page 244), drive type ACS580-01-026A-4 exceeds the I_2 requirement of 19.43 A.

Example 2, UL (NEC): How to calculate the required drive

If your application requires continuous maximum current with 10% overload 12.0 A of motor current (I_{LD}) at 8 kHz switching frequency, the supply voltage is 480 V and the drive is situated at 4921 ft (1500 m) altitude and at 35 °C ambient temperature, calculate the appropriate IP21 / UL Type 1 drive size requirement as follows:


1. *Switching frequency derating by derating factor* (page 262):
The minimum size required is $I_{LD} = 12.0 \text{ A} / 0.65 = 18.46 \text{ A}$,
where 0.65 is the derating for 8 kHz switching frequency (frames R2...R3).
2. *Altitude derating* (page 260):
The derating factor for 4921 ft (1500 m) is $1 - 1/10\,000 \text{ m} \cdot (1500 - 1000) \text{ m} = 0.95$.
The minimum size required becomes then $I_{LD} = 18.46 \text{ A} / 0.95 = 19.43 \text{ A}$.
3. *Ambient temperature derating, IP21 (UL Type 1)* (page 254):
No derating needed for 35 °C ambient temperature.

Referring to I_{LD} in the ratings tables (starting from page 248), drive type ACS580-01-023A-4 exceeds the I_{LD} requirement of 19.43 A.

■ Ambient temperature derating, IP21 (UL Type 1)


IP21 (UL Type 1) drive types, other than the exceptions below

In the temperature range +40...50 °C (+104...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k, in the diagram below).




IP21 (UL Type 1) drive type ~~-078A-4~~ and ~~-302A-4~~; ~~-099A-6~~, ~~-125A-6~~, ~~-144A-6~~


~~-078A-4~~: In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). In the temperature range +45...50 °C (+113...122 °F), the rated output current is derated by 2% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):



-302A-4: In the temperature range +40...50 °C (+104...122 °F), the rated output current is not derated at all.




-099A-6, -125A-6, -144A-6: In the temperature range +40...45 °C (+104...113 °F), the rated output current is not derated at all. In the temperature range +45...50 °C (+113...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):



■ Ambient temperature derating, IP55 (UL Type 12)


IP55 (UL Type 12) drive types, other than the exceptions below

In the temperature range +40...50 °C (+104...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):




IP55 (UL Type 12) drive type -077A-4, -078A-4, -260A-4, -293A-4, -302A-4, -361A-4, -363A-4, -414A-4 and -430A-4; -075A-2, -273A-2, -276A-2; -099A-6, -125A-6, -144A-6, -192A-6, -242A-6, -271A-6

-077A-4 and -078A-4; -075A-2: In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). In the temperature range +45...50 °C (+113...122 °F), the rated output current is derated by 2% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):




-260A-4, -293A-4, -361A-4 and -363A-4; -273A-2, -276A-2: In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). In the temperature range +45...50 °C (+113...122 °F), the rated


output current is derated by 2.5% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):




-414A-4 and -430A-4: In the temperature range +35...40 °C (+95...104 °F), the rated output current is derated by 3.2% for every added 1 °C (1.8 °F). In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 0.85% for every added 1 °C (1.8 °F). In the temperature range +45...50 °C (+104...122 °F), the rated output current is derated by 2.2% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):




-302A-4: In the temperature range +40...50 °C (+104...122 °F), the rated output current is not derated at all.




-099A-6, -125A-6, -144A-6: In the temperature range +40...45 °C (+104...113 °F), the rated output current is not derated at all. In the temperature range +45...50 °C (+113...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):




-192A-6: In the temperature range +40...50 °C (+104...122 °F), derating is to be defined. The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):



-242A-6: In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 1% for every added 3.5 °C (5.4 °F). The maximum temperature allowed is 45 °C (113 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):



-271A-6: The maximum temperature allowed is 35 °C (95 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):



■ Altitude derating

In altitudes 1000...4000 m (3300...13120 ft) above sea level, the derating is 1% for every 100 m (330 ft).


Note: There are special considerations in corner-grounded installations above 2000 m. Contact your local ABB representative for further information.

The output current is calculated by multiplying the current given in the rating table by the derating factor k, which for x meters (1000 m ≤ x ≤ 4000 m) is:

$$k = 1 - \frac{1}{10\,000\text{ m}} \cdot (x - 1000)\text{ m}$$

Altitude and ambient temperature

If ambient temperature is below 40 °C (+104 °F), the derating can be reduced by 1.5% for every 1 °C (1.8 °F) reduction in temperature. A few altitude derating curves are shown below. For a more accurate derating, use the DriveSize dimensioning PC tool.



The altitude derating can be reduced if the temperature is below +40 °C, for example, if the temperature is 30 °C, the derating factor is $1 - 1.5\% \cdot 10 = 0.85$. You can reduce the output current by 35% instead of 40% at 4000 meter above the sea level.

Note: Check the supply network compatibility restrictions above 2000 m (6562 ft), see [Installation site altitude](#) on page 312. Check also PELV limitation on relay output terminals above 2000 m (6562 ft), see sections [Isolation areas, R1...R5](#) on page 308 and [Isolation areas, R6...R9](#) on page 309.

■ Switching frequency derating by derating factor

The output current is calculated by multiplying the current given in the rating table by the derating factor given in the table below.

Note: If you change the minimum switching frequency with parameter 97.02 Minimum switching frequency, derate according to the table below. Changing parameter 97.01 Switching frequency reference does not require derating.

IEC

Frame size	IEC Type ACS580-01-	Derating factor (k) for the minimum switching frequencies at 40 °C (+104 °F)				
		1 kHz	2 kHz	4kHz	8 kHz	12 kHz
3-phase $U_n = 230 V$						
R1	04A7-2...018A-2	1	1	1	0.89	0.80
R2	025A-2...032A-2	1	1	1	0.86	0.74
R3	047A-2...060A-2	1	1	1	0.85	0.72
R5	089A-2...115A-2	1	1	1	0.89	0.79
R6	144A-2	1	1	1	0.90	0.80
R7	171A-2...213A-2	1	1	1	0.90	0.80
R8	276A-2	1	1	1	TBD	TBD
3-phase $U_n = 400 V$						
R1	02A7-4...12A7-4	1	1	1	0.67	0.50
R2	018A-4...026A-4	1	1	1	0.65	0.48
R3	033A-4...046A-4	1	1	1	0.65	0.48
R4	062A-4	1	1	1	0.82	0.64
R4	073A-4	1	1	1	0.73	0.55
R5	088A-4...106A-4	1	1	1	0.71	0.57
R6	145A-4	1	0.97	0.84	0.66	0.52
R7	169A-4...206A-4	1	0.98	0.89	0.71	0.53
R8	246A-4...293A-4	1	0.96	0.82	0.61	0.45
R9	363A-4...430A-4	1	0.95	0.79	0.58	0.43

UL (NEC)

Frame size	NEC Type ACS580-01-	Derating factor (k) for the minimum switching frequencies at 40 °C (+104 °F)				
		1 kHz	2 kHz	4kHz	8 kHz	12 kHz
3-phase $U_1 = 200...240$ V, P_n at $U_n = 208/230$ V, 60 Hz						
R1	04A6-2...017A-2	1	1	1	0.89	0.80
R2	024A-2...031A-2	1	1	1	0.86	0.74
R3	046A-2...059A-2	1	1	1	0.85	0.72
R4	075A-2	1	1	1	0.86	0.74
R5	088A-2...114A-2	1	1	1	0.89	0.79
R6	143A-2	1	1	1	0.90	0.80
R7	169A-2...211A-2	1	1	1	0.90	0.80
R8	273A-2	1	1	1	TBD	TBD
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz						
R1	02A1-4...012A-4	1	1	1	0.67	0.5
R2	014A-4...024A-4	1	1	1	0.65	0.48
R3	027A-4...044A-4	1	1	1	0.65	0.48
R4	052A-4...065A-4	1	1	1	0.82	0.64
R4	077A-4	1	1	1	0.73	0.55
R5	078A-4...096A-4	1	1	1	0.71	0.57
R6	124A-4	1	1	1	0.66	0.52
R7	156A-4...180A-4	1	1	1	0.71	0.53
R8	240A-4	1	1	1	0.61	0.45
R8	260A-4	1	1	1	0.61	0.45
R9	302A-4	1	1	1	0.58	0.43
R9	361A-4...414A-4	1	1	0.79	0.58	0.43
3-phase $U_1 = 500...600$ V, P_n at $U_n = 575$ V, 60 Hz						
R2	02A7-6...017A-6	1	1	1	0.72	0.54
R3	022A-6...032A-6	1	1	1	0.70	0.50
R5	041A-6...077A-6	1	1	1	0.70	0.51
R7	099A-6...125A-6	1	1	1	0.66	0.50
R8	144A-6	1	1	1	0.66	0.50
R9	192A-6	1	1	1	0.66	0.50
R9	242A-6	1	1	0.83	0.66	0.50
R9	271A-6	1	1	0.74	0.66	0.50

■ Switching frequency derating with actual output current values

These tables show the output current values with different switching frequencies. Note that other derating factors, for example ambient temperature and altitude, may also affect to the output current.

IEC

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size
	I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz	16 kHz	
	A	A	A	A	A	A	A	
3-phase $U_1 = 230$ V								
04A7-2	4.7	4.7	4.7	4.7	4.2	3.8	3.4	R1
06A7-2	6.7	6.7	6.7	6.7	6.0	5.4	4.8	R1
07A6-2	7.6	7.6	7.6	7.6	6.8	6.1	5.5	R1
012A-2	12.0	12.0	12.0	12.0	10.7	9.6	8.6	R1
018A-2	16.9	16.9	16.9	16.9	15.0	13.5	12.1	R1
025A-2	24.5	24.5	24.5	24.5	21.1	18.1	15.9	R2
032A-2	31.2	31.2	31.2	31.2	26.8	23.1	20.3	R2
047A-2	46.7	46.7	46.7	46.7	39.7	33.6	29.4	R3
060A-2	60	60	60	60	51	43.2	37.8	R3
089A-2	89	89	89	89	79	70	62	R5
115A-2	115	115	115	115	103	91	81	R5
144A-2	144	144	144	144	130	116	101	R6
171A-2	171	171	171	171	154	137	120	R7
213A-2	213	213	213	213	192	171	149	R7
276A-2	276	276	276	276	N/A	N/A	N/A	R8

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size
	I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz	16 kHz	
	A	A	A	A	A	A	A	
3-phase $U_1 = 400$ V								
02A7-4	2.6	2.6	2.6	2.6	1.7	1.3	N/A	R1
03A4-4	3.3	3.3	3.3	3.3	2.2	1.7	N/A	R1
04A1-4	4.0	4.0	4.0	4.0	2.7	2.0	N/A	R1
05A7-4	5.6	5.6	5.6	5.6	3.8	2.8	N/A	R1
07A3-4	7.2	7.2	7.2	7.2	4.8	3.6	N/A	R1
09A5-4	9.4	9.4	9.4	9.4	6.3	4.7	N/A	R1
12A7-4	12.6	12.6	12.6	12.6	8.4	6.3	N/A	R1
018A-4	17.0	17.0	17.0	17.0	11.1	8.2	N/A	R2
026A-4	25.0	25.0	25.0	25.0	16.3	12.0	N/A	R2
033A-4	32.0	32.0	32.0	32.0	20.8	15.4	N/A	R3
039A-4	38.0	38.0	38.0	38.0	24.7	18.2	N/A	R3
046A-4	45.0	45.0	45.0	45.0	29.3	21.6	N/A	R3
062A-4	62	62	62	62	51	39.7	N/A	R4

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size
	I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz	16 kHz	
	A	A	A	A	A	A	A	
073A-4	73	73	73	73	53	40.2	N/A	R4
088A-4	88	88	88	88	62	50	N/A	R5
106A-4	106	106	106	106	75	60	N/A	R5
145A-4	145	145	141	122	96	75	N/A	R6
169A-4	169	169	166	150	120	90	N/A	R7
206A-4	206	206	202	183	146	109	N/A	R7
246A-4	246	246	236	202	150	111	N/A	R8
293A-4	293	293	281	240	179	132	N/A	R8
363A-4	363	363	345	287	211	156	N/A	R9
430A-4	430	430	409	340	249	185	N/A	R9

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size
	I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz	16 kHz	
	A	A	A	A	A	A	A	
3-phase $U_1 = 480$ V								
02A7-6	2.7	2.7	2.7	2.7	1.9	1.5	1.1	R2
03A9-6	3.9	3.9	3.9	3.9	2.8	2.1	1.6	R2
06A1-6	6.1	6.1	6.1	6.1	4.4	3.3	2.4	R2
09A0-6	9.0	9.0	9.0	9.0	6.5	4.9	3.6	R2
011A-6	11.0	11.0	11.0	11.0	7.9	5.9	4.4	R2
017A-6	17.0	17.0	17.0	17.0	12.2	9.2	6.8	R2
022A-6	22.0	22.0	22.0	22.0	15.4	11.0	7.5	R3
027A-6	27.0	27.0	27.0	27.0	18.9	13.5	9.2	R3
032A-6	32.0	32.0	32.0	32.0	22.4	16.0	10.9	R3
041A-6	41.0	41.0	41.0	41.0	28.7	20.9	14.8	R5
052A-6	52	52	52	52	36.4	26.5	18.7	R5
062A-6	62	62	62	62	43.4	31.6	22.3	R5
077A-6	77	77	77	77	54	39.3	27.7	R5
099A-6	99	99	99	99	65	50	N/A	R7
125A-6	125	125	125	125	83	63	N/A	R7
144A-6	144	144	144	144	95	72	N/A	R8
192A-6	192	192	192	192	127	96	N/A	R9
242A-6	242	242	242	201	160	121	N/A	R9
271A-6	271	271	271	201	179	136	N/A	R9

UL (NEC)

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size
		I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz	
	A	A	A	A	A	A	A	
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V, 60 Hz								
04A6-2	4.7	4.7	4.7	4.7	4.2	3.8	3.4	R1
06A6-2	6.7	6.7	6.7	6.7	6.0	5.4	4.8	R1
07A5-2	7.6	7.6	7.6	7.6	6.8	6.1	5.5	R1
10A6-2	12.0	12.0	12.0	12.0	10.7	9.6	8.6	R1
017A-2	16.9	16.9	16.9	16.9	15.0	13.5	12.1	R1
024A-2	24.5	24.5	24.5	24.5	21.1	18.1	15.9	R2
031A-2	31.2	31.2	31.2	31.2	26.8	23.1	20.3	R2
046A-2	46.7	46.7	46.7	46.7	39.7	33.6	29.4	R3
059A-2	60	60	60	60	51	43.2	37.8	R3
088A-2	89	89	89	89	79	70	62	R5
114A-2	115	115	115	115	103	91	81	R5
143A-2	144	144	144	144	130	116	101	R6
169A-2	171	171	171	171	154	137	120	R7
211A-2	213	213	213	213	192	171	149	R7
273A-2	276	276	276	276	-	-	-	R8
346A-2	-	-	-	-	-	-	-	R9
400A-2	-	-	-	-	-	-	-	R9

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size
		I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz	
	A	A	A	A	A	A	A	
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz								
02A1-4	2.6	2.6	2.6	2.6	1.7	1.3	N/A	R1
03A0-4	3.3	3.3	3.3	3.3	2.2	1.7	N/A	R1
03A5-4	4.0	4.0	4.0	4.0	2.7	2.0	N/A	R1
04A8-4	5.6	5.6	5.6	5.6	3.8	2.8	N/A	R1
06A0-4	7.2	7.2	7.2	7.2	4.8	3.6	N/A	R1
07A6-4	9.4	9.4	9.4	9.4	6.3	4.7	N/A	R1
012A-4	12.6	12.6	12.6	12.6	8.4	6.3	N/A	R1
014A-4	17.0	17.0	17.0	17.0	11.1	8.2	N/A	R2
023A-4	25.0	25.0	25.0	25.0	16.3	12.0	N/A	R2
027A-4	32.0	32.0	32.0	32.0	20.8	15.4	N/A	R3
034A-4	38.0	38.0	38.0	38.0	24.7	18.2	N/A	R3
044A-4	45.0	45.0	45.0	45.0	29.3	21.6	N/A	R3
052A-4	62	62	62	62	51	39.7	N/A	R4
065A-4	73	73	73	73	53	40.2	N/A	R4
078A-4	88	88	88	88	62	50	N/A	R5

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size	
		I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz		16 kHz
		A	A	A	A	A	A		A
096A-4	106	106	106	106	75	60	N/A	R5	
124A-4	145	145	141	122	96	75	N/A	R6	
156A-4	169	169	166	150	120	90	N/A	R7	
180A-4	206	206	202	183	146	109	N/A	R7	
240A-4	246	246	236	202	150	111	N/A	R8	
260A-4	293	293	281	240	179	132	N/A	R8	
302A-4	302	N/A	N/A	N/A	N/A	N/A	N/A	R9	
361A-4	363	363	345	287	211	156	N/A	R9	
414A-4	430	430	409	340	249	185	N/A	R9	

Type ACS580-01-	Nominal output	Nominal output current (I_2) for the minimum switching frequencies at 40 °C (+104 °F)						Frame size	
		I_2	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz		16 kHz
		A	A	A	A	A	A		A
3-phase $U_1 = 500...600$ V, P_n at $U_n = 575$ V, 60 Hz									
02A7-6	2.7	2.7	2.7	2.7	1.9	1.5	1.1	R2	
03A9-6	3.9	3.9	3.9	3.9	2.8	2.1	1.6	R2	
06A1-6	6.1	6.1	6.1	6.1	4.4	3.3	2.4	R2	
09A0-6	9.0	9.0	9.0	9.0	6.5	4.9	3.6	R2	
011A-6	11.0	11.0	11.0	11.0	7.9	5.9	4.4	R2	
017A-6	17.0	17.0	17.0	17.0	12.2	9.2	6.8	R2	
022A-6	22.0	22.0	22.0	22.0	15.4	11.0	7.5	R3	
027A-6	27.0	27.0	27.0	27.0	18.9	13.5	9.2	R3	
032A-6	32.0	32.0	32.0	32.0	22.4	16.0	10.9	R3	
041A-6	41.0	41.0	41.0	41.0	28.7	20.9	14.8	R5	
052A-6	52	52	52	52	36.4	26.5	18.7	R5	
062A-6	62	62	62	62	43.4	31.6	22.3	R5	
077A-6	77	77	77	77	54	39.3	27.7	R5	
099A-6	99	99	99	99	65	50	N/A	R7	
125A-6	125	125	125	125	83	63	N/A	R7	
144A-6	144	144	144	144	95	72	N/A	R8	
192A-6	192	192	192	192	127	96	N/A	R9	
242A-6	242	242	242	201	160	121	N/A	R9	
271A-6	271	271	271	201	179	136	N/A	R9	

■ **Output frequency derating**

Output frequency derating applies for ratings up to ACS580-01-106A-4 (R5). Inverter output current is limited by the following factor k below 5 Hz absolute inverter output frequency f_{abs} .

$$k = 2/3 + 1/3 \cdot (f_{abs} / 5 \text{ Hz})$$

Fuses (IEC)

gG as well as uR or aR fuses for protection against short-circuit in the input power cable or drive are listed below. Either fuse type can be used for frames R1...R9 if it operates rapidly enough. The operating time depends on the supply network impedance and the cross-sectional area and length of the supply cable.

Note 1: See also [Implementing short-circuit and thermal overload protection](#) on page 104.

Note 2: Fuses with higher current rating than the recommended ones must not be used.

Note 3: Fuses from other manufacturers can be used if they meet the ratings and the melting curve of the fuse does not exceed the melting curve of the fuse mentioned in the table.

■ gG fuses (IEC)

Check on the fuse time-current curve to ensure the operating time of the fuse is below 0.5 seconds. Obey the local regulations.

Type ACS580-01-	Min. short-circuit current ¹⁾	Input current	gG (IEC 60269)				
			Nominal current	I^2t	Voltage rating	ABB type	IEC 60269 size
	A	A	A	A ² s	V		
3-phase $U_n = 230$ V							
04A7-2	200	4.7	25	2500	500	OFAF000H25	000
06A7-2	200	6.7	25	2500	500	OFAF000H25	000
07A6-2	200	7.6	25	2500	500	OFAF000H25	000
012A-2	200	12.0	25	2500	500	OFAF000H25	000
018A-2	200	16.9	25	2500	500	OFAF000H25	000
025A-2	320	24.5	40	7700	500	OFAF000H40	000
032A-2	320	31.2	40	7700	500	OFAF000H40	000
047A-2	500	46.7	63	20100	500	OFAF000H63	000
060A-2	500	60	63	20100	500	OFAF000H63	000
089A-2	1300	89	125	103000	500	OFAF00H125	00
115A-2	1300	115	125	103000	500	OFAF00H125	00
144A-2	1700	144	200	300000	500	OFAF0H200	0
171A-2	2300	171	250	600000	500	OFAF0H250	0
213A-2	3300	213	315	710000	500	OFAF1H315	1
276A-2	5500	276	400	1100000	500	OFAF2H400	2
3-phase $U_n = 400$ or 480 V							
02A7-4	32	2.6	4	55	500	OFAF000H4	000
03A4-4	48	3.3	6	110	500	OFAF000H6	000
04A1-4	48	4.0	6	110	500	OFAF000H6	000
05A7-4	80	5.6	10	360	500	OFAF000H10	000
07A3-4	80	7.2	10	360	500	OFAF000H10	000
09A5-4	128	9.4	16	740	500	OFAF000H16	000

Type ACS580-01-	Min. short-circuit current ¹⁾	Input current	gG (IEC 60269)				
			Nominal current	I^2t	Voltage rating	ABB type	IEC 60269 size
		A	A	A	A ² s		
12A7-4	128	12.6	16	740	500	OFAF000H16	000
018A-4	200	17.0	25	2500	500	OFAF000H25	000
026A-4	256	25.0	32	4000	500	OFAF000H32	000
033A-4	320	32.0	40	7700	500	OFAF000H40	000
039A-4	400	38.0	50	16000	500	OFAF000H50	000
046A-4	500	45.0	63	20100	500	OFAF000H63	000
062A-4	800	62	80	37500	500	OFAF000H80	000
073A-4	1000	73	100	65000	500	OFAF000H100	000
088A-4	1000	88	100	65000	500	OFAF000H100	000
106A-4	1300	106	125	103000	500	OFAF00H125	00
145A-4	1700	145	160	185000	500	OFAF00H160	00
169A-4	3300	169	250	600000	500	OFAF0H250	0
206A-4	5500	206	315	710000	500	OFAF1H315	1
246A-4	6400	246	355	920000	500	OFAF1H355	1
293A-4	7800	293	425	1300000	500	OFAF2H425	2
363A-4	9400	363	500	2000000	500	OFAF2H500	2
430A-4	10200	430	630	2800000	500	OFAF3H630	3

¹⁾ Minimum short-circuit current of the installation

■ uR and aR fuses (IEC)

Type ACS580 -01-	Min. short-circuit current ¹⁾	Input current	uR or aR (DIN 43620 blade style)				
			Nominal current	I^2t	Voltage rating	Bussmann type	IEC 60269 size
			A	A ² s	V		
3-phase $U_n = 230\text{ V}$							
04A7-2	120.0	4.7	40.0	460	690	170M1563	000
06A7-2	120.0	6.7	40.0	460	690	170M1563	000
07A6-2	120.0	7.6	40.0	460	690	170M1563	000
012A-2	120.0	12.0	40.0	460	690	170M1563	000
018A-2	120.0	16.9	40.0	460	690	170M1563	000
025A-2	170.0	24.5	63.0	1450	690	170M1565	000
032A-2	170.0	31.2	63.0	1450	690	170M1565	000
047A-2	280.0	46.7	80.0	2550	690	170M1566	000
060A-2	280.0	60	80.0	2550	690	170M1566	000
089A-2	700.0	89	200	15000	690	170M3815	1
115A-2	700.0	115	200	15000	690	170M3815	1
144A-2	1000	144	315	46500	690	170M3817	1
171A-2	1280	171	450	105000	690	170M5809	2
213A-2	1450	213	500	155000	690	170M5810	2
276A-2	2050	276	630	220000	690	170M6810	3
3-phase $U_n = 400\text{ or }480\text{ V}$							
02A7-4	65	2.6	25	130	690	170M1561	000
03A4-4	65	3.3	25	130	690	170M1561	000
04A1-4	65	4.0	25	130	690	170M1561	000
05A7-4	65	5.6	25	130	690	170M1561	000
07A3-4	65	7.2	25	130	690	170M1561	000
09A5-4	65	9.4	25	130	690	170M1561	000
12A7-4	65	12.6	25	130	690	170M1561	000
018A-4	120	17.0	40	460	690	170M1563	000
026A-4	120	25.0	40	460	690	170M1563	000
033A-4	170	32.0	63	1450	690	170M1565	000
039A-4	170	38.0	63	1450	690	170M1565	000
046A-4	280	45.0	80	2550	690	170M1566	000
062A-4	380	62	100	4650	690	170M1567	000
073A-4	480	73	125	8500	690	170M1568	000
088A-4	700	88	160	16000	690	170M1569	000
106A-4	1280	106	315	46500	690	170M3817	1
145A-4	1280	145	315	46500	690	170M3817	1
169A-4	1800	169	450	105000	690	170M5809	2
206A-4	2210	206	500	145000	690	170M5810	2
246A-4	3010	246	630	275000	690	170M5812	2
293A-4	4000	293	800	490000	690	170M6812D	3
363A-4	5550	363	1000	985000	690	170M6814D	3
430A-4	7800	430	1250	2150000	690	170M8554D	3

¹⁾ Minimum short-circuit current of the installation

Type ACS580 -01-	Min. short-circuit current ¹⁾	Input current	uR or aR (DIN 43653 bolted tags)				
			Nominal current	β_t	Voltage rating	Bussmann type	IEC 60269 size
	A	A	A	A ² s	V		
3-phase $U_n = 400$ or 480 V							
02A7-4	65	2.6	25	130	690	170M1311	0
03A4-4	65	3.3	25	130	690	170M1311	0
04A1-4	65	4.0	25	130	690	170M1311	0
05A7-4	65	5.6	25	130	690	170M1311	0
07A3-4	65	7.2	25	130	690	170M1311	0
09A5-4	65	9.4	25	130	690	170M1311	0
12A7-4	65	12.6	25	130	690	170M1311	0
018A-4	120	17.0	40	460	690	170M1313	0
026A-4	120	25.0	40	460	690	170M1313	0
033A-4	170	32.0	63	1450	690	170M1315	0
039A-4	170	38.0	63	1450	690	170M1315	0
046A-4	280	45.0	80	2550	690	170M1316	0
062A-4	380	62	100	4650	690	170M1417	0
073A-4	480	73	125	8500	690	170M1318	0
088A-4	700	88	160	16000	690	170M1319	0
106A-4	700	106	200	15000	690	170M3015	1
145A-4	1000	145	250	28500	690	170M3016	1
169A-4	1280	169	315	46500	690	170M3017	1
206A-4	1520	206	350	68500	690	170M3018	1
246A-4	2050	246	450	105000	690	170M5009	2
293A-4	2200	293	500	145000	690	170M5010	2
363A-4	3100	363	630	275000	690	170M5012	2
430A-4	3600	430	700	405000	690	170M5013	2

¹⁾ Minimum short-circuit current of the installation

Circuit breakers (IEC)

This section does not apply to the North American market. See section [Circuit breakers \(UL\)](#) for branch circuit protection on page 278.

The protective characteristics of circuit breakers depend on the type, construction and settings of the breakers. There are also limitations pertaining to the short-circuit capacity of the supply network.



WARNING! Due to the inherent operating principle and construction of circuit breakers, independent of the manufacturer, hot ionized gases can escape from the breaker enclosure in case of a short-circuit. To ensure safe use, pay special attention to the installation and placement of the breakers. Obey the manufacturer's instructions.

You can use the circuit breakers listed below. Other circuit breakers can be used with drive if they provide the same electrical characteristics. ABB does not assume any liability whatsoever for the correct function and protection with circuit breakers not listed below. Furthermore, if the recommendations given by ABB are not obeyed, the drive can experience problems that the warranty does not cover.

Type ACS580 -01-	MCBs and MCCBs					
	ABB type	Max. short-circuit	Tmax frame XT / T class	Tmax rating	Electronic release	SACE ordering code for breaker and release unit
		I_{sc} kA				
3-phase $U_n = 400$ or 480 V						
02A7-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
03A4-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
04A1-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
05A7-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
07A3-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
09A5-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
12A7-4	S 203P-B/C/Z 16	20	N/A	N/A	N/A	N/A
018A-4	S 203P-B/C/Z 20	20	N/A	N/A	N/A	N/A
026A-4	S 203P-B/C/Z 25	20	N/A	N/A	N/A	N/A
033A-4	S 203P-B/C/Z 32	12	N/A	N/A	N/A	N/A
039A-4	S 203P-B/C/Z 40	12	N/A	N/A	N/A	N/A
046A-4	S 203P-B/C/Z 50	12	N/A	N/A	N/A	N/A
062A-4	S 803S-B/C 80	50	N/A	N/A	N/A	N/A
073A-4	S 803S-B/C 80	50	N/A	N/A	N/A	N/A
088A-4	S 803S-B/C 100	50	N/A	N/A	N/A	N/A
106A-4	S 803S-B/C 125	50	N/A	N/A	N/A	N/A

Type ACS580 -01-	MCBs and MCCBs					
	ABB type	Max. short- circuit	Tmax frame XT / T class	Tmax rating	Electronic release	SACE ordering code for breaker and release unit
		I_{sc} kA	A	A	A	
145A-4	XT4 L 250 Ekip LS/I In=250 3p F F	65	XT4	250	250	1SDA068555R1
169A-4	XT4 L 250 Ekip LS/I In=250 3p F F	65	XT4	250	250	1SDA068555R1
206A-4	T4 L 320 PR221DS- LS/I In=320 3p F F	65	T4	320	320	1SDA054141R1
246A-4	T5 L 400 PR221DS- LS/I In=400 3p F F	65	T5	400	400	1SDA054365R1
293A-4	T5 L 630 PR221DS- LS/I In=630 3p F F	65	T5	630	630	1SDA054420R1
363A-4	T5 L 630 PR221DS- LS/I In=630 3p F F	65	T5	630	630	1SDA054420R1
430A-4	T5 L 630 PR221DS- LS/I In=630 3p F F	65	T5	630	630	1SDA054420R1

Fuses (UL)

Fuses for branch circuit protection per NEC are listed below. ABB recommends fast acting class T or faster fuses in the USA. Obey local regulations.

UL/NEC type ACS580-01-	Input current	UL			
		Maximum current	Voltage rating	Bussmann type	UL class ¹⁾
	A	A	V		
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V, 60 Hz					
04A6-2	4.6	15	600	JJS-15	T
06A6-2	6.6	15	600	JJS-15	T
07A5-2	7.5	15	600	JJS-15	T
10A6-2	10.6	15	600	JJS-15	T
017A-2	16.7	30	600	JJS-30	T
024A-2	24.2	40	600	JJS-40	T
031A-2	30.8	40	600	JJS-40	T
046A-2	46.2	80	600	JJS-80	T
059A-2	59.4	80	600	JJS-80	T
075A-2	74.8	100	600	JJS-100	T
088A-2	88.0	150	600	JJS-150	T
114A-2	114	150	600	JJS-150	T
143A-2	143	200	600	JJS-200	T
169A-2	169	250	600	JJS-250	T
211A-2	211	300	600	JJS-300	T
273A-2	273	400	600	JJS-400	T
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz					
02A1-4	2.1	15	600	JJS-15	T
03A0-4	3.0	15	600	JJS-15	T
03A5-4	3.5	15	600	JJS-15	T
04A8-4	4.8	15	600	JJS-15	T
06A0-4	6.0	15	600	JJS-15	T
07A6-4	7.6	15	600	JJS-15	T
012A-4	12.0	15	600	JJS-15	T
014A-4	14.0	30	600	JJS-30	T
023A-4	23.0	30	600	JJS-30	T
027A-4	27.0	40	600	JJS-40	T
034A-4	34.0	60	600	JJS-60	T
044A-4	44.0	60	600	JJS-60	T
052A-4	52	80	600	JJS-80	T
065A-4	62	100	600	JJS-100	T
077A-4	77	100	600	JJS-100	T
078A-4	78	110	600	JJS-110	T
096A-4	106	150	600	JJS-150	T
124A-4	124	200	600	JJS-200	T
156A-4	156	225	600	JJS-225	T
180A-4	180	300	600	JJS-300	T
240A-4	240	350	600	JJS-350	T
260A-4	260	400	600	JJS-400	T

UL/NEC type ACS580-01-	Input current	UL			
		Maximum current	Voltage rating	Bussmann type	UL class ¹⁾
	A	A	V		
302A-4	302	500	600	JJS-500	T
361A-4 ²⁾	361	500	600	JJS-500	T
414A-4 ²⁾	414	600	600	JJS-600	T
3-phase $U_1 = 525...600$ V, P_n at $U_n = 575$ V, 60 Hz					
02A7-6	2.7	15	600	JJS-15	T
03A9-6	3.9	15	600	JJS-15	T
06A1-6	6.1	15	600	JJS-15	T
09A0-6	9.0	15	600	JJS-15	T
011A-6	11.0	15	600	JJS-15	T
017A-6	17.0	30	600	JJS-30	T
022A-6	22.0	40	600	JJS-40	T
027A-6	27.0	40	600	JJS-40	T
032A-6	32.0	40	600	JJS-40	T
041A-6	41.0	100	600	JJS-100	T
052A-6	52.0	100	600	JJS-100	T
062A-6	62.0	100	600	JJS-100	T
077A-6	77.0	100	600	JJS-100	T
099A-6	99.0	150	600	JJS-150	T
125A-6	125	200	600	JJS-200	T
144A-6	144	250	600	JJS-250	T
192A-6	192	300	600	JJS-300	T
242A-6	242	400	600	JJS-400	T
271A-6	271	400	600	JJS-400	T

1) Class J, CC, and CF fuses are also allowed at the same nominal current and voltage ratings

2) See note 8 below

Notes:

1. See also section [Implementing short-circuit and thermal overload protection](#) on page 104.
 2. Fuses are required as part of the installation. Fuses are not included in the base drive configuration and must be provided by others.
 3. The UL listed fuses in the hardware manual tables, or the tables in this document are the required branch circuit protection per NEC.
 4. Recommended size or smaller UL 248 listed fast acting, time delay, or high speed fuses must be used to maintain the drive UL listing. Additional protection can be used. Refer to local codes and regulations.
 5. UL 248 listed, fast acting, time delay, or high speed fuses from other manufacturers can be used if they meet the rating requirements specified in the rules above.
 6. A fuse of a different class can be used at the high fault rating where the I_{peak} and I^2t of the new fuse is not greater than that of the specified fuse.
 7. When installing a drive, always follow installation instructions and NEC requirements.
 8. Only 480V R9 frame drives with serial numbers beginning 1204109256 when built in Finland and beginning 22106xxxxx when built in the U.S. may be protected with fuses listed in the tables above. Drives with earlier serial numbers can only be protected with Class T fuses.
 9. Alternative fuses can be used if they meet certain characteristics. For acceptable fuses, see the manual supplement ([3AXD50000645015](#) [English]).
-

Circuit breakers (UL)

These drives are suitable for use on a circuit capable of delivering not more than 65 kA symmetrical amperes (RMS) at 240 / 480 / 600 V maximum, when protected by appropriate circuit breakers in the tables below. Additional fuse protection is not required by UL when using circuit breakers herein. Circuit breakers are not required to be in the same enclosure as the drive.

Notes below the tables must be followed when using these breakers.

ACS580-01-	Frame size	Input current	CB maximum current	CB voltage	Enclosure minimum volume	Drive volume	ABB circuit breaker
		A	A	V	in ³	in ³	
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V, 60 Hz							
04A6-2	R1	4.6	25	240	6480	506	XT2Nαβ025#*****
06A6-2	R1	6.6	25	240	6480	506	XT2Nαβ025#*****
07A5-2	R1	7.5	25	240	6480	506	XT2Nαβ025#*****
10A6-2	R1	10.6	25	240	6480	560	XT2Nαβ025#*****
017A-2	R1	16.7	25	240	6480	506	XT2Nαβ025#*****
024A-2	R2	24.2	40	240	6480	684	XT2Nαβ040#*****
031A-2	R2	30.8	40	240	6480	684	XT2Nαβ040#*****
046A-2	R3	46.2	100	240	6480	1011	XT2Nαβ100#*****
059A-2	R3	59.4	100	240	6480	1011	XT2Nαβ100#*****
075A-2	R4	74.8	100	240	6480	1669	XT2Nαβ100#*****
088A-2	R5	88.0	150	240	8100	2030	XT4Nαβ150#*****
114A-2	R5	114	150	240	8100	2030	XT4Nαβ150#*****
143A-2	R6	143	200	240	□	2880	XT4Nαβ200#*****
169A-2	R7	169	300	240	□	3369	XT5Nαβ30A#*****
211A-2	R7	211	300	240	□	3369	XT5Nαβ30A#*****
273A-2	R8	273	400	240	□	3858	XT5Nαβ40A#*****

□ Enclosure minimum volume is not applicable

See notes 1-11 below

ACS580-01-	Frame size	Input current	CB max. current	CB voltage	Enclosure minimum volume	Drive volume	ABB circuit breaker	Maximum I^2t	Maximum I_{peak}
		A	A	V	in ³	in ³			
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz									
02A1-4	R1	2.1	20	480	6480	506	XT2Hαβ020#*****	0.512×10^6	23.2
03A0-4	R1	3.0	20	480	6480	506	XT2Hαβ020#*****	0.512×10^6	23.2
03A5-4	R1	3.5	20	480	6480	506	XT2Hαβ020#*****	0.512×10^6	23.2
04A8-4	R1	4.8	20	480	6480	560	XT2Hαβ020#*****	0.512×10^6	23.2
07A6-4	R1	7.6	20	480	6480	506	XT2Hαβ020#*****	0.512×10^6	23.2
012A-4	R1	12.0	20	480	6480	506	XT2Hαβ020#*****	0.512×10^6	23.2
014A-4	R2	14.0	35	480	16200	684	XT2Hαβ035#*****	0.512×10^6	23.2
023A-4	R2	23.0	35	480	16200	684	XT2Hαβ035#*****	0.512×10^6	23.2
027A-4	R3	27.0	70	480	27720	1011	XT2Hαβ070#*****	0.512×10^6	23.2
034A-4	R3	34.0	70	480	27720	1011	XT2Hαβ070#*****	0.512×10^6	23.2

ACS58 0-01-	Frame size	Input current	CB max. current	CB voltage	Enclosure minimum volume	Drive volume	ABB circuit breaker	Maximum I ² t	Maximum I _{peak}
		A	A	V	in ³	in ³		65 kA @ 480 V	A ² s
044A-4	R3	44.0	70	480	27720	1011	XT2Haqβ070#*****	0.512×10 ⁶	23.2
052A-4	R4	52	125	480	30240	1669	XT2Haqβ125#*****	0.512×10 ⁶	23.2
065A-4	R4	65	125	480	30240	1669	XT2Haqβ125#*****	0.512×10 ⁶	23.2
077A-4	R4	77	125	480	30240	1669	XT2Haqβ125#*****	0.512×10 ⁶	23.2
078A-4	R5	78	150	480	30240	2030	XT4Haqβ150#*****	0.98×10 ⁶	30
096A-4	R5	96	150	480	30240	2030	XT4Haqβ150#*****	0.98×10 ⁶	30
124A-4	R6	124	225	480	53705	2880	XT4Haqβ225#*****	0.98×10 ⁶	30
156A-4	R7	156	250	480	53703	3369	XT4Haqβ250#*****	0.98×10 ⁶	30
180A-4	R7	180	250	480	53703	3369	XT4Haqβ250#*****	0.98×10 ⁶	30
240A-4	R8	240	400	480	53703	3858	XT5Haqβ40A#*****	4.2×10 ⁶	47.9
260A-4	R8	240	400	480	53703	3858	XT5Haqβ40A#*****	4.2×10 ⁶	47.9
302A-4	R9	302	600	480	53703	5226	XT5Haqβ60B#*****	4.2×10 ⁶	47.9
361A-4	R9	361	600	480	53703	5226	XT5Haqβ60B#*****	4.2×10 ⁶	47.9
414A-4	R9	414	600	480	53703	5226	XT5Haqβ60B#*****	4.2×10 ⁶	47.9

See notes 1-9 and 12-16 below

ACS58 0-01-	Frame size	Input current	CB max. current	CB voltage	Enclosure minimum volume	Drive volume	ABB circuit breaker	Maximum I ² t	Maximum I _{peak}
		A	A	V	in ³	in ³		65 kA @ 600 V	A ² s
3-phase U₁ = 525...600 V, P_n at U_n = W 575 V, 60 Hz									
02A7-6	R2	2.7	25	600	16200	684	XT4Vαβ025#*****	1.2×10 ⁶	31.5
03A9-6	R2	3.9	25	600	16200	684	XT4Vαβ025#*****	1.2×10 ⁶	31.5
06A1-6	R2	6.1	25	600	16200	684	XT4Vαβ025#*****	1.2×10 ⁶	31.5
09A0-6	R2	9	25	600	16200	684	XT4Vαβ025#*****	1.2×10 ⁶	31.5
011A-6	R2	11	25	600	16200	684	XT4Vαβ025#*****	1.2×10 ⁶	31.5
017A-6	R2	17	25	600	16200	684	XT4Vαβ025#*****	1.2×10 ⁶	31.5
022A-6	R3	22	50	600	16200	684	XT4Vαβ050#*****	1.2×10 ⁶	31.5
027A-6	R3	27	50	600	16200	1011	XT4Vαβ050#*****	1.2×10 ⁶	31.5
032A-6	R3	32	50	600	16200	1011	XT4Vαβ050#*****	1.2×10 ⁶	31.5
041A-6	R5	41	125	600	16200	2030	XT4Vαβ125#*****	1.2×10 ⁶	31.5
052A-6	R5	52	125	600	16200	2030	XT4Vαβ125#*****	1.2×10 ⁶	31.5
062A-6	R5	62	125	600	16200	2030	XT4Vαβ125#*****	1.2×10 ⁶	31.5
077A-6	R5	77	125	600	16200	2030	XT4Vαβ125#*****	1.2×10 ⁶	31.5
099A-6	R7	99	200	600	18900	3369	XT4Vαβ200#*****	1.2×10 ⁶	31.5
125A-6	R7	125	200	600	18900	3369	XT4Vαβ200#*****	1.2×10 ⁶	31.5
144A-6	R7	144	250	600	32400	3858	XT4Vαβ200#*****	1.2×10 ⁶	31.5
192A-6	R9	192	400	600	32400	5226	XT5Lαβ40A#*****	4.2×10 ⁶	51.4
242A-6	R9	242	400	600	32400	5226	XT5Lαβ40A#*****	4.2×10 ⁶	51.4
271A-6	R9	271	400	600	32400	5226	XT5Lαβ40A#*****	4.2×10 ⁶	51.4

See notes 1-9, 12-13 and 17 below

Notes:

1. Drives that have an enclosure minimum volume listed must be mounted in an enclosure \geq enclosure minimum volume specified in the tables above.
 2. When multiple drives that have an enclosure minimum volume specified are installed in the same enclosure, minimum volume of the enclosure is determined by largest enclosure minimum volume of the drives to be placed in the enclosure, plus the volume(s) of each additional drive. i.e. for the 480V R6 and R3 drive select enclosure with the volume $\geq 53703+1011 = 54714 \text{ in}^3$.
 3. For UL Type Open, Type 1 or UL Type 12 drives that have a minimum enclosure volume indicated with ∞ , no minimum enclosure volume is required but the drive must be mounted inside an enclosure.
 4. If combining a drive with an enclosure minimum volume specified and others with an enclosure minimum volume indicated with ∞ , start with the largest specified enclosure minimum volume listed and add the drive volumes for the other drives.
 5. If you are only mounting drives with no enclosure minimum volume specified, you have no restrictions on the enclosure size, but follow air clearances specified in the drive HW manuals for sufficient ventilation around each drive.
 6. Open Type, Type 1 and Type 12 drives can be used inside of the enclosure. Use drive volume for all three types listed in the table when installing multiple drives in the enclosure.
 7. The ABB circuit breaker part number listed in the table is a base part number.
 - Symbol α represents 80% or 100% allowable continuous current. Options allowed are U, Q, C and D.
 - Symbol β represents the number of poles for the breaker. Options allowed are 3, and 4.
 - Symbol # represents trip units. Trip units allowed include A thru C, E thru L, P thru Z. If using Ekip breakers, set the overload current of the circuit breaker equal to or less than the value shown in the "CB Maximum Current" column in the tables above.
 - The digits indicated with an "*" represent accessories for the breakers and have no impact on the drive UL listing or performance or rating of the breaker.
 - For the ABB circuit breaker configurator refer to: https://lowvoltage-configurator.tnb.com/configurator/#/config/tmax_xt
 8. Ratings in the tables are maximum for the given circuit breaker frame size. Breakers of the same frame size and interrupting rating with lower current ratings are also allowed.
 9. Using a circuit breaker with a lower KAIC rating is not allowed even if the available SC current is less than 65kA.
-

230V drives were tested with ABB inverse time circuit breakers rated at 65kA and 240V.

Notes 10 and 11 for 230V drives only:

10. Other manufacturers' inverse time circuit breakers can be used if they are UL 489 listed, they are 240V or higher, they have a 65kA or higher interrupting rating and they have the same or lower nominal current rating than the ABB specified circuit breaker.
11. Current limiting inverse time circuit breakers must not be used.

480V and 600V drives were tested with ABB current limiting inverse time circuit breakers rated at 65kA and 480V or 600V.

Notes 12 and 13 for 480V and 600V drives only:

12. When designing UL508A panels, Article SB 4.2.3 Exception No. 3 allows the use of other manufacturers' current limiting inverse time circuit breakers which have same voltage, current and interrupting rating, if I_{peak} and I^2t are the same or less than the ABB specified circuit breaker.
13. Non-current limiting inverse time circuit breakers must not be used.

Notes 14...16 for 480V drives only:

14. Enclosures for frames R1, R3, and R9 must have a solid bottom directly below the drive. i.e. fans, filters or louvers cannot be mounted directly below the drive but can be mounted in adjacent areas on the bottom of the enclosure.
15. Only 480V R8 frame drives with serial numbers after 1204301926 when built in Finland and after 2205002140 when built in the U.S. may be protected with circuit breakers listed in the tables above.
16. Only 480V R9 frame drives with serial numbers beginning 1204109256 when built in Finland and beginning 22106xxxxx when built in the U.S. may be protected with circuit breakers listed in the tables above.

Note 17 for 600V drives only:

17. Enclosures for frames R2, R3, R5 and R9 must have a solid bottom directly below the drive. i.e. fans, filters or louvers cannot be mounted directly below the drive but can be mounted in adjacent areas on the bottom of the enclosure.



Alternative circuit breakers can be used if they meet certain characteristics. For acceptable breakers see the manual supplement ([3AXD50000645015](#) [English]).

Dimensions, weights and free space requirements


Frame size	Dimensions and weights														
	IP21							UL Type 1							
	H1	H2	H3	H4	W	D	Weight	H1	H2	H3	H4	W	D	Weight	
	mm	mm	mm	mm	mm	mm	kg	in	in	in	in	in	in	in	lb
R1	N/A	N/A	373	331	125	223	4.6	N/A	N/A	14.69	13.03	4.92	8.78	10.1	
R2	N/A	N/A	473	432	125	229	6.6	N/A	N/A	18.62	17.01	4.92	9.00	14.6	
R3	N/A ¹⁾	N/A ¹⁾	454	490	203	229	11.8	N/A ¹⁾	N/A ¹⁾	17.87	19.29	7.99	9.02	26.0	
R4	N/A ¹⁾	N/A ¹⁾	600	636	203	257	19.0	N/A ¹⁾	N/A ¹⁾	23.62	25.04	7.99	10.12	41.9	
R5	596	596	732	633	203	295	28.3	23.46	23.46	28.82	24.90	7.99	11.61	62.4	
R6	548	549	727	589	252	369	42.4	21.57	21.63	28.62	23.20	9.92	14.53	93.5	
R7	600	601	880	641	284	370	54.0	23.62	23.67	34.65	25.25	11.18	14.57	119.1	
R8	680	677	965	721	300	393	69.0	26.77	26.66	37.99	28.39	11.81	15.47	152.1	
R9	680	680	955	741	380	418	97.0	26.77	26.77	37.60	29.19	14.96	16.46	213.9	

¹⁾ Frames with an integrated cable/conduit box

IP21 (UL Type 1) & IP55 (UL Type 12), R1...R2 IP21 (UL Type 1), R3...R4



IP21 (UL Type 1), R5...R9




Symbols

IP21 / UL Type 1


- H1** R5....R9: Height back without cable/conduit box
- H2** R5....R9: Height front without cable/conduit box
- H3** R3....R4: Height front, R1...R2, R5....R9: Height front with cable/conduit box
- H4** R1....R4: Height back, R5....R9: Height back with cable/conduit box
- W** Width
- D** Depth

Frame size	Dimensions and weights												
	IP55					UL Type 12							
	H3 mm	H4 mm	W mm	D mm	Weight kg	H3 in	H4 in	H5 in	W in	D in	Weight lb	HH in	HW in
R1	403	331	128	233	4.8	15.87	13.03	17.78	5.04	9.17	10.6	2.56	5.09
R2	503	432	128	239	6.8	19.80	17.01	21.49	5.04	9.41	15.0	2.56	5.10
R3	456	490	206	237	13.0	17.95	19.29	20.93	8.11	9.33	28.7	2.52	8.16
R4	600	636	203	265	20.0	23.62	25.04	27.03	7.99	10.43	44.1	2.83	8.59
R5	732	633	203	320	29.0	28.82	24.90	32.01	7.99	12.60	64.0	3.15	8.58
R6	727	589	252	380	43.0	28.62	23.20	34.81	9.92	14.96	94.8	6.10	11.46
R7	880	641	284	381	56.0	34.65	25.25	40.86	11.18	15.00	123.5	6.10	13.00
R8	965	721	300	452	77.0	37.99	28.39	44.23	11.81	17.80	169.8	6.10	13.80
R9	955	741	380	477	103.0	37.60	29.19	46.75	14.96	18.78	227.1	9.06	16.95

IP55 (UL Type 12¹⁾), R3...R4



IP55 (UL Type 12¹⁾), R5...R9







UL Type 12, R1...R2

UL Type 12, R3

UL Type 12, R4...R5

UL Type 12, R6...R9



Symbols

IP55 / UL Type 12¹⁾ without hood

H3 R3...R4: Height front, R1...R2²⁾ and R5...R9: Height front with cable/conduit box

H4 R3...R4: Height back, R1...R2²⁾ and R5...R9: Height back with cable/conduit box

H5 Height with hood (UL Type 12 only)

W Width

D Depth

HH Hood height

HW Hood width

²⁾ See H3 and H4 location for R1...R2 in the figure on [282](#)

Frame size	Dimensions and weights with main switch and EMC C1 filter options (+F278, +F316, +E223), IP55									
	H3		H4		W		D		Weight	
	mm	in	mm	in	mm	in	mm	in	kg	lb
R1	403	15.87	331	13.03	128	5.04	255	10.03	5.4	11.8
R2	503	19.80	432	17.01	128	5.04	257	10.12	7.4	16.4
R3	733	28.86	519	20.43	207	8.15	258	10.16	15.0	33.1
R4	879	34.61	665	26.18	206	8.11	286	11.26	23.3	51.5
R5	1023	40.28	626	24.65	203	7.99	342	13.46	33.0	72.8

For the symbols see page 284.

Frame size	Dimensions with flange option kit (+C135), IP21 (UL Type 1) & IP55 (UL Type 12)								UL Type 12 hood	
	H		W		D1		D2		D3	
	mm	in	mm	in	mm	in	mm	in	mm	in
R1	461	18.15	206	8.12	133	5.22	109	4.28	126	4.95
R2	551	21.69	206	8.12	130	5.13	114	4.51	126	4.95
R3	613	24.13	290	11.42	118	4.65	116	4.58	191	7.53
R4	776	30.55	290	11.42	120	4.74	137	5.41	191	7.53
R5	776	30.55	290	11.42	124	4.89	173	6.81	191	7.53
R6	672	26.46	374	14.72	194	7.63	170	6.67	191	7.53
R7	722	28.43	406	15.98	195	7.67	169	6.65	211	8.32
R8	814	32.01	433	17.46	202	7.95	184	7.22	209	8.22
R9	804	31.65	502	19.76	204	8.03	209	8.21	226	8.91

H Height with flange


W Width with flange

D1 Depth of the drive outwards from the outer surface of the flange plate


D2 Depth of the drive inwards from the outer surface of the flange plate

D3 Depth of the hood inwards from the outer surface of the flange plate (UL Type 12 only)

R1...R3 IP21 (UL Type 1)^{1,2)}




R1...R3 IP55 (UL Type 12)^{1,2)}




¹⁾ For the actual degree of protection that can be achieved with flange for each frame size (on the back and front sides of the drive), see *Flange mounting kit installation supplement* (3AXD50000019100 [English]).

R4...R9 IP21 (UL Type 1)^{1,2)}



R4...R9 IP55 (UL Type 12)^{1,2)}



¹⁾ For the actual degree of protection that can be achieved with flange for each frame size (on the back and front sides of the drive), see *Flange mounting kit installation supplement* (3AXD50000019100 [English]).

²⁾ Regarding flange mounting:

- The outside of the cabinet sets the limit for vertical positioning, since that is where the cooling is required
- There are no limitations inside the cabinet; practically the outside positioning defines the distance between drives
- The space inside the cabinet can be used as long as the following requirements are still met:
 - Heat loss dissipation inside the cabinet per the hardware manual
 - Sufficient space for the maintenance operations
 - Wire bending radius rules according to UL when planning routing for mains and motor cables.

Frame size	Free space, IP21 (UL Type 1)											
	Vertical mounting stand alone						Vertical mounting side by side					
	Above		Below ¹⁾		Beside		Above		Below ¹⁾		Between	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
R1	150	5.91	86	3.39	150	5.91	200	7.87	200	7.87	0	0
R2	150	5.91	86	3.39	150	5.91	200	7.87	200	7.87	0	0
R3	200	7.87	53	2.09	150	5.91	200	7.87	200	7.87	0	0
R4	53	2.09	200	7.87	150	5.91	200	7.87	200	7.87	0	0
R5	100	3.94	200	7.87	150	5.91	200	7.87	200	7.87	0	0
R6	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R7	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R8	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R9	200	7.87	300	11.81	150	5.91	200	7.87	300	11.81	0	0

¹⁾ Free space below is always measured from the drive frame, not from the cable box.

Frame size	Free space, IP21 (UL Type 1) ¹⁾					
	Horizontal mounting					
	Above ²⁾		Below ^{2,3)}		Between ²⁾	
	mm	in	mm	in	mm	in
R1	150	5.91	86	3.39	30/200	1.18/7.87
R2	150	5.91	86	3.39	30/200	1.18/7.87
R3	200	7.87	53	2.09	30/200	1.18/7.87
R4	30	1.18	200	7.87	30/200	1.18/7.87
R5	30	1.18	200	7.87	30/200	1.18/7.87

¹⁾ **Note:** Horizontal installation meets IP20 requirements only.

²⁾ For definition, see the figure on page 55.

³⁾ Free space below is always measured from the drive frame, not from the cable box.

Frame size	Free space, IP55 (UL Type 12)											
	Vertical mounting stand alone						Vertical mounting side by side					
	Above		Below ¹⁾		Beside		Above		Below ¹⁾		Between	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
R1	137	5.39	116	4.57	150	5.91	200	7.87	200	7.87	0	0
R2	137	5.39	116	4.57	150	5.91	200	7.87	200	7.87	0	0
R3	200	7.87	53	2.09	150	5.91	200	7.87	200	7.87	0	0
R4	53	2.0	200	7.87	150	5.91	200	7.87	200	7.87	0	0
R5	100	3.94	200	7.87	150	5.91	200	7.87	200	7.87	0	0
R6	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R7	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R8	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R9	200	7.87	300	11.81	150	5.91	200	7.87	300	11.81	0	0

¹⁾ Free space below is always measured from the drive frame, not from the cable box.

Frame size	Free space, IP55 (UL Type 12) ¹⁾					
	Horizontal mounting					
	Above ³⁾		Below ^{2,3)}		Between ³⁾	
	mm	in	mm	in	mm	in
R1	137	5.39	116	4.57	30/200	1.18/7.87
R2	137	5.39	116	4.57	30/200	1.18/7.87
R3	200	7.87	53	2.09	30/200	1.18/7.87
R4	30	1.18	200	7.87	30/200	1.18/7.87
R5	30	1.18	200	7.87	30/200	1.18/7.87

¹⁾ **Note:** IP55/Type 12 drive mounted horizontally meet IP21/Type 1 ratings.

²⁾ For definition, see the figure on page 55.

³⁾ Free space below is always measured from the drive frame, not from the cable box.

See the figures in section [Examining the installation site](#) on page 52.

Note: IP55 (UL Type 12) does not imply that the drive can be installed outside/outdoors. To install outside, contact your local ABB representative directly for specific instructions (3AXD10000425906). The warranty will be void if installed outdoors without using these special instructions.

Losses, cooling data and noise

The air flow direction is from bottom to top.

■ Cooling air flow, heat dissipation and noise for stand-alone drives

IEC

Type ACS580-01-	Typical heat dissipation ¹⁾		Air flow		Noise	Frame size
	W	BTU/h	m ³ /h	CFM	dB(A)	
3-phase U_n = 230 V						
04A7-2	51	-	43	25	59	R1
06A7-2	70	-	43	25	59	R1
07A6-2	80	-	43	25	59	R1
012A-2	142	-	43	25	59	R1
018A-2	228	-	43	25	59	R1
025A-2	253	-	101	59	64	R2
032A-2	358	-	101	59	64	R2
047A-2	527	-	179	105	76	R3
060A-2	775	-	179	105	76	R3
089A-2	876	-	139	82	63	R5
115A-2	1285	-	139	82	63	R5
144A-2	1932	-	435	256	67	R6
171A-2	2000	-	450	265	67	R7
213A-2	2854	-	450	265	67	R7
276A-2	3567	-	550	324	65	R8
3-phase U_n = 400 or 480 V						
02A7-4	42	-	43	25	59	R1
03A4-4	50	-	43	25	59	R1
04A1-4	59	-	43	25	59	R1
05A7-4	83	-	43	25	59	R1
07A3-4	97	-	43	25	59	R1
09A5-4	135	-	43	25	59	R1
12A7-4	211	-	43	25	59	R1
018A-4	238	-	101	59	64	R2
026A-4	382	-	101	59	64	R2
033A-4	486	-	179	105	76	R3
039A-4	517	-	179	105	76	R3
046A-4	667	-	179	105	76	R3
062A-4	867	-	134	79	69	R4
073A-4	1114	-	134	79	69	R4
088A-4	1139	-	139	82	63	R5
106A-4	1290	-	139	82	63	R5
145A-4	1960	-	435	256	67	R6
169A-4	2021	-	450	265	67	R7
206A-4	2785	-	450	265	67	R7
246A-4	3126	-	550	324	65	R8
293A-4	4066	-	550	324	65	R8
363A-4	4834	-	1150	677	68	R9

Type ACS580-01-	Typical heat dissipation ¹⁾		Air flow		Noise	Frame size
	W	BTU/h	m ³ /h	CFM	dB(A)	
430A-4	6067	-	1150	677	68	R9

¹⁾ Typical drive losses when it operates at 90% of the motor nominal frequency and 100% of the drive nominal output current.

UL (NEC)

Type ACS580-01-	Typical heat dissipation		Air flow		Noise	Frame size
	W	BTU/h	m ³ /h	CFM	dB(A)	
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V, 60 Hz						
04A6-2	50	-	43	25	59	R1
06A6-2	69	-	43	25	59	R1
07A5-2	79	-	43	25	59	R1
10A6-2	120	-	43	25	59	R1
017A-2	203	-	43	25	59	R1
024A-2	247	-	101	59	64	R2
031A-2	348	-	101	59	64	R2
046A-2	518	-	179	105	76	R3
059A-2	762	-	179	105	76	R3
075A-2	809	-	288	170	69	R4
088A-2	861	-	139	82	63	R5
114A-2	1268	-	139	82	63	R5
143A-2	1916	-	435	256	67	R6
169A-2	1965	-	450	265	67	R7
211A-2	2089	-	450	265	67	R7
273A-2	3518	-	550	324	65	R8
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz						
02A1-4	37	-	43	25	59	R1
03A0-4	47	-	43	25	59	R1
03A5-4	52	-	43	25	59	R1
04A8-4	71	-	43	25	59	R1
06A0-4	79	-	43	25	59	R1
07A6-4	103	-	43	25	59	R1
012A-4	200	-	43	25	59	R1
014A-4	186	-	101	59	64	R2
023A-4	342	-	101	59	64	R2
027A-4	386	-	179	105	76	R3
034A-4	446	-	179	105	76	R3
044A-4	656	-	179	105	76	R3
052A-4	671	-	134	79	69	R4
065A-4	719	-	134	79	69	R4
077A-4	1047	-	288	170	63	R4
078A-4	941	-	139	82	63	R5
096A-4	1127	-	139	82	63	R5
124A-4	1563	-	435	256	67	R6
156A-4	1815	-	450	265	67	R7
180A-4	2285	-	450	265	67	R7
240A-4	3039	-	550	324	65	R8
260A-4	3398	-	550	324	65	R8
302A-4	3253	-	550	324	68	R9
361A-4	4836	-	1150	677	68	R9
414A-4	5691	-	1150	677	68	R9

Type ACS580-01-	Typical heat dissipation		Air flow		Noise	Frame size
	W	BTU/h	m ³ /h	CFM	dB(A)	
3-phase $U_l = 525...600$ V, P_n at $U_n = W$ 575 V, 60 Hz						
02A7-6	66	224	101	59	64	R2
03A9-6	84	288	101	59	64	R2
06A1-6	133	454	101	59	64	R2
09A0-6	174	593	101	59	64	R2
011A-6	228	777	101	59	64	R2
017A-6	322	1100	101	59	64	R2
022A-6	430	1469	179	105	75	R3
027A-6	525	1791	179	105	75	R3
032A-6	619	2114	179	105	75	R3
041A-6	835	2852	139	82	63	R5
052A-6	1024	3497	139	82	63	R5
062A-6	1240	4235	139	82	63	R5
077A-6	1510	5157	139	82	63	R5
099A-6	2061	7039	450	265	67	R7
125A-6	2466	8422	450	265	67	R7
144A-6	3006	10266	550	324	65	R8
192A-6	4086	13954	1150	677	68	R9
242A-6	4896	16271	1150	677	68	R9
271A-6	4896	16271	1150	677	68	R9

■ **Cooling air flow and heat dissipation for flange mounting (option +C135)**

Flange mounting kit is ordered separately in North America, not with a plus code.

IEC

Type ACS580 -01-	Heat dissipation (+C135)		Air flow (+C135)				Frame size
	Heatsink	Front	Heatsink		Front		
	W	W	m ³ /h	CFM	m ³ /h	CFM	
3-phase $U_n = 400$ or 480 V							
02A7-4	20	23	TBA	TBA	TBA	TBA	R1
03A4-4	28	23	TBA	TBA	TBA	TBA	R1
04A1-4	36	23	TBA	TBA	TBA	TBA	R1
05A7-4	60	23	TBA	TBA	TBA	TBA	R1
07A3-4	72	24	TBA	TBA	TBA	TBA	R1
09A5-4	109	25	TBA	TBA	TBA	TBA	R1
12A7-4	181	28	TBA	TBA	TBA	TBA	R1
018A-4	192	43	TBA	TBA	TBA	TBA	R2
026A-4	322	54	TBA	TBA	TBA	TBA	R2
033A-4	418	71	TBA	TBA	TBA	TBA	R3
039A-4	439	82	TBA	TBA	TBA	TBA	R3
046A-4	578	92	TBA	TBA	TBA	TBA	R3
062A-4	729	127	TBA	TBA	TBA	TBA	R4
073A-4	947	151	TBA	TBA	TBA	TBA	R4
088A-4	977	141	TBA	TBA	TBA	TBA	R5
106A-4	1099	165	TBA	TBA	TBA	TBA	R5
145A-4	1733	188	435	256	52	31	R6
169A-4	1758	223	450	265	75	44	R7
206A-4	2464	266	450	265	75	44	R7
246A-4	2743	326	550	324	120	71	R8
293A-4	3601	391	550	324	120	71	R8
363A-4	4220	524	1150	677	170	100	R9
430A-4	5330	623	1150	677	170	100	R9

UL (NEC)

Type ACS580 -01-	Heat dissipation (with flange kit)		Air flow (with flange kit)				Frame size
	Heatsink	Front	Heatsink		Front		
	W	W	m ³ /h	CFM	m ³ /h	CFM	
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz							
02A1-4	20	23	TBA	TBA	TBA	TBA	R1
03A0-4	28	23	TBA	TBA	TBA	TBA	R1
03A5-4	36	23	TBA	TBA	TBA	TBA	R1
04A8-4	60	23	TBA	TBA	TBA	TBA	R1
06A0-4	72	24	TBA	TBA	TBA	TBA	R1
07A6-4	109	25	TBA	TBA	TBA	TBA	R1

Type ACS580 -01-	Heat dissipation (with flange kit)		Air flow (with flange kit)				Frame size
	Heatsink	Front	Heatsink		Front		
	W	W	m ³ /h	CFM	m ³ /h	CFM	
012A-4	181	28	TBA	TBA	TBA	TBA	R1
014A-4	192	43	TBA	TBA	TBA	TBA	R2
023A-4	322	54	TBA	TBA	TBA	TBA	R2
027A-4	418	71	TBA	TBA	TBA	TBA	R3
034A-4	439	82	TBA	TBA	TBA	TBA	R3
044A-4	578	92	TBA	TBA	TBA	TBA	R3
052A-4	729	127	TBA	TBA	TBA	TBA	R4
065A-4	947	151	TBA	TBA	TBA	TBA	R4
078A-4	977	141	TBA	TBA	TBA	TBA	R5
096A-4	1099	165	TBA	TBA	TBA	TBA	R5
124A-4	1733	188	435	256	52	31	R6
156A-4	1758	223	450	265	75	44	R7
180A-4	2464	266	450	265	75	44	R7
240A-4	2743	326	550	324	120	71	R8
260A-4	3601	391	550	324	120	71	R8
302A-4	2849	340	TBA	TBA	TBA	TBA	R9
361A-4	4220	524	1150	677	170	100	R9
414A-4	5330	623	1150	677	170	100	R9

Terminal and lead-through data for the power cables

■ IEC

Input, motor, resistor and DC cable lead-throughs, maximum wire sizes (per phase) and terminal screw sizes and tightening torques (T) are given below.

Frame size	Cable lead-through		L1, L2, L3, T1/U, T2/V, T3/W terminals			Grounding terminals	
	Per cable type	$\varnothing^{1)}$	Min wire size (solid/stranded) ³⁾	Max wire size (solid/stranded)	T	Max wire size	T
		pcs					
3-phase $U_n = 230\text{ V}$							
R1	1	30	0.2/0.2	6/4	1.0	16/16	1.5
R2	1	30	0.5/0.5	16/16	1.5	16/16	1.5
R3	1	30	0.5/0.5	35/35	3.5	35/35	1.5
R5	1	45	6	70	5.6	-	2.2
R6	1	45	25	150	30	180	9.8
R7	1	54	95	240	40	180	9.8
R8	2	45	2×50	2×150	40	2×180	9.8
3-phase $U_n = 400\text{ or }480\text{ V}$							
R1	1	30	0.20/0.25	6/4	1.0	16/16	1.5
R2	1	30	0.5/0.5	16/16	1.5	16/16	1.5
R3	1	30	0.5/0.5	35/25	3.5	35/35	1.5
R4	1	45	0.5/0.5	50	4.0	35/35	1.5
R5	1	45	6	70	5.6	35/35 ²⁾	2.9
R6	1	45	25	150	30	185 ²⁾	2.2
R7	1	54	95	240	40	185 ²⁾	9.8
R8	2	45	2×50	2×150	40	2×185 ²⁾	9.8
R9	2	54	2×95	2×240	70	2×185 ²⁾	9.8

¹⁾ Maximum cable diameter accepted. For the lead-through plate hole diameters, see chapter *Dimension drawings* on page 323.

²⁾ Either cable lug (R5, see page 135) or clamp (R6...R9, see page 139) is used for grounding.

³⁾ **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

Note: For the tightening torques of the grounding terminals, see sections *Connection procedure, frames R1...R4* on page 124, *Connection procedure, frame R5* on page 131 and *Connection procedure, frames R6...R9* on page 137.

Frame size	Cable lead-through		R+, R-, UDC+ and UDC- terminals			
	Per cable type	Ø ¹⁾	Min wire size (solid/stranded) ³⁾	Max wire size (solid/stranded)	T	
					Screw/Bolt	N·m
pcs	mm	mm ²	mm ²			
3-phase U_n = 230 V						
R1	1	23	0.2/0.2	6/4	2)	1.0
R2	1	23	0.5/0.5	16/16	2)	1.5
R3	1	30	0.5/0.5	35/35	2)	3.5
R5	1	39	6	70	M5	5.6
R6	1	45	25	150	M8	30
R7	1	54	95	240	M10	30
R8	2	45	2×50	2×150	M10	40
3-phase U_n = 400 or 480 V						
R1	1	23	0.20/0.25	6/4	2)	1.0
R2	1	23	0.5/0.5	16/16	2)	1.5
R3	1	23	0.5/0.5	35/25	2)	3.5
R4	1	39	0.5/0.5	50	2)	4.0
R5	1	39	6	70	M5	5.6
R6	1	45	25	150	M8	30
R7	1	54	95	240	M10	30
R8	2	45	2×50	2×150	M10	40
R9	2	54	2×95	2×240	M12	70

¹⁾ Maximum cable diameter accepted. For the lead-through plate hole diameters, see chapter [Dimension drawings](#) on page 323.

²⁾ See the table below.

³⁾ **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

Frame size	Screwdrivers for the terminals of the main circuit
R1	Combo: Slot 4 mm and PH1
R2	Combo: Slot 4.5 mm and PH2
R3, R4	PH2

■ UL (NEC)

Input, motor, resistor and DC cable lead-throughs, maximum wire sizes (per phase) and terminal screw sizes and tightening torques (T) are given below.

Frame size	Cable lead-through		L1, L2, L3, T1/U, T2/V, T3/W terminals			Grounding terminals		
	Per cable type	$\varnothing^{1)}$	Wire range stranded/solid ³⁾		T	Wire range stranded/solid ³⁾		T
			Min	Max		Min	Max	
	pcs	in	AWG	AWG	lbf-ft	AWG	AWG	lbf-ft
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V, 60 Hz								
R1	1	1.18	24	10	0.7	18	6	1.1
R2	1	1.18	20	6	1.1	18	6	1.1
R3	1	1.18	20	2	2.6	18	2	1.1
R5	1	1.77	10	2/0	4.1	2)	2)	1.6
R6	1	1.77	4	300 MCM	22.1	2)	350 MCM	7.2
R7	1	2.13	3/0	500MCM	29.5	2)	350 MCM	7.2
R8	2	1.77	2×1/0	2×300MCM	29.5	2)	2×350 MCM	7.2
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz								
R1	1	1.18	24	10	0.7	18	6	1.1
R2	1	1.18	20	6	1.1	18	6	1.1
R3	1	1.18	20	2	2.6	24	2	1.1
R4	1	1.77	20	1	3.0	12	2	2.1
R5	1	1.77	10	2/0	4.1	2)	2	1.6
R6	1	1.77	4	300 MCM	22.1	2)	350 MCM	7.2
R7	1	2.13	3/0	500 MCM	29.5	2)	350 MCM	7.2
R8	2	1.77	2×1/0	2×300 MCM	29.5	2)	2×350 MCM	7.2
R9	2	2.13	2×3/0	2×500 MCM	51.6	2)	2×350 MCM	7.2
3-phase $U_1 = 525...600$ V, P_n at $U_n = 575$ V, 60 Hz								
R2	1	1.18	20	6	1.1	18	6	1.1
R3	1	1.18	20	2	2.6	18	6	1.1
R5	1	1.77	10	2/0	4.1	2)	2)	1.6
R7	1	2.13	3/0	500 MCM	29.5	2)	350 MCM	7.2
R8	2	1.77	2×1/0	2×300MCM	29.5	2)	2×350 MCM	7.2
R9	2	2.13	2×3/0	2×500 MCM	51.6	2)	2×350 MCM	7.2

¹⁾ Maximum cable diameter accepted. For the lead-through plate hole diameters, see chapter *Dimension drawings* on page 323.

²⁾ Either cable lug, not provided (R5, see page 185) or cable clamp (R6...R9, see page 190) is used for grounding.

³⁾ **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

Note: For the tightening torques of the grounding terminals, see sections *Connection procedure, frames R1...R4* on page 178, *Connection procedure, frame R5* on page 183 and *Connection procedure, frames R6...R9* on page 188.

Frame size	Cable lead-through		R+, R-, UDC+ and UDC- terminals			
	Per cable type	$\varnothing^{1)}$	Wire range stranded/solid ³⁾		T	
			Min	Max	Screw/Bolt	lbf. ft
	pcs	in	AWG	AWG		
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V, 60 Hz						
R1	1	0.91	24	10	2)	0.7
R2	1	0.91	20	6	2)	1.1
R3	1	1.18	20	2	2)	2.6
R4	1	1.54	50	1	2)	3.0
R5	1	1.54	10	2/0	M5	4.1
R6	1	1.77	4	300 MCM	M8	22.1
R7	1	2.13	3/0	500 MCM	M10	29.5
R8	2	1.77	2×1/0	2×300 MCM	M10	29.5
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz						
R1	1	0.91	24	10	2)	0.7
R2	1	0.91	20	6	2)	1.1
R3	1	0.91	20	2	2)	2.6
R4	1	1.54	50	1	2)	3.0
R5	1	1.54	10	2/0	M5	4.1
R6	1	1.77	4	300 MCM	M8	22.1
R7	1	2.13	3/0	500 MCM	M10	29.5
R8	2	1.77	2×1/0	2×300 MCM	M10	29.5
R9	2	2.13	2×3/0	2×500 MCM	M12	51.6
3-phase $U_1 = 525...600$ V, P_n at $U_n = 575$ V, 60 Hz						
R2	1	0.91	20	6	2)	1.1
R3	1	1.18	20	2	2)	2.6
R5	1	1.54	10	2/0	M5	4.1
R7	1	2.13	3/0	500 MCM	M10	29.5
R8	2	1.77	2×1/0	2×300 MCM	M10	29.5
R9	2	2.13	2×3/0	2×500 MCM	-	51.6

¹⁾ Maximum cable diameter accepted. For the lead-through plate hole diameters, see chapter *Dimension drawings* on page 323.

²⁾ See the table below.

³⁾ **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

Frame size	Screwdrivers for the terminals of the main circuit
R1	Combo: Slot 4 mm and PH1
R2	Combo: Slot 4.5 mm and PH2
R3, R4	PH2

Terminal and lead-through data for the control cables

■ IEC

Control cable lead-throughs, wire sizes and tightening torques (T) are given below.

Frame size	Cable lead-through		Control cable entries and terminal sizes			
	Holes pcs	Max cable size mm	+24V, DCOM, DGND, EXT. 24V terminals		DI, AI/O, AGND, RO, STO terminals	
			Wire size mm ²	T N·m	Wire size mm ²	T N·m
3-phase $U_n = 230\text{ V}$						
R1	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R2	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R3	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R5	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R6	4	17	0.14...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R7	4	17	0.14...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R8	4	17	0.14...2.5	0.5...0.6	0.14...1.5	0.5...0.6
3-phase $U_n = 400\text{ or }480\text{ V}$						
R1	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R2	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R3	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R4	4	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R5	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R6	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6
R7	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6
R8	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6
R9	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6

■ UL (NEC)

Control cable lead-throughs, wire sizes and tightening torques (T) are given below.

Frame size	Cable lead-through		Control cable entries and terminal sizes			
	Holes pcs	Max cable size in	+24V, DCOM, DGND, EXT. 24V terminals		DI, AI/O, AGND, RO, STO terminals	
			Wire size AWG	T lbf-ft	Wire size AWG	T lbf-ft
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V, 60 Hz						
R1	3	0.67	24...14	0.4	26...16	0.4
R2	3	0.67	24...14	0.4	26...16	0.4
R3	3	0.67	24...14	0.4	26...16	0.4
R4	4	0.67	24...14	0.4	26...16	0.4
R5	3	0.67	24...14	0.4	26...16	0.4
R6	4	0.67	26...14	0.4	26...16	0.4
R7	4	0.67	26...14	0.4	26...16	0.4
R8	4	0.67	26...14	0.4	26...16	0.4
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V, 60 Hz						
R1	3	0.67	24...14	0.4	26...16	0.4
R2	3	0.67	24...14	0.4	26...16	0.4
R3	3	0.67	24...14	0.4	26...16	0.4
R4	4	0.67	24...14	0.4	26...16	0.4
R5	3	0.67	24...14	0.4	26...16	0.4
R6	4	0.67	26...14	0.4	26...14	0.4
R7	4	0.67	26...14	0.4	26...14	0.4
R8	4	0.67	26...14	0.4	26...14	0.4
R9	4	0.67	26...14	0.4	26...14	0.4
3-phase $U_1 = 525...600$ V, P_n at $U_n = 575$ V, 60 Hz						
R2	3	0.67	24...14	0.4	26...16	0.4
R3	3	0.67	24...14	0.4	26...16	0.4
R5	3	0.67	24...14	0.4	26...16	0.4
R7	4	0.67	26...14	0.4	26...16	0.4
R8	4	0.67	24...14	0.4	26...16	0.4
R9	4	0.67	26...14	0.4	26...16	0.4

Electrical power network specification

<p>Voltage (U_1)</p>	<ul style="list-style-type: none"> • ACS580-01-xxxx-2 drives: Input voltage range 3~208...240 V AC +10%... -15%. <u>IEC:</u> This is indicated in the type designation label as typical input voltage levels 3~ 230 V AC. <u>North America:</u> This is indicated in the type designation label as typical input voltage levels 1~ 208/230 V AC and 3~ 208/230 V AC. • ACS580-01-xxxx-4 drives: Input voltage range 3~380...480 V AC +10%... -15%. This is indicated in the type designation label as typical input voltage levels 3~ 400/480 V AC. • ACS580-01-xxxx-6 drives: Input voltage range 3~525...600 V AC +10%... -15%. This is indicated in the type designation label as typical input voltage level 3~ 600 V AC.
<p>Network type</p>	<p>Public low voltage networks. Symmetrically grounded TN-S system, IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems.</p> <p>See section:</p> <p><i>IEC: When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems on page 117, and Guidelines for installing the drive to a TT system on page 118.</i></p> <p><i>North America: When to connect EMC filter or disconnect ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems on page 169, and Guidelines for installing the drive to a TT system on page 170.</i></p> <p>Note: IEC: Frames R4 and R5 cannot be used in corner-grounded or midpoint-grounded delta systems.</p>
<p>Rated conditional short-circuit current (IEC 61800-5-1)</p>	<p>65 kA when protected by fuses given in the tables in section <i>Fuses (IEC)</i> on page 269.</p>
<p>Short-circuit current protection (UL 61800-5-1)</p>	<p>US and Canada: The drive is suitable for use on a circuit capable of delivering not more than 100 kA symmetrical amperes (rms) at 480 V maximum when protected by fuses given in the table in section <i>Fuses (UL)</i> on page 275.</p> <p>US and Canada: The drive is suitable for use on a circuit capable of delivering not more than 65 kA symmetrical amperes (RMS) maximum when protected by circuit breakers given in the table in section <i>Circuit breakers (UL)</i> on page 278.</p>
<p>Frequency (f_1)</p>	<p>48...63 Hz. This is indicated in the type designation label as typical input frequency level f_1 (50/60 Hz).</p>
<p>Imbalance Fundamental power factor (cos ϕ_1)</p>	<p>Max. \pm 3% of nominal phase to phase input voltage 0.98 (at nominal load)</p>

**Minimum short-circuit power
(IEC/EN 61000-3-12)**

The minimum short-circuit power S_{sc} given for each drive type for the R_{scc} (transformer short circuit ratio) value of 350.

Type ACS580 -01-	Input rating	Min. short circuit power		Frame size
		400 V	480 V	
	I_1	S_{sc}	S_{sc}	
	A	MVA	MVA	
3-phase $U_n = 400\text{ V}$ and 480 V, IEC ratings				
02A7-4	2.6	0.63	0.61	R1
03A4-4	3.3	0.80	0.87	R1
04A1-4	4.0	0.97	1.02	R1
05A7-4	5.6	1.36	1.40	R1
07A3-4	7.2	1.75	1.75	R1
09A5-4	9.4	2.28	2.21	R1
12A7-4	12.6	3.06	3.49	R1
018A-4	17.0	4.12	4.07	R2
026A-4	25.0	6.06	6.69	R2
033A-4	32.0	7.76	7.86	R3
039A-4	38.0	9.21	9.89	R3
046A-4	45.0	10.91	12.80	R3
062A-4	62	15.03	15.13	R4
073A-4	73	17.70	18.91	R4
088A-4	88	21.34	22.41	R5
106A-4	106	25.70	27.93	R5
145A-4	145	35.16	36.08	R6
169A-4	169	40.98	45.39	R7
206A-4	206	49.95	52.38	R7
246A-4	246	59.65	69.84	R8
293A-4	293	71.05	75.66	R8
363A-4	363	88.02	105.05	R9
430A-4	430	104.27	120.47	R9

Motor connection data

Motor types	Asynchronous AC induction motors, permanent magnet motors and synchronous reluctance motors (SynRM)
Short-circuit current protection (IEC/EN 61800-5-1)	The drive provides solid state short circuit protection for the motor connection per IEC/EN 61800-5-1 and UL 61800-5-1.
Frequency (f_2)	0...500 Hz. This is indicated in the type designation label as output frequency level f1 (0...500 Hz).
Frequency resolution	0.01 Hz
Current	See section Electrical ratings on page 242.

Switching frequency

2 kHz, 4 kHz (default), 8 kHz, 12 kHz

Maximum recommended motor cable length

Operational functionality and motor cable length

The drive is designed to operate with optimum performance with the following maximum motor cable lengths.

Note: Conducted and radiated emissions of these motor cable lengths do not comply with EMC requirements.

Frame size	Maximum motor cable length, 4 kHz			
	Scalar control		Vector control	
	m	ft	m	ft
Standard drive, without external options				
R1	100	330	100	330
R2*	200	660	200	660
R3*	300	990	300	990
R4	300	990	300	990
R5	300	990	300	990
R6	300	990	300	990
R7	300	990	300	990
R8	300	990	300	990
R9	300	990	300	990

*For 600 V drives the maximum motor cable length is 100 m (330 ft) for frame R2 and 200 m (660 ft) for frame R3.

Note 1: In multimotor systems, the calculated sum of all motor cable lengths must not exceed the maximum motor cable length given in the table.

Note 2: Longer motor cables cause a motor voltage decrease which limits the available motor power. The decrease depends on the motor cable length and characteristics. Contact your local ABB representative for more information.

Note 3: When using longer motor cables than 50 m (165 ft), 8 and 12 kHz switching frequencies are not allowed. With motor cable length over 100 m, disconnect EMC DC screw if applicable.

Note 4: Acceptable motor cable length for motor manufactures may be different. Check with specific motor manufacturer for maximum allowable distance.

EMC compatibility and motor cable length

To comply with the European EMC Directive (standard IEC 61800-3), use the following maximum motor cable lengths at 4 kHz switching frequency. See the table below.

Frame size	Maximum motor cable length, 4 kHz	
	m	ft
EMC limits for Category C2¹⁾ Standard drive with an internal EMC filter. See notes 1, 2 and 3.		
R1	100	330
R2	100	330
R3	100	330
R4	100	330
R5	100	330
R6	150	492
R7	150	492
R8	150	492
R9	150	492
EMC limits for Category C3¹⁾ Standard drive with an internal EMC filter. See notes 3 and 4.		
R1	150	492
R2	150	492
R3	150	492
R4	150	492
R5	150	492
R6	150	492
R7	150	492
R8	150	492
R9	150	492

¹⁾ See the terms in section *Definitions* on page 317.

Note 1: Radiated and conducted emissions are according to category C2 with a internal EMC filter. The internal EMC filter must be connected.

Note 2: Categories C1 and C2 meet requirements for connecting equipment to the public low-voltage networks.

Note 3: Not applicable to 600 V ratings.

Note 4: Radiated and conducted emissions are according to category C3 with an internal EMC filter. The internal EMC filter must be connected.

Brake resistor connection data for frames R1...R3

Short-circuit protection

(IEC/EN 61800-5-1, IEC 61439-1)

The brake resistor output is conditionally short-circuit proof by IEC/EN 61800-5-1. Rated conditional short-circuit current as defined in IEC 61439-1.

Control connection data

External power supply

Maximum power:

Frames R1...R5: 25 W, 1.04 A at 24 V AC/DC $\pm 10\%$ with an option module

Frames R6...R9: 36 W, 1.50 A at 24 V AC/DC $\pm 10\%$ as standard

Supplied from an external power supply through option module CMOD-01 or CMOD-02 with frames R1...R5. With frames R6...R9 no options are needed.

Terminal size:

Frames R1...R5: 0.2...2.5 mm² (24...14 AWG)

Frames R6...R9: 0.14...2.5 mm² (26...14 AWG)

+24 V DC output (Term. 10)

Total load capacity of this outputs is 6.0 W (250 mA / 24 V) minus the power taken by the option modules installed on the board.

Terminal size:

Frames R1...R5: 0.2...2.5 mm² (24...14 AWG)

Frames R6...R9: 0.14...2.5 mm² (26...14 AWG)

Digital inputs DI1...DI6 (Term. 13...18)

Input type: NPN/PNP

Terminal size:

Frames R1...R5: 0.14...1.5 mm² (26...16 AWG)

Frames R6...R9: 0.14...2.5 mm² (26...14 AWG)

DI1...DI4 (Term. 13...16)

12/24 V DC logic levels: "0" < 4 V, "1" > 8 V, 10...24 V AC

R_{in} : 3 kohm

Hardware filtering: 0.04 ms, digital filtering: 2 ms sampling

DI5 (Term. 17)

Can be used as a digital or frequency input.

12/24 V DC logic levels: "0" < 4 V, "1" > 8 V, 10...24 V AC

R_{in} : 3 kohm

Max. frequency 16 kHz

Symmetrical signal (duty cycle D = 0.50)

DI6 (Term. 18)

Can be used as a digital or PTC input.

Digital input mode

12/24 V DC logic levels: "0" < 3 V, "1" > 8 V


R_{in} : 3 kohm



Hardware filtering: 0.04 ms, digital filtering: 2 ms sampling

Relay outputs RO1...RO3 (Term. 19...27)	<p>Note: DI6 is not supported in the NPN configuration. PTC mode – PTC thermistor can be connected between DI6 and +24 V DC: < 1.5 kohm = '1' (low temperature), > 4 kohm = '0' (high temperature), open circuit = '0' (high temperature).</p> <p>DI6 is not a reinforced/double insulated input. Connecting the motor PTC sensor to this input requires usage of a reinforced/double insulated PTC sensor inside the motor.</p> <p>250 V AC / 30 V DC, 2 A</p> <p>Terminal size:</p> <p>Frames R1...R5: 0.14...1.5 mm²</p> <p>Frames R6...R9: 0.14...2.5 mm²</p>
Analog inputs AI1 and AI2 (Term. 2 and 5)	<p>See sections <i>Isolation areas, R1...R5</i> on page 308 and <i>Isolation areas, R6...R9</i> on page 309.</p> <p>Current/voltage input mode selected with a parameter.</p> <p>Current input: 0(4)...20 mA, R_{in}: 100 ohm</p> <p>Voltage input: 0(2)...10 V, R_{in}: > 200 kohm</p> <p>Terminal size:</p> <p>Frames R1...R5: 0.14...1.5 mm²</p> <p>Frames R6...R9: 0.14...2.5 mm²</p>
Analog outputs AO1 and AO2 (Term. 7 and 8)	<p>Inaccuracy: typical $\pm 1\%$, max. $\pm 1.5\%$ of full scale</p> <p>Current/voltage input mode selected with a parameter.</p> <p>Current output: 0...20 mA, R_{load}: < 500 ohm</p> <p>Voltage output: 0...10 V, R_{load}: > 100 kohm (AO1 only)</p> <p>Terminal size:</p> <p>Frames R1...R5: 0.14...1.5 mm²</p> <p>Frames R6...R9: 0.14...2.5 mm²</p>
Reference voltage output for analog inputs +10V DC (Term. 4)	<p>Inaccuracy: $\pm 1\%$ of full scale (in voltage and current modes)</p> <p>Max. 20 mA output</p> <p>Inaccuracy: $\pm 1\%$</p>
Embedded fieldbus (Term. 29...31)	<p>Connector pitch 5 mm, wire size 2.5 mm²</p> <p>Physical layer: EIA-485</p> <p>Cable type: Shielded twisted pair cable with twisted pair for data and a wire or pair for signal ground, nominal impedance 100...165 ohms, for example Belden 9842</p> <p>Baud rate: 4.8...115.2 kbit/s</p> <p>Termination by switch</p>
Safe torque off (STO) inputs IN1 and IN2 (Term. 37 and 38)	<p>24 V DC logic levels: "0" < 5 V, "1" > 13 V</p> <p>R_{in}: 2.47 kohm</p> <p>Terminal size:</p> <p>Frames R1...R5: 0.14...1.5 mm²</p> <p>Frames R6...R9: 0.14...2.5 mm²</p>
STO cable	<p>Maximum cable length 300 m (984 ft) between activation switch (K) and drive control unit, see sections <i>An example of a Safe torque off wiring is shown below.</i> on page 367 and <i>Safety data</i> on page 377.</p>

Control panel - drive and drive - drive connection (panel bus)	EIA-485, male RJ-45 connector, unshielded or shielded twisted pair cable, type CAT 5e or better, max. total cable length of the panel bus 100 m (in single or multiple cables)
Control panel - PC connection	USB Type Mini-B, max. cable length 3 m


Isolation areas, R1...R5





Symbol	Description
1	Panel port
2	Power unit connection
3	I/O extension
	Reinforced insulation (IEC/EN 61800-5-1:2007)
	Functional insulation (IEC/EN 61800-5-1:2007)

Below altitudes 4000 m (13123 ft): The terminals on the control unit fulfill the Protective Extra Low Voltage (PELV) requirements (EN 50178): There is adequate insulation between the user terminals which only accept ELV voltages and terminals that accept higher voltages (relay outputs).

Isolation areas, R6...R9




Symbol	Description
1	Power unit connection
2	I/O extension
	Reinforced insulation (IEC/EN 61800-5-1:2007)
	Functional insulation (IEC/EN 61800-5-1:2007)

The terminals on the control unit fulfill the Protective Extra Low Voltage (PELV) requirements (EN 50178): There is reinforced insulation between the user terminals which only accept ELV voltages and terminals that accept higher voltages (relay outputs).

Note: There is functional insulation between the individual relay outputs.


Note: There is reinforced insulation on the power unit.

Grounding of frames R1...R5



*) Jumper installed at the factory

Grounding of frames R6...R9



*) Jumper installed at the factory

Auxiliary circuit power consumption

Maximum external power supply:

Frames R1...R5: 25 W, 1.04 A at 24 V AC/DC (with option modules CMOD-01, CMOD-02)

Frames R6...R9: 36 W, 1.50 A at 24 V AC/DC (as standard, terminals 40...41)

Efficiency

Approximately 98% at nominal power level. The efficiency is not calculated according to IEC 61800-9-2.

Energy efficiency data (EU ecodesign)

Energy efficiency data according to IEC-61800-9-2 is available from the ecodesign tool (<https://ecodesign.drivesmotors.abb.com>).

Degree of protection

Degree of protection (IEC/EN 60529)	IP21, IP55
Enclosure types (UL 50/50E)	UL Type 1, UL Type 12
Overvoltage category (IEC 60664-1)	III
Protective classes (IEC/EN 61800-5-1)	I

Ambient conditions

Environmental limits for the drive are given below. The drive is to be used in a heated, indoor, controlled environment. All printed circuit boards are conformal coated.

	Operation installed for stationary use	Storage in the package	Transportation in the package
Installation site altitude	<ul style="list-style-type: none"> • 0...4000 m (13123 ft) above sea level¹⁾ • 0...2000 m (6561 ft) above sea level²⁾ Output derated above 1000 m (3281 ft), see page 260.	-	-

Air temperature	-15...+50 °C (5...122 °F). 0...-15 °C (32...5 °F); No frost allowed. Output derated above +40 °C (104 °F), see page 252 .	-40...+70 °C (-40...+158 °F)	-40...+70 °C (-40...+158 °F)
Relative humidity	5...95%	Max. 95%	Max. 95%
	No condensation allowed. Maximum allowed relative humidity is 60% in the presence of corrosive gases.		
Contamination levels (IEC 60721-3-x)	IEC 60721-3-3: 2002: Classification of environmental conditions - Part 3-3: Classification of groups of environmental parameters and their severities - Stationary use of weather protected locations	IEC 60721-3-1: 1997	IEC 60721-3-2: 1997
Chemical gases	Class 3C2	Class 1C2	Class 2C2
Solid particles	Class 3S2. No conductive dust allowed.	Class 1S3 (packing must support this, otherwise 1S2)	Class 2S2
Pollution degree (IEC/EN 61800-5-1)	Pollution degree 2	-	-
Atmospheric pressure	70...106 kPa 0.7...1.05 atmospheres	70...106 kPa 0.7...1.05 atmospheres	60...106 kPa 0.6...1.05 atmospheres
Vibration (IEC 60068-2)	Max. 1 mm (0.04 in) (5...13.2 Hz), max. 7 m/s ² (23 ft/s ²) (13.2...100 Hz) sinusoidal	-	-
Vibration (ISTA)	-	R1...R4 (ISTA 1A): Displacement, 25 mm peak to peak, 14200 vibratory impacts R5...R9 (ISTA 3E): Random, overall Grms level of 0.52	

Shock/Drop (ISTA)	Not allowed	R1...R4 (ISTA 1A): Drop, 6 faces, 3 edges and 1 corner		
		Weight range	mm	in
		0...10 kg (0...22 lb)	760	29.9
		10...19 kg (22...42 lb)	610	24.0
		19...28 kg (42...62 lb)	460	18.1
		28...41 kg (62...90 lb)	340	13.4
		R5...R9 (ISTA 3E): Shock, incline impact: 1.1 m/s (3.61 ft/s) Shock, rotational edge drop: 200 mm (7.9 in)		

¹⁾ For symmetrically grounded TN-S systems, TT systems, and ungrounded or symmetrically high-resistance grounded IT systems.

See also section [Limiting relay output maximum voltages at high installation altitudes](#) on page 110.

²⁾ For corner-grounded delta systems, midpoint-grounded delta systems and corner-grounded (via high resistance) IT systems. **Note:** There are special considerations in corner-grounded installations above 2000 m. Contact your local ABB representative for further information.

Materials

Drive enclosure

- PC/ABS 3 mm, PC+GF10 3mm, color NCS 1502-Y (RAL 9002 / PMS 1C Cool Grey), RAL 9002 and PMS 425 C
- hot-dip zinc coated steel sheet 1.5...2.5 mm, thickness of coating 100 micrometers, color NCS 1502-Y

Package

Plywood, cardboard and molded pulp. Foam cushions PE, PP-E, bands PP.

Disposal

The main parts of the drive can be recycled to preserve natural resources and energy. Product parts and materials should be dismantled and separated.

Generally all metals, such as steel, aluminum, copper and its alloys, and precious metals can be recycled as material. Plastics, rubber, cardboard and other packaging material can be used in energy recovery. Printed circuit boards and large electrolytic capacitors need selective treatment according to IEC 62635 guidelines. To aid recycling, plastic parts are marked with an appropriate identification code.

Contact your local ABB distributor for further information on environmental aspects and recycling instructions for professional recyclers. End of life treatment must follow international and local regulations.

Applicable standards

The drive complies with the following standards. The compliance with the European Low Voltage Directive is verified according to standard EN 61800-5-1.

EN 60204-1:2018, EN 60204-1:2006 + AC:2010	<i>Safety of machinery. Electrical equipment of machines. Part 1: General requirements. Provisions for compliance:</i> The final assembler of the machine is responsible for installing - emergency-stop device - supply disconnecting device.
IEC 60146-1-1:2009 EN 60146-1-1:2010	<i>Semiconductor converters - General requirements and line commutated converters - Part 1-1: Specification of basic requirements</i>
IEC 60529:1989 + AMD1:1999 + AMD2:2013, EN 60529:1991 + A1:2000 + A2: 2013	<i>Degrees of protection provided by enclosures (IP code)</i>
IEC 61000-3-2:2018, EN 61000-3-2:2014	<i>Electromagnetic compatibility (EMC) – Limits for harmonic current emissions (input current ≤ 16 A per phase)</i>
IEC/EN 61000-3-12:2011	<i>Electromagnetic compatibility (EMC) – Limits for harmonic currents produced by equipment connected to public low-voltage systems with input current input current > 16 A and < 75 A per phase</i> This drive complies with the standard provided that the short-circuit power S_{sc} is greater than or equal to the minimum short-circuit power given for the drive (listed for each drive type on page 302) at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the drive to ensure, by consultation with the distribution network operator if necessary, that the drive is connected only to a supply with a short-circuit power S_{sc} greater than or equal to the minimum short-circuit power given for the drive.
IEC/EN 61800-3:2017	<i>Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods</i>
IEC/EN 61800-5-1:2007	<i>Adjustable speed electrical power drive systems. Part 5-1: Safety requirements – electrical, thermal and energy</i>
IEC 61800-9-2: 2017	<i>Adjustable speed electrical power drive systems – Part 9-2: Ecodesign for power drive systems, motor starters, power electronics and their driven applications – Energy efficiency indicators for power drive systems and motor starters</i>
IEC 60664-1:2007	<i>Insulation coordination for equipment within low-voltage systems. Part 1: Principles, requirements and tests.</i>
UL 61800-5-1: 1st edition	<i>Standard for Safety, Adjustable Speed Electrical Power Drive Systems – Part 5-1: Safety Requirements – Electrical, Thermal and Energy</i>
CSA C22.2 No. 274-17	<i>Adjustable speed drives</i>

CE marking

A CE mark is attached to the drive to verify that the drive follows the provisions of the European Low Voltage, EMC and RoHS Directives. The CE marking also verifies that the drive, in regard to its safety functions (such as Safe torque off), conforms with the Machinery Directive as a safety component.

■ Compliance with the European Low Voltage Directive

The compliance with the European Low Voltage Directive has been verified according to standard EN 61800-5-1:2007. The declaration of conformity (3AXD10000302784) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

■ Compliance with the European EMC Directive

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard (IEC 61800-3:2017) covers requirements stated for drives. See section [Compliance with the IEC 61800-3:2017](#) below. The declaration of conformity (3AXD10000302784) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

■ Compliance with the European ROHS II Directive 2011/65/EU

The RoHS II Directive defines the restriction of the use of certain hazardous substances in electrical and electronic equipment. The declaration of conformity (3AXD10000302785) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

■ Compliance with the European WEEE Directive

The WEEE Directive defines the regulated disposal and recycling of electric and electrical equipment.

■ Compliance with the European Machinery Directive 2006/42/EC 2nd Edition – June 2010

The drive is a machinery component that can be integrated into a wide range of machinery categories as specified in European Commission's *Guide to application of the Machinery Directive 2006/42/EC 2nd Edition – June 2010*. See section [Declarations of conformity](#) on page 380.

Validating the operation of the Safe torque off function

See chapter [Safe torque off function](#) on page 363.

Compliance with the IEC 61800-3:2017

■ Definitions

EMC stands for **E**lectromagnetic **C**ompatibility. It is the ability of electrical/electronic equipment to operate without problems within an electromagnetic environment. Likewise, the equipment must not disturb or interfere with any other product or system within its locality.

First environment includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes.

Second environment includes establishments connected to a network not directly supplying domestic premises.

Drive of category C1: drive of rated voltage less than 1000 V and intended for use in the first environment.

Drive of category C2: drive of rated voltage less than 1000 V and intended to be installed and started up only by a professional when used in the first environment.

Note: A professional is a person or organization having necessary skills in installing and/or starting up power drive systems, including their EMC aspects.

Drive of category C3: drive of rated voltage less than 1000 V, intended for use in the second environment and not intended for use in the first environment.

■ Category C1

The conducted emission limits are complied with the following provisions:

1. The optional EMC C1 filter is selected according to the documentation and installed as specified in the EMC C1 filter manual. See *Main switch and EMC C1 filter options (+F278, +F316, +E223) installation supplement for ACS580-01, ACH580-01 and ACQ580-01 frames R1 to R5 (3AXD50000155132 [Multilingual])*. Only available for IP55 (+B056) frames R1...R5, up to 55 kW.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. The maximum motor cable length with 2 kHz switching frequency is 10 m.

WARNING! In a domestic environment, this product may cause radio interference, in which case supplementary mitigation measures may be required.

■ Category C2

The emission limits are complied with the following provisions:

18. The motor and control cables are selected as specified in this manual.
19. The drive is installed according to the instructions given in this manual.
20. For the maximum motor cable length with 4 kHz switching frequency, see page [303](#).

WARNING! The drive may cause radio interference if used in residential or domestic environment. The user is required to take measures to prevent interference, in association to the requirements for the CE compliance listed above, if necessary.

Note: Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

Note: Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

If you install the drive to any other system than symmetrically grounded TN-S system, you may need to disconnect the EMC filter or the ground-to-phase varistor. See sections:

IEC: Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems on page [116](#)

North America: Examining the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta and TT systems on page [168](#)

■ Category C3

The drive complies with the standard with the following provisions:


1. The motor and control cables are selected as specified in this manual.
2. The drive is installed according to the instructions given in this manual.
3. For the maximum motor cable length with 4 kHz switching frequency, see page [303](#)

WARNING! A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

■ Category C4

If the provisions under [Category C3](#) cannot be met, the requirements of the standard can be met as follows:

1. It is ensured that no excessive emission is propagated to neighboring low-voltage networks. In some cases, the inherent suppression in transformers and cables is sufficient. If in doubt, the supply transformer with static screening between the primary and secondary windings can be used.




2. An EMC plan for preventing disturbances is drawn up for the installation. A template is available from the local ABB representative.
3. The motor and control cables are selected as specified in this manual.
4. The drive is installed according to the instructions given in this manual.

WARNING! A drive of category C4 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.




The drive is cULus Listed.

■ UL checklist

 **WARNING!** Operation of this drive requires detailed installation and operation instructions provided in the hardware and firmware manuals. The manuals can be found on the Internet. Depending on the product series, the drive package may contain the manuals in electric format or as hard copies (as standard or ordered with option codes with the drive). Hard copies of the manuals can also be ordered through the manufacturer separately. Retain the hard copies of the manuals with the drive.

- Make sure that the drive type designation label includes the cULus Listed marking.
- **CAUTION - Risk of electric shock.** After disconnecting the input power, always wait for 5 minutes to let the intermediate circuit capacitors discharge before you start working on the drive, motor or motor cable.
- The drive is to be used in a heated, indoor controlled environment. The drive must be installed in clean air according to the enclosure classification. Cooling air must be clean, free from corrosive materials and electrically conductive dust.
- The maximum surrounding air temperature is 40 °C (104 °F) at rated current for all UL Type 1 and UL Type 12 frames. The current is derated for 40...50 °C (104...122 °F).
- The drive is suitable for use in a circuit capable of delivering not more than 100,000 rms symmetrical amperes, 600 V maximum when protected by the UL fuses given in the table on page 275. The drive is suitable for use in a circuit capable of delivering not more than 65 kA rms symmetrical amperes, 480 V maximum when protected by the UL circuit breakers given in table on page 278.
- The cables located within the motor circuit must be rated for at least 75 °C (167 °F) in UL-compliant installations.
- The input cable must be protected with fuses or circuit breakers. Suitable UL fuses and circuit breakers are listed on pages 275 and 278, respectively. These protective devices provide branch circuit protection in accordance with the National Electrical Code (NEC) and Canadian Electrical Code. For installation in the United States, obey any other applicable local codes. For installation in Canada, obey any applicable provincial codes.

 **WARNING!** The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire

or electric shock, current-carrying parts and other components of the controller should be examined and replaced if damaged.

- The drive provides motor overload protection. For the adjustments, see the firmware manual.
- For drive overvoltage category, see page [312](#). For pollution degree, see page [313](#).
- To maintain the environmental integrity of the enclosure, replace the cable grommets with field-installed industrial conduit hubs or closure plates required by the enclosure type (or better).

Product has been tested and evaluated against the relevant North American standards by the CSA Group. Valid with rated voltages up to 600 V.



China RoHS marking

The *People's Republic of China Electronic Industry Standard* (SJ/T 11364-2014) specifies the marking requirements for hazardous substances in electronic and electrical products. The green mark is attached to the drive to verify that it does not contain toxic and hazardous substances or elements above the maximum concentration values, and that it is an environmentally-friendly product which can be recycled and reused.



KC marking

The KC (Korea Certification) certification mark signifies compliance with Korea's product safety requirements for electrical and electronic equipment and components that utilize power from 50...1000 V AC.



RCM marking

See the type designation label for the valid markings of your drive. Regulatory Compliance (RCM) Mark is required in Australia and New Zealand. A RCM mark is attached to the drive to verify compliance with the relevant standard (IEC/EN 61800-3:2017 – *Adjustable speed electrical power drive systems – Part 3: EMC product standard including specific test methods*), mandated by the Trans-Tasman Electromagnetic Compatibility Scheme. For fulfilling the requirements of the standard, see section [Compliance with the IEC 61800-3:2017](#) on page [317](#). The declaration of conformity (3AXD10000493117) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.



WEEE marking

The drive is marked with the wheelie bin symbol. It indicates that at the end of life the drive should enter the recycling system at an appropriate collection point and not placed in the normal waste stream. See section [Disposal](#) on page [314](#).



EAC marking

EAC marking is required in Russia, Belarus and Kazakhstan. The EAC certificate of conformity (3AXD10000312900) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.



UKCA (UK Conformity Assessed) marking

Product complies with the applicable United Kingdom's legislation (Statutory Instruments). Marking is required for products being placed on the market in Great Britain (England, Wales and Scotland).

Disclaimer

The manufacturer shall have no obligation with respect to any product which (i) has been improperly repaired or altered; (ii) has been subjected to misuse, negligence or accident; (iii) has been used in a manner contrary to the manufacturer's instructions; or (iv) has failed as a result of ordinary wear and tear.

Cyber security disclaimer

This product is designed to be connected to and to communicate information and data via a network interface. It is Customer's sole responsibility to provide and continuously ensure a secure connection between the product and Customer network or any other network (as the case may be). Customer shall establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of anti-virus programs, etc) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.



Dimension drawings


Contents of this chapter

This chapter shows the dimension drawings of the ACS580-01.

Note: The dimensions are given in millimeters and [inches].

Frame R1, IP21 (UL Type 1)




IP21



3AXD10000601652


Frame R1, IP55+F278 (UL Type 12)

IP55+F278





3AXD10000649451

Frame R2, IP21 (UL Type 1)




Frame R2, IP55+F278 (UL Type 12)




3AXD10000649654

Frame R3, IP21 (UL Type 1)




3AXD10000602466

Frame R3, IP55 (UL Type 12)




Frame R3, IP55+E223 (UL Type 12)





IP55+E223



SUGGESTED MOUNTING HOLES
Detail C
SCALE 3:4





Detail D
SCALE 3:4



3AXD10000649130

Frame R3, IP55+F278/F316 (UL Type 12)




IP55+F278/F316



3AXD10000649130


Frame R4, IP55 (UL Type 12)

IP55




Frame R4, IP55+E223 (UL Type 12)

IP55+E223





Detail C
SCALE 3:4



Detail D
SCALE 3:4




3AXD10000649283




Frame R4, IP55+F278/F316 (UL Type 12)

IP55+F278/F316







3AXD10000649283

Frame R5, IP21 (UL Type 1)






Frame R5, IP55 (UL Type 12)

IP55



3AXD10000415964



Frame R6, IP21 (UL Type 1)




3AXD1000258705

Frame R6, IP55 (UL Type 12)


IP55




- PLATE HOLE $\varnothing 22.5$ [0.89] (4PCS)
GROMMET UP TO $\varnothing 17$ [0.67]
CABLE DIAMETER
- PLATE HOLE $\varnothing 50$ [1.97]
GROMMET FOR $\varnothing 26-35$ [1.02-1.38]
CABLE DIAMETER
- PLATE HOLE $\varnothing 62$ [2.44]
GROMMET FOR $\varnothing 30-45$ [1.18-1.77]
CABLE DIAMETER



LIFTING POINT
4 PCS $\varnothing 20$ [0.79]
2 PCS 15x8 [0.59x0.32]




DIMENSIONS WITH UL TYPE 12 HOOD




3AXD10000330667


Frame R7, IP21 (UL Type 1)



3AXD1000258995



Frame R8, IP21 (UL Type 1)





 3AXD10000287670

Frame R8, IP55 (UL Type 12)


IP55



- PLATE HOLE $\varnothing 22.5$ [0.89"] (4pcs)
GROMMET UP TO $\varnothing 17$ [0.67]
CABLE DIAMETER
- PLATE HOLE $\varnothing 62$ [2.44"] (6pcs)
GROMMET FOR $\varnothing 30-45$ [1.18-1.77]
CABLE DIAMETER



LIFTING POINTS
4 PCS $\varnothing 20$ [0.79]
2 PCS 15x8 [0.59x0.32]



3AXD10000332446



12

Resistor braking

Contents of this chapter

This chapter describes how to select the brake resistor and cables, protect the system, connect the brake resistor and enable resistor braking.

Operation principle and hardware description

The brake chopper handles the energy generated by a decelerating motor. The chopper connects the brake resistor to the intermediate DC circuit whenever the voltage in the circuit exceeds the limit defined by the control program. Energy consumption by the resistor losses lowers the voltage until the resistor can be disconnected.

For frame R1...R3 internal brake choppers and resistors, see below. For R4...R9 external brake choppers and resistors, see [Resistor braking, frames R4...R9](#) on page 359.

Resistor braking, frames R1...R3

■ Planning the braking system

Selecting the brake resistor

Frames R1...R3 have an built-in brake chopper as standard equipment. The brake resistor is selected using the table and equations presented in this section.

1. Determine the required maximum braking power P_{Rmax} for the application. P_{Rmax} must be smaller than P_{BRmax} given in the table on page 353 for the used drive type.
2. Calculate resistance R with Equation 1.
3. Calculate energy E_{Rpulse} with Equation 2.
4. Select the resistor so that the following conditions are met:
 - The rated power of the resistor must be greater than or equal to P_{Rmax} .
 - Resistance R must be between R_{min} and R_{max} given in the table for the used drive type.
 - The resistor must be able to dissipate energy E_{Rpulse} during the braking cycle T .


Equations for selecting the resistor:

$$\text{Eq. 1. } U_n = 400 \text{ V: } R = \frac{450000}{P_{Rmax}}$$

$$U_n = 480 \text{ V: } R = \frac{615000}{P_{Rmax}}$$

$$\text{Eq. 2. } E_{Rpulse} = P_{Rmax} \cdot t_{on}$$

$$\text{Eq. 3. } P_{Rave} = P_{Rmax} \cdot \frac{t_{on}}{T}$$



For conversion, use 1 hp = 746 W.

where

R = calculated brake resistor value (ohm). Make sure that: $R_{min} < R < R_{max}$.

P_{Rmax} = maximum power during the braking cycle (W)

P_{Rave} = average power during the braking cycle (W)

E_{Rpulse} = energy conducted into the resistor during a single braking pulse (J)

t_{on} = length of the braking pulse (s)

T = length of the braking cycle (s).

IEC

The table shows reference resistor types for the maximum braking power.

Type ACS580 -01-	R_{min}	R_{max}	P_{BRmax}		Reference resistor types
	ohm	ohm	kW		
3-phase $U_n = 230\text{ V}$					
04A7-2	25	205	0.7		Danotherm CBR-V 330 D T 406 78R UL
06A7-2	25	130	1.1		Danotherm CBR-V 330 D T 406 78R UL
07A6-2	25	95	1.5		Danotherm CBR-V 560 D HT 406 39R UL
012A-2	25	48	3.0		Danotherm CBR-V 560 D HT 406 39R UL
018A-2	25	35	4.1		-
025A-2	14	26	5.4		Danotherm CBT-H 560 D HT 406 19R
032A-2	14	19	7.4		Danotherm CBT-H 760 D HT 406 16R
047A-2	6.0	13	11		SAFUR90F575
060A-2	6.0	9.0	16		SAFUR90F575
3-phase $U_n = 400\text{ or }480\text{ V}$					
02A7-4	52	864	0.6		Danotherm CBH 360 C T 406 210R
03A4-4	52	582	0.9		Danotherm CBH 360 C T 406 210R
04A1-4	52	392	1.4		Danotherm CBH 360 C T 406 210R
05A7-4	52	279	2.0		Danotherm CBH 360 C T 406 210R
07A3-4	52	191	2.9		Danotherm CBR-V 330 D T 406 78R UL
09A5-4	52	140	3.9		Danotherm CBR-V 330 D T 406 78R UL
12A7-4	52	104	5.3		Danotherm CBR-V 330 D T 406 78R UL
018A-4	31	75	7.3		Danotherm CBR-V 560 D HT 406 39R UL
026A-4	22	52	10		Danotherm CBR-V 560 D HT 406 39R UL
033A-4	16	37	15		Danotherm CBT-H 560 D HT 406 19R
039A-4	10	27	20		Danotherm CBT-H 760 D HT 406 16R
046A-4	10	22	25		Danotherm CBT-H 760 D HT 406 16R

UL (NEC)

The table shows reference resistor types for the maximum braking power.

Type ACS580 -01-	R_{min}	R_{max}	P_{BRmax}		Reference resistor types
	ohm	ohm	kW	hp	
3-phase $U_1 = 208...240\text{ V}$, P_n at $U_n = 208/230\text{ V}$					
04A6-2	25	205	0.7	0.9	Danotherm CBR-V 330 D T 406 78R UL
06A6-2	25	130	1.1	1.5	Danotherm CBR-V 330 D T 406 78R UL
07A5-2	25	95	1.5	2.0	Danotherm CBR-V 560 D HT 406 39R U
10A6-2	25	65	2.2	2.9	Danotherm CBR-V 560 D HT 406 39R UL
017A-2	25	35	4.0	5.4	TBD
024A-2	14	26	5.4	7.2	Danotherm CBT-H 560 D HT 406 19R

Type ACS580 -01-	R_{\min}	R_{\max}	$P_{BR\max}$		Reference resistor types
	ohm	ohm	kW	hp	
031A-2	14	19	7.4	9.9	Danotherm CBT-H 760 D HT 406 16R
046A-2	6.0	13	11	14.7	SAFUR90F575
059A-2	6.0	9.0	16	21.4	SAFUR90F575
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V					
02A1-4	52	864	0.6	0.8	Danotherm CBH 360 C T 406 210R
03A0-4	52	582	0.9	1.2	Danotherm CBH 360 C T 406 210R
03A5-4	52	392	1.4	1.9	Danotherm CBH 360 C T 406 210R
04A8-4	52	279	2.0	2.7	Danotherm CBH 360 C T 406 210R
06A0-4	52	191	2.9	3.9	Danotherm CBR-V 330 D T 406 78R UL
07A6-4	52	140	3.9	5.2	Danotherm CBR-V 330 D T 406 78R UL
012A-4	52	104	5.3	7.1	Danotherm CBR-V 330 D T 406 78R UL
014A-4	31	75	7.3	9.8	Danotherm CBR-V 560 D HT 406 39R UL
023A-4	22	52	10	13.6	Danotherm CBR-V 560 D HT 406 39R UL
027A-4	16	37	15	20.1	Danotherm CBT-H 560 D HT 406 19R
034A-4	10	27	20	26.8	Danotherm CBT-H 760 D HT 406 16R
044A-4	10	22	25	33.5	Danotherm CBT-H 760 D HT 406 16R
3-phase $U_1 = 525...600$ V, P_n at $U_n = 575$ V					
02A7-6	60	600	1.5	2.0	Danotherm CBR-V 330 D T 406 78R UL
03A9-6	60	450	2.2	2.7	Danotherm CBR-V 330 D T 406 78R UL
06A1-6	60	225	4.0	5.4	Danotherm CBR-V 330 D T 406 78R UL
09A0-6	60	165	5.4	7.2	Danotherm CBR-V 330 D T 406 78R UL
011A-6	60	120	7.4	9.9	Danotherm CBR-V 330 D T 406 78R UL
017A-6	60	82	11	14.7	Danotherm CBR-V 330 D T 406 78R UL
022A-6	25	56	16	21.4	Danotherm CBR-V 560 D HT 406 39R UL
027A-6	25	43	21	28.2	Danotherm CBR-V 560 D HT 406 39R UL
032A-6	25	35	26	34.9	TBD

Symbols

R_{\min} = minimum allowed brake resistor that can be connected to the brake chopper

R_{\max} = maximum allowed brake resistor that allows $P_{BR\max}$

$P_{BR\max}$ = maximum braking capacity of the drive, must exceed the desired braking power.



WARNING! Do not use a brake resistor with a resistance below the minimum value specified for the particular drive. The drive and the internal chopper are not able to handle the overcurrent caused by the low resistance.

Selecting and routing the brake resistor cables

Use a shielded cable with the conductor size specified in section [Terminal and lead-through data for the power cables](#) on page 295.

Minimizing electromagnetic interference

Follow these rules in order to minimize electromagnetic interference caused by the rapid current changes in the resistor cables:

- Install the cables away from other cable routes.
- Avoid long parallel runs with other cables. The minimum parallel cabling separation distance should be 0.3 meters.
- Cross the other cables at right angles.
- Keep the cable as short as possible in order to minimize the radiated emissions and stress on chopper IGBTs. The longer the cable the higher the radiated emissions, inductive load and voltage peaks over the IGBT semiconductors of the brake chopper.

Maximum cable length

The maximum length of the resistor cable(s) is 10 m (33 ft).

EMC compliance of the complete installation

Note: ABB has not verified that the EMC requirements are fulfilled with external user-defined brake resistors and cabling. The EMC compliance of the complete installation must be considered by the customer.

Placing the brake resistor

Install the resistors outside the drive in a place where they will cool.

Arrange the cooling of the resistor in a way that:

- no danger of overheating is caused to the resistor or nearby materials
- the temperature of the room the resistor is located in does not exceed the allowed maximum.

Supply the resistor with cooling air/water according to the resistor manufacturer's instructions.



WARNING! The materials near the brake resistor must be non-flammable. The surface temperature of the resistor is high. Air flowing from the resistor is of hundreds of degrees Celsius. If the exhaust vents are connected to a ventilation system, make sure that the material withstands high temperatures. Protect the resistor against physical contact.

Protecting the system in brake circuit fault situations

Protecting the system in cable and brake resistor short-circuit situations


The drive input fuses will also protect the resistor cable when it is identical with the input cable.

Protecting the system against thermal overload

The drive has a brake thermal model which protects the brake resistor against overload. ABB recommends to enable the thermal model at start up.

ABB recommends to equip the drive with a main contactor for safety reasons even when you have enabled the resistor thermal model. Wire the contactor so that it opens in case the resistor overheats. This is essential for safety since the drive will not otherwise be able to interrupt the main supply if the chopper remains conductive in a fault situation. An example wiring diagram is shown below. ABB recommends that you use resistors equipped with a thermal switch (1) inside the resistor assembly. The switch indicates overtemperature.

ABB recommends that you also wire the thermal switch to a digital input of the drive, and configure the input to cause a fault trip at resistor overtemperature indication.



■ Mechanical installation

All brake resistors must be installed outside the drive. Follow the resistor manufacturer's instructions.

■ Electrical installation

Examining the insulation of the assembly

Follow the instructions given in section [Brake resistor assembly for R1...R3](#) on page 115 (IEC) or [Brake resistor assembly for R1...R3](#) on page 167 (North America).

Connection diagram

See section [Connection diagram](#) page 123 (IEC) or [Connection diagram](#) on page 176 (North America).

Connection procedure

See section [Grounding shelf](#) on page 129 (IEC).

Connect the thermal switch of the brake resistor as described in section [Protecting the system against thermal overload](#) on page 356.

■ Start-up

Note: Protective oil on the brake resistors will burn off when the brake resistor is used for the first time. Make sure that the airflow is sufficient.

Set the following parameters:

1. Disable the overvoltage control of the drive with parameter 30.30 Overvoltage control.
2. Set the source of parameter 31.01 External event 1 source to point to the digital input where the thermal switch of the brake resistor is wired.
3. Set parameter 31.02 External event 1 type to Fault.
4. Enable the brake chopper by parameter 43.06 Brake chopper enable. If Enabled with thermal model is selected, set also the brake resistor overload protection parameters 43.08 and 43.09 according to the application.
5. Check the resistance value of parameter 43.10 Brake resistance.

With these parameter settings, the drive generates a fault and coasts to a stop on brake resistor overtemperature.



WARNING! If the drive is equipped with a brake chopper but the chopper is not enabled by the parameter setting, the internal thermal protection of the drive against resistor overheating is not in use. In this case, the brake resistor must be disconnected.

Resistor braking, frames R4...R9

■ Planning the braking system

Frames R4...R9 need external brake choppers and resistors. The tables below list suitable choppers and resistors.

For more information, see *NBRA-6xx Braking Choppers Installation and start-up guide* (3AFY58920541 [English]) and *ACS-BRK Brake Units Installation and start-up guide* (3AFY61514309 [English]).

■ IEC

Type ACS580-01	Brake chopper	R_{\min}	R_{\max}	$P_{BR\max}$	Reference resistor types ¹⁾
		ohm	ohm	kW	
3-phase $U_n = 230\text{ V}$					
076A-2	NBRA-658	-	-	-	-
089A-2	NBRA-658	2.0	5.6	26	SAFUR125F500
115A-2	NBRA-658	2.0	4.7	31	SAFUR125F500
144A-2	NBRA-658	2.0	3.4	43	SAFUR200F500
171A-2	NBRA-658	1.3	2.8	53	SAFUR200F500
213A-2	NBRA-658	1.3	2.3	64	2xSAFUR210F575
276A-2	NBRA-658	0.9	1.9	78	2xSAFUR210F575
3-phase $U_n = 400\text{ or }480\text{ V}$ (380...415 V, 440...480 V)					
062A-4	ACS-BRK-D	7.8	18.1	30	Built in with the brake chopper
073A-4	ACS-BRK-D	7.8	13.1	42	Built in with the brake chopper
088A-4	ACS-BRK-D	7.8	10.7	51	Built in with the brake chopper
106A-4	NBRA-658	1.3	8.7	63	SAFUR125F500
145A-4	NBRA-658	1.3	7.1	77	SAFUR125F500
169A-4	NBRA-658	1.3	5.2	105	SAFUR200F500
206A-4	NBRA-658	1.3	4.3	126	SAFUR200F500
246A-4	NBRA-658	1.3	3.5	156	2xSAFUR125F500
293A-4	NBRA-658	1.3	2.9	187	2xSAFUR210F575
363A-4	NBRA-659	0.7	2.4	227	2xSAFUR200F500
430A-4	NBRA-659	0.7	1.9	284	2xSAFUR200F500

¹⁾ Other resistors can be used if they meet the minimum resistance value and required power values.

Symbols

R_{\min} = minimum allowed brake resistor that can be connected to the brake chopper

R_{\max} = maximum allowed brake resistor that allows $P_{BR\max}$

$P_{BR\max}$ = maximum braking capacity of the drive, must exceed the desired braking power.

UL (NEC)

Type ACS580 -01-	R_{\min}	R_{\max}	$P_{BR\max}$	Reference resistor types
	ohm	ohm	kW	
3-phase $U_1 = 208...240$ V, P_n at $U_n = 208/230$ V				
075A-2	2.6	7	21	SAFUR125F500
088A-2	2	5.6	26	SAFUR125F500
114A-2	2	4.7	31	SAFUR125F500
143A-2	2	3.4	43	SAFUR200F500
169A-2	1.3	2.8	53	SAFUR200F500
211A-2	1.3	2.3	64	2xSAFUR210F575
273A-2	0.9	1.9	78	2xSAFUR210F575
3-phase $U_1 = 440...480$ V, P_n at $U_n = 480$ V				
052A-4	7.8	18.1	30	Built in with the brake chopper
065A-4	7.8	13.1	42	Built in with the brake chopper
077A-4	-	-	-	-
078A-4	7.8	10.7	51	Built in with the brake chopper
096A-4	1.3	8.7	63	SAFUR125F500
124A-4	1.3	7.1	77	SAFUR125F500
156A-4	1.3	5.2	105	SAFUR200F500
180A-4	1.3	4.3	126	SAFUR200F500
240A-4	1.3	3.5	156	2xSAFUR125F500
260A-4	1.3	2.9	187	2xSAFUR210F575
302A-4	-	-	-	-
361A-4	0.7	2.4	227	2xSAFUR200F500
414A-4	0.7	1.9	284	2xSAFUR200F500
3-phase $U_1 = 525...600$ V, P_n at $U_n = 575$ V				
041A-6	6.5	30	31	SAFUR90F575
052A-6	6.5	21	43	SAFUR90F575
062A-6	6.5	17	53	SAFUR90F575
077A-6	6.5	14	64	SAFUR90F575
099A-6	4.3	11.5	78	SAFUR80F500
125A-6	4.3	8.5	107	SAFUR80F500
144A-6	3.2	7	128	SAFUR80F500
192A-6	2.2	5.8	157	SAFUR125F500
242A-6	2.2	4.8	188	SAFUR200F500
271A-6	2.2	4	228	SAFUR200F500

Symbols

R_{\min} = minimum allowed brake resistor that can be connected to the brake chopper

R_{\max} = maximum allowed brake resistor that allows $P_{BR\max}$

$P_{BR\max}$ = maximum braking capacity of the drive, must exceed the desired braking power.



WARNING! Do not use a brake resistor with a resistance below the minimum value specified for the particular drive. The drive and the internal chopper are not able to handle the overcurrent caused by the low resistance.

■ **Parameter settings for external braking chopper and resistor**

Disable the overvoltage control of the drive with parameter 30.30 Overvoltage control.

Disable parameter 43.06 Braking chopper function as parameter group 43 Brake chopper is used for internal braking chopper and resistor only.

13

Safe torque off function

Contents of this chapter

This chapter describes the Safe torque off (STO) function of the drive and gives instructions for its use.

Description

The Safe torque off function can be used, for example, as the final actuator device of safety circuits that stop the drive in case of danger (such as an emergency stop circuit). Another typical application is a prevention of unexpected start-up function that enables short-time maintenance operations like cleaning or work on non-electrical parts of the machinery without switching off the power supply to the drive.

When activated, the Safe torque off function disables the control voltage of the power semiconductors of the drive output stage (A, see diagram on page [364](#)), thus preventing the drive from generating the torque required to rotate the motor. If the motor is running when Safe torque off is activated, it coasts to a stop.

The Safe torque off function has a redundant architecture, that is, both channels must be used in the safety function implementation. The safety data given in this manual is calculated for redundant use, and does not apply if both channels are not used.

The Safe torque off function of the drive complies with these standards:

Standard	Name
IEC 60204-1:2016 EN 60204-1:2018	<i>Safety of machinery – Electrical equipment of machines – Part 1: General requirements</i>
IEC 61000-6-7:2014	<i>Electromagnetic compatibility (EMC) – Part 6-7: Generic standards – Immunity requirements for equipment intended to perform functions in a safety-related system (functional safety) in industrial locations</i>
IEC 61326-3-1:2017	<i>Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 3-1: Immunity requirements for safety-related systems and for equipment intended to perform safety-related functions (functional safety) – General industrial applications</i>
IEC 61508-1:2010	<i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 1: General requirements</i>
IEC 61508-2:2010	<i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems</i>
IEC 61511-1:2017	<i>Functional safety – Safety instrumented systems for the process industry sector</i>
IEC 61800-5-2:2016 EN 61800-5-2:2007	<i>Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional</i>
IEC 62061:2005 + A1:2012 + A2:2015 EN 62061:2005 + AC:2010 + A1:2013 +A2:2015	<i>Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems</i>
EN ISO 13849-1:2015	<i>Safety of machinery – Safety-related parts of control systems – Part 1: General requirements</i>
EN ISO 13849-2:2012	<i>Safety of machinery – Safety-related parts of control systems – Part 2: Validation</i>

The function also corresponds to Prevention of unexpected start-up as specified by EN ISO 14118:2018 (ISO 14118:2017), and Uncontrolled stop (stop category 0) as specified in EN/IEC 60204-1.

■ Compliance with the European Machinery Directive


See section [Compliance with the European Machinery Directive 2006/42/EC 2nd Edition – June 2010](#) on page 316.

Connection principle


For information on the specifications of the STO input, see chapter [Control connection data](#) (page 305).

■ Single drive, internal +24 V DC power supply


Dual-channel connection



An example of a Safe torque off wiring is shown below.




Single-channel connection




Notes:

- Both STO inputs (IN1, IN2) must be connected to the activation switch. Otherwise, no SIL/PL classification is given.
- Pay special attention to avoiding any potential failure modes for the wiring. For example, use shielded cable. For measures for fault exclusion of wiring, see eg. EN ISO 13849-2:2012, table D.4.


■ Single drive, external +24 V DC power supply




An example of a Safe torque off wiring is shown below.



■ Multiple ACS580-01 drives, internal +24 V DC power supply



■ Multiple ACS580-01 drives, external +24 V DC power supply



■ Activation switch

In the wiring diagrams above, the activation switch has the designation (K). This represents a component such as a manually operated switch, an emergency stop push button switch, or the contacts of a safety relay or safety PLC.

- If a manually operated activation switch is used, the switch must be of a type that can be locked out to the open position.
- The STO inputs must be switched on/off within 200 ms of each other.
- A CPTC-02 thermistor protection module can also be used. For more information, see the module documentation.

■ Cable types and lengths

- Double-shielded twisted-pair cable is recommended.
- Maximum cable lengths:
 - 300 m (1000 ft) between activation switch (K) and drive control unit
 - 60 m (200 ft) between multiple drives
 - 60 m (200 ft) between external power supply and first drive unit.

Note: A short-circuit in the wiring between the switch and an STO terminal causes a dangerous fault. Therefore, it is recommended to use a safety relay (including wiring diagnostics), or a wiring method (shield grounding, channel separation) which reduces or eliminates the risk caused by the short-circuit.

Note: The voltage at the STO input terminals of the drive must be at least 13 V DC to be interpreted as “1”. The pulse tolerance of the input channels is 1 ms.

■ Grounding of protective shields

- Ground the shield in the cabling between the activation switch and the control unit at the control unit.
- Ground the shield in the cabling between two control units at one control unit only.

Operation principle

1. The Safe torque off activates (the activation switch is opened, or safety relay contacts open).
2. The STO inputs of the drive control unit de-energize.
3. The control unit cuts off the control voltage from the output IGBTs.
4. The control program generates an indication as defined by parameter 31.22 (see the firmware manual of the drive).

The parameter selects which indications are given when one or both STO signals are switched off or lost. The indications also depend on whether the drive is running or stopped when this occurs.

Note: This parameter does not affect the operation of the STO function itself. The STO function will operate regardless of the setting of this parameter: a running drive will stop upon removal of one or both STO signals, and will not start until both STO signals are restored and all faults reset.

Note: The loss of only one STO signal always generates a fault as it is interpreted as a malfunction of STO hardware or wiring.

5. The motor coasts to a stop (if running). The drive cannot restart while the activation switch or safety relay contacts are open. After the contacts close, a reset may be needed (depending on the setting of parameter 31.22). A new start command is required to start the drive.

Start-up including validation test

To ensure the safe operation of a safety function, validation is required. The final assembler of the machine must validate the function by performing a validation test. The validation test must be performed

- at initial start-up of the safety function
- after any changes related to the safety function (circuit boards, wiring, components, settings, etc.)
- after any maintenance work related to the safety function
- after a drive firmware update.

■ Competence

The validation test of the safety function must be carried out by an competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6. The test procedures and report must be documented and signed by this person.


■ Validation test reports

Signed validation test reports must be stored in the logbook of the machine. The report shall include documentation of start-up activities and test results, references to failure reports and resolution of failures. Any new validation tests performed due to changes or maintenance shall be logged into the logbook.

■ Validation test procedure

After wiring the Safe torque off function, validate its operation as follows.

Note: If a CPTC-02 module is installed, refer to its documentation.

Action	<input checked="" type="checkbox"/>
 WARNING! Obey the Safety instructions , page 15. If you ignore them, injury or death, or damage to the equipment can occur.	<input type="checkbox"/>
Make sure that the drive can be run and stopped freely during start-up.	<input type="checkbox"/>
Stop the drive (if running), switch the input power off and isolate the drive from the power line using a disconnecter.	<input type="checkbox"/>
Check the STO circuit connections against the wiring diagram.	<input type="checkbox"/>
Close the disconnecter and switch the power on.	<input type="checkbox"/>
<p>Test the operation of the STO function when the motor is stopped.</p> <ul style="list-style-type: none"> Give a stop command for the drive (if running) and wait until the motor shaft is at a standstill. <p>Make sure that the drive operates as follows:</p> <ul style="list-style-type: none"> Open the STO circuit. The drive generates an indication if one is defined for the 'stopped' state in parameter 31.22 (see the firmware manual). Give a start command to verify that the STO function blocks the drive's operation. The drive generates a warning. The motor should not start. Close the STO circuit. Reset any active faults. Restart the drive and check that the motor runs normally. 	<input type="checkbox"/>
<p>Test the operation of the STO function when the motor is running.</p> <ul style="list-style-type: none"> Start the drive and make sure the motor is running. Open the STO circuit. The motor should stop. The drive generates an indication if one is defined for the 'running' state in parameter 31.22 (see the firmware manual). Reset any active faults and try to start the drive. Make sure that the motor stays at a standstill and the drive operates as described above in testing the operation when the motor is stopped. Close the STO circuit. Reset any active faults. Restart the drive and check that the motor runs normally. 	<input type="checkbox"/>

Action	<input checked="" type="checkbox"/>
<p>Test the operation of the failure detection of the drive. The motor can be stopped or running.</p> <ul style="list-style-type: none"> • Open the 1st channel of the STO circuit (wire coming to IN1). If the motor was running, it should coast to a stop. The drive generates a <i>FA81 Safe torque off 1 loss</i> fault indication (see the firmware manual). • Give a start command to verify that the STO function blocks the drive's operation. The motor should not start. • Close the STO circuit. • Reset any active faults. Restart the drive and check that the motor runs normally. • Open the 2nd channel of the STO circuit (wire coming to IN2). If the motor was running, it should coast to a stop. The drive generates a <i>FA82 Safe torque off 2 loss</i> fault indication (see the firmware manual). • Give a start command to verify that the STO function blocks the drive's operation. The motor should not start. • Close the STO circuit. • Reset any active faults. Restart the drive and check that the motor runs normally. 	<input type="checkbox"/>
Document and sign the validation test report which verifies that the safety function is safe and accepted for operation.	<input type="checkbox"/>

Use

1. Open the activation switch, or activate the safety functionality that is wired to the STO connection.
2. The STO inputs on the drive control unit de-energize, and the drive control unit cuts off the control voltage from the output IGBTs.
3. The control program generates an indication as defined by parameter 31.22 (see the firmware manual of the drive).
4. The motor coasts to a stop (if running). The drive will not restart while the activation switch or safety relay contacts are open.
5. Deactivate the STO by closing the activation switch, or resetting the safety functionality that is wired to the STO connection.
6. Reset any faults before restarting.



WARNING! The Safe torque off function does not disconnect the voltage of the main and auxiliary circuits from the drive. Therefore maintenance work on electrical parts of the drive or the motor can only be carried out after isolating the drive from the supply and all other voltage sources.



WARNING! The drive cannot detect or memorize any changes in the STO circuitry when the drive control unit is not powered. If both STO circuits are closed and a level-type start signal is active when the power is restored, it is possible that the drive starts without a fresh start command. Take this into account in the risk assessment of the system.

This is also valid when the drive is only powered by a CMOD-xx multifunction extension module.



WARNING! (With permanent magnet motors or synchronous reluctance [SynRM] motors only)

In case of a multiple IGBT power semiconductor failure, the drive can produce an alignment torque which maximally rotates the motor shaft by $180/p$ degrees (with permanent magnet motors) or $180/2p$ degrees (with synchronous reluctance [SynRM] motors) regardless of the activation of the Safe torque off function. p denotes the number of pole pairs.

Notes:

- If a running drive is stopped by using the Safe torque off function, the drive will cut off the motor supply voltage and the motor will coast to a stop. If this causes danger or is not otherwise acceptable, stop the drive and machinery using the appropriate stop mode before activating the Safe torque off function.
 - The Safe torque off function overrides all other functions of the drive unit.
 - The Safe torque off function is ineffective against deliberate sabotage or misuse.
 - The Safe torque off function has been designed to reduce the recognized hazardous conditions. In spite of this, it is not always possible to eliminate all potential hazards. The assembler of the machine must inform the final user about the residual risks.
-

Maintenance

After the operation of the circuit is validated at start-up, the STO function shall be maintained by periodic proof testing. In high demand mode of operation, the maximum proof test interval is 20 years. In low demand mode of operation, the maximum proof test interval is 5 or 2 years; see section [Safety data](#) (page 377). It is assumed that all dangerous failures of the STO circuit are detected by the proof test. To perform the proof test, do the [Validation test procedure](#) (page 372).

Note: See also the Recommendation of Use CNB/M/11.050 (published by the European co-ordination of Notified Bodies) concerning dual-channel safety-related systems with electromechanical outputs:

- When the safety integrity requirement for the safety function is SIL 3 or PL e (cat. 3 or 4), the proof test for the function must be performed at least every month.
- When the safety integrity requirement for the safety function is SIL 2 (HFT = 1) or PL d (cat. 3), the proof test for the function must be performed at least every 12 months.

The STO function does not contain any electromechanical components.

In addition to proof testing, it is a good practice to check the operation of the function when other maintenance procedures are carried out on the machinery.

Include the Safe torque off operation test described above in the routine maintenance program of the machinery that the drive runs.

If any wiring or component change is needed after start up, or the parameters are restored, do the test given in section [Validation test procedure](#) (page 372).

Use only spare parts approved by ABB.

Record all maintenance and proof test activities in the machine logbook.

■ Competence

The maintenance and proof test activities of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6.

Fault tracing

The indications given during the normal operation of the Safe torque off function are selected by drive parameter 31.22.

The diagnostics of the Safe torque off function cross-compare the status of the two STO channels. In case the channels are not in the same state, a fault reaction function is performed and the drive trips on an “STO hardware failure” fault. An attempt to use the STO in a non-redundant manner, for example activating only one channel, will trigger the same reaction.

376 *Safe torque off function*

See the firmware manual of the drive control program for the indications generated by the drive, and for details on directing fault and warning indications to an output on the control unit for external diagnostics.

Any failures of the Safe torque off function must be reported to ABB.

Safety data

The safety data for the Safe torque off function is given below.

Note: The safety data is calculated for redundant use, and does not apply if both STO channels are not used.

Frame size	SIL/SILCL	PL	SFF (%)	PFH ($T_1 = 20$ a) (1/h)	PFD _{avg} ($T_1 = 2$ a)	PFD _{avg} ($T_1 = 5$ a)	MTTF _D (a)	DC (%)	Cat.	SC	HFT	CCF	T _M (a)
U_n = 230 V													
R1	3	e	>99	2.79E-09	2.34E-05	5.83E-05	2755	≥90	3	3	1	80	20
R2	3	e	>99	2.79E-09	2.34E-05	5.83E-05	2756	≥90	3	3	1	80	20
R3	3	e	>99	2.59E-09	2.28E-05	5.69E-05	2856	≥90	3	3	1	80	20
R4	3	e	>99	2.59E-09	2.28E-05	5.67E-05	2870	≥90	3	3	1	80	20
R5	3	e	>99	3.94E-09	2.28E-05	5.69E-05	2856	≥90	3	3	1	80	20
R6	3	e	>99	3.92E-09	3.44E-05	8.59E-05	9380	≥90	3	3	1	80	20
R7	3	e	>99	3.92E-09	3.44E-05	8.59E-05	9380	≥90	3	3	1	80	20
R8	3	e	>99	3.92E-09	3.44E-05	8.59E-05	9380	≥90	3	3	1	80	20
U_n = 400 V													
R1	3	e	>99	2.55E-09	2.24E-05	5.59E-05	2918	≥90	3	3	1	80	20
R2	3	e	>99	2.55E-09	2.24E-05	5.59E-05	2918	≥90	3	3	1	80	20
R3	3	e	>99	2.62E-09	2.31E-05	5.75E-05	2823	≥90	3	3	1	80	20
R4	3	e	>99	2.59E-09	2.28E-05	5.67E-05	2870	≥90	3	3	1	80	20
R5	3	e	>99	2.59E-09	2.28E-05	5.68E-05	2868	≥90	3	3	1	80	20
R6	3	e	>99	3.92E-09	3.44E-05	8.59E-05	9380	≥90	3	3	1	80	20
R7	3	e	>99	3.92E-09	3.44E-05	8.59E-05	9380	≥90	3	3	1	80	20
R8	3	e	>99	4.22E-09	3.69E-05	9.24E-05	8792	≥90	3	3	1	80	20
R9	3	e	>99	4.22E-09	3.69E-05	9.24E-05	8792	≥90	3	3	1	80	20
U_n = 600 V													
R2	3	e	>99	2.67E-09	2.24E-05	5.57E-05	2920	≥90	3	3	1	80	20
R3	3	e	>99	2.61E-09	2.30E-05	5.72E-05	2840	≥90	3	3	1	80	20
R5	3	e	>99	2.59E-09	2.28E-05	5.69E-05	2933	≥90	3	3	1	80	20
R7	3	e	>99	4.25E-09	3.72E-05	9.29E-05	6443	≥90	3	3	1	80	20
R8	3	e	>99	4.25E-09	3.72E-05	9.29E-05	6443	≥90	3	3	1	80	20
R9	3	e	>99	4.25E-09	3.72E-05	9.29E-05	6443	≥90	3	3	1	80	20

3AXD10000776787 A, 3AXD10000015777 N

- The following temperature profile is used in safety value calculations:
 - 670 on/off cycles per year with $\Delta T = 71.66$ °C
 - 1340 on/off cycles per year with $\Delta T = 61.66$ °C
 - 30 on/off cycles per year with $\Delta T = 10.0$ °C
 - 32 °C board temperature at 2.0% of time
 - 60 °C board temperature at 1.5% of time
 - 85 °C board temperature at 2.3% of time.

- The STO is a type A safety component as defined in IEC 61508-2.
 - Relevant failure modes:
 - The STO trips spuriously (safe failure)
 - The STO does not activate when requested
 - A fault exclusion on the failure mode “short circuit on printed circuit board” has been made (EN 13849-2, table D.5). The analysis is based on an assumption that one failure occurs at one time. No accumulated failures have been analyzed.
 - STO response times:
 - STO reaction time (shortest detectable break): 1 ms
 - STO response time: 2 ms (typical), 5 ms (maximum)
 - Fault detection time: Channels in different states for longer than 200 ms
 - Fault reaction time: Fault detection time + 10 ms
 - Indication delays:
 - STO fault indication (parameter 31.22) delay: < 500 ms
 - STO warning indication (parameter 31.22) delay: < 1000 ms.
-

■ Abbreviations

Abbr.	Reference	Description
Cat.	EN ISO 13849-1	Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behavior in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability. The categories are: B, 1, 2, 3 and 4.
CCF	EN ISO 13849-1	Common cause failure (%)
DC	EN ISO 13849-1	Diagnostic coverage
HFT	IEC 61508	Hardware fault tolerance
MTTF _D	EN ISO 13849-1	Mean time to dangerous failure: (Total number of life units) / (Number of dangerous, undetected failures) during a particular measurement interval under stated conditions
PFD _{avg}	IEC 61508	Average probability of dangerous failure on demand, that is, mean unavailability of a safety-related system to perform the specified safety function when a demand occurs
PFH	IEC 61508	Average frequency of dangerous failures per hour, that is, average frequency of a dangerous failure of a safety related system to perform the specified safety function over a given period of time
PL	EN ISO 13849-1	Performance level. Levels a...e correspond to SIL.
SC	IEC 61508	Systematic capability
SFF	IEC 61508	Safe failure fraction (%)
SIL	IEC 61508	Safety integrity level (1...3)
SILCL	IEC/EN 62061	Maximum SIL (level 1...3) that can be claimed for a safety function or subsystem
STO	IEC/EN 61800-5-2	Safe torque off
T ₁	IEC 61508-6	Proof test interval. T ₁ is a parameter used to define the probabilistic failure rate (PFH or PFD) for the safety function or subsystem. Performing a proof test at a maximum interval of T ₁ is required to keep the SIL capability valid. The same interval must be followed to keep the PL capability (EN ISO 13849) valid. See also section <i>Maintenance</i> on page 375.
T _M	EN ISO 13849-1	Mission time: the period of time covering the intended use of the safety function/device. After the mission time elapses, the safety device must be replaced. Note that any T _M values given cannot be regarded as a guarantee or warranty.

■ TÜV certificate

The TÜV certificate is available on the Internet at www.abb.com/drives/document.

Declarations of conformity



EU Declaration of Conformity

Machinery Directive 2006/42/EC

We

Manufacturer:
Address:
Phone:

ABB Oy
Hiomotie 13, 00380 Helsinki, Finland.
+358 10 22 11

declare under our sole responsibility that the following product:

Frequency converter

ACS580-01

with regard to the safety functions

- Safe Torque Off
- Safe stop 1 (SS1-t, with FSPS-21 PROFIsafe module, +Q986)

is in conformity with all the relevant safety component requirements of EU Machinery Directive 2006/42/EC, when the listed safety function is used for safety component functionality.

The following harmonized standards have been applied:

EN 61800-5-2:2007

Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional

EN 62061:2005
+ AC:2010 + A1:2013 + A2:2015

Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems

EN ISO 13849-1:2015

Safety of machinery – Safety-related parts of control systems. Part 1: General requirements

EN ISO 13849-2:2012

Safety of machinery – Safety-related parts of the control systems. Part 2: Validation

EN 60204-1:2018

Safety of machinery – Electrical equipment of machines – Part 1: General requirements

The following other standards have been applied:

IEC 61508:2010, parts 1-2

Functional safety of electrical / electronic / programmable electronic safety-related systems

IEC 61800-5-2:2016

Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional

The product(s) referred in this Declaration of conformity fulfil(s) the relevant provisions of other European Union Directives which are notified in Single EU Declaration of conformity 3AXD10000497690.

Person authorized to compile the technical file:

Name and address: Jussi Vesti, Hiomotie 13, 00380 Helsinki, Finland.

Helsinki, March 30, 2021

Signed for and on behalf of:

Tuomo Tarula
Local Division Manager, ABB Oy

Harri Mustonen
Product Unit Manager, ABB Oy

Document number 3AXD10000302783



Declaration of Conformity

Supply of Machinery (Safety) Regulations 2008

We
 Manufacturer: ABB Oy
 Address: Hiomotie 13, 00380 Helsinki, Finland.
 Phone: +358 10 22 11

declare under our sole responsibility that the following product:

Frequency converter

ACS580-01

with regard to the safety functions

- Safe Torque Off
- Safe stop 1 (SSI-t, with FSPS-21 PROFIsafe module, +Q986)

is in conformity with all the relevant safety component requirements of the Supply of Machinery (Safety) Regulations 2008, when the listed safety function is used for safety component functionality.

The following harmonized standards have been applied:
 EN 61800-5-2:2007

Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional
 Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems

EN 62061:2005
 + AC:2010 + A1:2013 + A2:2015

Safety of machinery – Safety-related parts of control systems. Part 1: General requirements

EN ISO 13849-1:2015

Safety of machinery – Safety-related parts of the control systems. Part 2: Validation

EN ISO 13849-2:2012

Safety of machinery – Electrical equipment of machines – Part 1: General requirements

EN 60204-1:2018

The following other standards have been applied:
 IEC 61508:2010, parts 1-2

Functional safety of electrical / electronic / programmable electronic safety-related systems

IEC 61800-5-2:2016

Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional

The product(s) referred in this declaration of conformity fulfill(s) the relevant provisions of other UK statutory requirements, which are notified in a single declaration of conformity 3AXD10001325742.

Person authorized to compile the technical file:

Name and address: Jussi Vesti, Hiomotie 13, 00380 Helsinki, Finland.

Helsinki, March 30, 2021
 Signed for and on behalf of:

Tuomo Tarula
 Local Division Manager, ABB Oy

Harri Mustonen
 Product Unit Manager, ABB Oy

Document number 3AXD10001329534

14

Optional I/O extension and adapter modules

Contents of this chapter

This chapter describes how to install and start up the optional CHDI-01, CMOD-01, and CMOD-02 extension modules and CBAI-01 adapter module. The chapter also contains diagnostics and technical data.

CHDI-01 115/230 V digital input extension module

■ Safety instructions




WARNING! Obey the safety instructions for the drive. If you ignore the safety instructions, injury or death can occur.

■ Hardware description

Product overview

The CHDI-01 115/230 V digital input extension module expands the inputs of the drive control unit. It has six high voltage inputs and two relay outputs.

Layout



Item	Description	Additional information
1	Grounding screw	-
2	Hole for mounting screw	-
3	3-pin terminal blocks for relay outputs	Page 385
4	3-pin terminal block for 115/230 V inputs	Page 385
5	Diagnostic LED	Page 387

■ Mechanical installation

Necessary tools and instructions

- Screwdriver and a set of suitable bits.

Unpacking and examining the delivery

1. Open the option package.
2. Make sure that the package contains:
 - CHDI-01 high voltage digital extension module
 - mounting screw.
3. Make sure that there are no signs of damage.

Installing the module

Note: [Frame R1](#): Do not install this module before you have installed the power cables as it would cover the power terminals,

See section [Installing option modules](#) on page 157 (IEC) or [Installing option modules](#) on page 211 (North America).

■ Electrical installation

Warnings



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical work.

Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.

Necessary tools and instructions

- Screwdriver and a set of suitable bits
- Cabling tools

Terminal designations

For more detailed information on the connectors, see section [Technical data](#) on page 396.

Relay outputs

Marking		Description
50	RO4C	Common, C
51	RO4A	Normally closed, NC
52	RO4B	Normally open, NO
53	RO5C	Common, C
54	RO5A	Normally closed, NC
55	RO5B	Normally open, NO

115/230 V inputs

Marking		Description
70	HDI7	115/230 V input 1
71	HDI8	115/230 V input 2
72	NEUTRAL ¹⁾	Neutral point

Marking		Description
73	HDI9	115/230 V input 3
74	HDI10	115/230 V input 4
75	NEUTRAL ¹⁾	Neutral point
76	HDI11	115/230 V input 5
77	HDI12	115/230 V input 6
78	NEUTRAL ¹⁾	Neutral point

¹⁾ Neutral points 72, 75 and 78 are connected.


General cabling instructions

Obey the instructions given in chapter *Guidelines for planning the electrical installation* on page 81.


Wiring

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.

Relay output connection example



Digital input connection example



■ Start-up

Setting the parameters

1. Power up the drive.
2. If no warning is shown,
 - make sure that the value of both parameter 15.02 Detected extension module and parameter 15.01 Extension module type is CHDI-01.
 If warning A7AB Extension I/O configuration failure is shown,
 - make sure that the value of parameter 15.02 Detected extension module is CHDI-01.
 - set parameter 15.01 Extension module type to CHDI-01.
 You can now see the parameters of the extension module in parameter group 15 I/O extension module.
3. Set the parameters of the extension module to applicable values.

Parameter setting example for relay output

This example shows how make relay output RO4 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.07 RO4 source	Reverse
15.08 RO4 ON delay	1 s
15.09 RO4 OFF delay	1 s

■ Diagnostics

Faults and warning messages

Warning A7AB Extension I/O configuration failure.

LEDs


The extension module has one diagnostic LED.

Color	Description
Green	The extension module is powered up.

■ **Technical data**

Dimension drawing:

The dimensions are in millimeters and [inches].




Installation: Into an option slot on the drive control unit

Degree of protection: IP20

Ambient conditions: See the drive technical data.

Package: Cardboard

Isolation areas:



Relay outputs (50...52, 53...55):

- Wire size max. 1.5 mm²
- Minimum contact rating: 12 V / 10 mA
- Maximum contact rating: 250 V AC / 30 V DC / 2 A
- Maximum breaking capacity: 1500 VA

115/230 V inputs (70...78):

- Wire size max. 1.5 mm²
- Input voltage: 115...230 V AC ±10%
- Maximum current leakage in digital off state: 2 mA

CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O)

■ **Safety instructions**



WARNING! Obey the safety instructions for the drive. If you ignore the safety instructions, injury or death can occur.

■ **Hardware description**

Product overview

The CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O) expands the outputs of the drive control unit. It has two relay outputs and one transistor output, which can function as a digital or frequency output.


In addition, the extension module has an external power supply interface, which can be used to power up the drive control unit in case the drive power supply fails. If you do not need the back-up power supply, you do not have to connect it because the module is powered from the drive control unit by default.

Note: In frames R6...R9 do not use CMOD-01 module power terminals for external 24 V AC/DC supply. Connect the external supply directly to terminals 40 and 41 on the control unit.



WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

Layout



Item	Description	Additional information
1	Grounding screw	Page 391
2	Hole for mounting screw	Page 391
3	3-pin terminal blocks for relay outputs	Page 392
4	3-pin terminal block for transistor output	Page 392
5	2-pin terminal block for external power supply	Page 392
6	Diagnostic LED	Page 395

■ Mechanical installation

Necessary tools and instructions

- Screwdriver and a set of suitable bits.

Unpacking and examining the delivery

1. Open the option package.
2. Make sure that the package contains:
 - CMOD-01 multifunction extension module
 - mounting screw.
3. Make sure that there are no signs of damage.

Installing the module

Note: Frame R1: Do not install this module before you have installed the power cables as it would cover the power terminals,

See section [Installing option modules](#) on page 157 (IEC) or [Installing option modules](#) on page 211 (North America).

■ Electrical installation

Warnings



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical work.

Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.

Necessary tools and instructions

- Screwdriver and a set of suitable bits
- Cabling tools

Terminal designations

For more detailed information on the connectors, see section [Technical data](#) on page 396.

Relay outputs

Marking		Description
50	RO4C	Common, C
51	RO4A	Normally closed, NC
52	RO4B	Normally open, NO
53	RO5C	Common, C
54	RO5A	Normally closed, NC
55	RO5B	Normally open, NO

Transistor output

Marking		Description
42	DO1 SRC	Source input
43	DO1 OUT	Digital or frequency output
44	DO1 SGND	Ground (earth) potential

External power supply

The external power supply is needed only if you want to connect an external back-up power supply for the drive control unit.

Note: Frames R1...R5 need CMOD-01 for connecting external power supply, frames R6...R9 have corresponding terminals 40 and 41 on the control unit.

Marking		Description
40	24V AC/DC + in	External 24 V (AC/DC) input
41	24V AC/DC - in	External 24 V (AC/DC) input


General cabling instructions

Obey the instructions given in chapter [Guidelines for planning the electrical installation](#) on page 81.


Wiring



Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.

Relay output connection example



Digital output connection example



Frequency output connection exampleExternal power supply connection example

WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

■ Start-up

Setting the parameters

1. Power up the drive.
2. If no warning is shown,
 - make sure that the value of both parameter 15.02 Detected extension module and parameter 15.01 Extension module type is CMOD-01.
 If warning A7AB Extension I/O configuration failure is shown,
 - make sure that the value of parameter 15.02 Detected extension module is CMOD-01.
 - set parameter 15.01 Extension module type to CMOD-01.

You can now see the parameters of the extension module in parameter group 15 I/O extension module.

3. Set the parameters of the extension module to applicable values.

Examples are given below.

Parameter setting example for relay output

This example shows how make relay output RO4 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.07 RO4 source	Reverse
15.08 RO4 ON delay	1 s
15.09 RO4 OFF delay	1 s

Parameter setting example for digital output

This example shows how to make digital output DO1 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.22 DO1 configuration	Digital output
15.23 DO1 source	Reverse
15.24 DO1 ON delay	1 s
15.25 DO1 OFF delay	1 s

Parameter setting example for frequency output

This example shows how to make digital output DO1 of the extension module indicate the motor speed 0... 1500 rpm with a frequency range of 0...10000 Hz.

Parameter	Setting
15.22 DO1 configuration	Frequency output
15.33 Freq out 1 source	01.01
15.34 Freq out 1 src min	0
15.35 Freq out 1 src max	1500.00
15.36 Freq out 1 at src min	1000 Hz
15.37 Freq out 1 at src max	10000 Hz

■ Diagnostics

Faults and warning messages

Warning A7AB Extension I/O configuration failure.

LEDs


The extension module has one diagnostic LED.

Color	Description
Green	The extension module is powered up.

■ **Technical data**

Dimension drawing:

The dimensions are in millimeters and [inches].




Installation: Into an option slot on the drive control unit

Degree of protection: IP20

Ambient conditions: See the drive technical data.

Package: Cardboard

Isolation areas:**Relay outputs (50...52, 53...55):**

- Wire size max. 1.5 mm²
- Minimum contact rating: 12 V / 10 mA
- Maximum contact rating: 250 V AC / 30 V DC / 2 A
- Maximum breaking capacity: 1500 VA

Transistor output (42...44):

- Wire size max. 1.5 mm²
- Type: Transistor output PNP
- Maximum load: 4 kohm
- Maximum switching voltage: 30 V DC
- Maximum switching current: 100 mA / 30 V DC, short-circuit protected
- Frequency: 10 Hz ... 16 kHz
- Resolution: 1 Hz
- Inaccuracy: 0.2%

External power supply (40...41):

- Wire size max. 1.5 mm²
 - 24 V AC / V DC ±10% (GND, user potential)
 - Maximum current consumption: 25 W, 1.04 A at 24 V DC
-

CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)

■ Safety instructions



WARNING! Obey the safety instructions for the drive. If you ignore the safety instructions, injury or death can occur.

■ Hardware description

Product overview

The CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface) has a motor thermistor connection for supervising the motor temperature and one relay output, which indicates the thermistor status. The thermal relay output can be connected to Safe Torque off input to trigger the STO when CMOD-02 has detected overtemperature.

In addition, the extension module has an external power supply interface, which can be used to power up the drive control unit in case the drive power supply fails. If you do not need the back-up power supply, you do not have to connect it because the module is powered from the drive control unit by default.


There is reinforced insulation between the motor thermistor connection, the relay output and the drive control unit interface. Thus, you can connect a motor thermistor to the drive through the extension module.

Note: In frames R6...R9 do not use CMOD-01 module power terminals for external 24 V AC/DC supply. Connect the external supply directly to terminals 40 and 41 on the control unit.



WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

Layout



Item	Description	Additional information
1	Grounding screw	Page 400
2	Hole for mounting screw	Page 400
3	2-pin terminal block for motor thermistor connection	Page 401
4	2-pin terminal block for relay output	Page 401
5	2-pin terminal block for external power supply	Page 401
6	Diagnostic LED	Page 404

■ Mechanical installation

Necessary tools and instructions

- Screwdriver and a set of suitable bits

Unpacking and examining the delivery

1. Open the option package.
2. Make sure that the package contains:
 - CMOD-02 multifunction extension module
 - mounting screw
3. Make sure that there are no signs of damage.

Installing the module

Note: Frame R1: Do not install this module before you have installed the power cables as it would cover the power terminals,

See section [Installing option modules](#) on page 157 (IEC) or [Installing option modules](#) on page 211 (North America).

■ Electrical installation

Warnings



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical work.

Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.

Necessary tools and instructions

- Screwdriver and a set of suitable bits
- Cabling tools

Terminal designations

For more detailed information on the connectors, see section [Technical data](#) on page 405.

Motor thermistor connection

Marking		Description
60	PTC IN	PTC connection
61	PTC IN	Ground (earth) potential

Relay output

Marking		Description
62	RO PTC C	Common, C
63	RO PTC B	Normally open, NO

External power supply

The external power supply is needed only if you want to connect an external back-up power supply for the drive control unit.

Note: Frames R1...R5 need CMOD-01 for connecting external power supply, frames R6...R9 have corresponding terminals 40 and 41 on the control unit.


Marking		Description
40	24V AC/DC + in	External 24 V (AC/DC) input
41	24V AC/DC - in	External 24 V (AC/DC) input

General cabling instructions

Obey the instructions given in chapter [Guidelines for planning the electrical installation](#) on page 81.



Wiring

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables

Motor thermistor connection example

The PTC input is reinforced/double insulated. If the motor part of the PTC sensor and wiring are reinforced/double insulated, voltages on the PTC wiring are within SELV limits.

If the motor PTC circuit is not reinforced/double insulated (ie, it is basic insulated), it is mandatory to use reinforced/double insulated wiring between the motor PTC and CMOD-02 PTC terminal.

Relay output connection examplePower supply connection example

WARNING! Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

■ Start-up

Setting the parameters

1. Power up the drive.
 2. If no warning is shown,
 - make sure that the value of both parameter 15.02 Detected extension module and parameter 15.01 Extension module type is CMOD-02.
- If warning A7AB Extension I/O configuration failure is shown,
- make sure that the value of parameter 15.02 Detected extension module is CMOD-02.
 - set parameter 15.01 Extension module type to CMOD-02.

You can now see the parameters of the extension module in parameter group 15 I/O extension module.

■ **Diagnostics**

Faults and warning messages

Warning A7AB Extension I/O configuration failure.

LEDs


The extension module has one diagnostic LED.

Color	Description
Green	The extension module is powered up.

■ **Technical data**

Dimension drawing:

The dimensions are in millimeters and [inches].




Installation: Into an option slot on the drive control unit

Degree of protection: IP20

Ambient conditions: See the drive technical data.

Package: Cardboard

Isolation areas:**Motor thermistor connection (60...61):**

- Wire size max. 1.5 mm²
- Supported standards: DIN 44081 and DIN 44082
- Number of PTC thermistor relays: 1 or 3...6 in series
- Triggering threshold: 3.6 kohm ±10%
- Recovery threshold: 1.6 kohm ±10%
- PTC terminal voltage: ≤ 5.0 V
- PTC terminal current: < 1 mA
- Short-circuit detection: < 50 ohm ±10%

Relay output (62...63):

- Wire size max. 1.5 mm²
- Maximum contact rating: 250 V AC / 30 V DC / 5 A
- Maximum breaking capacity: 1000 VA

External power supply (40...41):

- Wire size max. 1.5 mm²
- 24 V AC / V DC ±10% (GND, user potential)
- Maximum current consumption: 25 W, 1.04 A at 24 V DC

CBAI-01 bipolar analog IO adapter module

■ Safety instructions




WARNING! Obey the safety instructions for the drive. If you ignore the safety instructions, injury or death can occur.

■ Hardware description

Product overview

The CBAI-01 transforms up to two bipolar analog inputs (eg. $-10\dots+10$ V) to respective unipolar analog inputs $0\dots+10$ V. It includes two bipolar analog inputs, two unipolar analog outputs, and a switch which can be used to select scaling of the analog output level.

Layout

Item	Description	Additional information
1	Analog output 3	Page 409
2	Analog input 3	Page 409
3	Analog output scale switch	Page 414
4	Grounding hole	-
5	Control unit interface (slot 2)	-
6	Diagnostic LED	Page 412
7	Analog output 4	Page 409
8	Analog input 4	Page 409

■ Mechanical installation

Necessary tools and instructions

- Screwdriver and a set of suitable bits.

Unpacking and examining the delivery

1. Open the option package. Make sure that the package contains:
 - CBAI-01 bipolar analog IO adapter module
 - mounting screw.
2. Make sure that there are no signs of damage.

Installing the module

Note: [Frame R1](#): Do not install this module before you have installed the power cables as it would cover the power terminals,

See section [Installing option modules](#) on page 157 (IEC) or [Installing option modules](#) on page 211 (North America).

■ Electrical installation

Warnings



WARNING! Obey the instructions in chapter [Safety instructions](#) on page 15. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical work.

Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.

Necessary tools and instructions

- Screwdriver and a set of suitable bits
- Cabling tools

Terminal designations

For more detailed information on the connectors, see section [Technical data](#) on page 413.

Analog inputs

Marking		Description
80	AI3+	Analog input positive signal
81	AI3-	Analog input negative signal
82	SCR	Cable shield connection (routed directly to output SCR)
83	AI4+	Analog input positive signal
84	AI4-	Analog input negative signal
85	SCR	Cable shield connection (routed directly to output SCR)

Analog outputs

Marking		Description
86	AO3	Analog output signal
87	AGND	Analog ground potential
88	SCR	Cable shield connection (routed directly to input SCR)

89	AO4	Analog output signal
90	AGND	Analog ground potential
91	SCR	Cable shield connection (routed directly to input SCR)

General cabling instructions


Obey the instructions given in chapter *Guidelines for planning the electrical installation* on page 81.

Wiring


Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.

Note: Do not connect both ends of the cable shields directly to ground.

Analog input connection example




Analog output connection example




An alternative way to make the connection is to connect the cable shield to the SCR terminal of the control unit.


Analog input connection example 2



Analog output connection example 2



Wiring example, adapter module and control unit



Start-up

Setting the parameters

1. Power up the drive.
2. Verify that the diagnostic LED is on.

Parameter setting example for AI1 (control unit)

This example shows how to set the control unit parameters for a bipolar speed reference ranging from -50...50 Hz, with detection of a wire break between the adapter module and the control unit of the drive.

Parameter	Setting	Default
12.17 AI1 min	0.5 V	4.000 mA or 0.000 V
12.18 AI1 max	9.5 V	20.000 mA or 10.000 V
12.19 AI1 scaled at AI1 min	-50	0.000
12.20 AI1 scaled at AI1 max	50	50

32.05 Supervision 1 function	Low	Disabled
32.06 Supervision 1 action	Fault	No action
32.07 Supervision 1 signal	AI1	Frequency
32.09 Supervision 1 low	0.4	0.00

■ **Diagnostics**

LEDs


The adapter module has one diagnostic LED.

Color	Description
Green	The adapter module is powered up.

■ **Technical data**

Dimension drawing

The dimensions are in millimeters and [inches].




Installation: Into an option slot on the drive control unit

Degree of protection: IP20

Ambient conditions: See the drive technical data.

Package: Cardboard

Isolation areas:



Analog inputs (80...82, 83...85)

- Wire size max. 1.5 mm²
- Input voltage (AI+ and AI-): -10 V ... +10 V
- Input resistance: > 200 kohm
- Optional cable shield connection

Analog outputs (86...88, 89...91)

- Wire size max. 1.5 mm²
- Output voltage (AO and AGND): 0 V ... 10 V
- Output resistance: < 20 ohm
- Recommended load: > 10 kohm
- Inaccuracy: typical ± 1%, max. ± 1.5% of full scale
- Optional cable shield connection

Analog output scale switch

- ON state: 0.5 V ... 9.5 V range in use
- OFF state: 0 V ... 10 V range in use

15

Common mode, du/dt and sine filters

Content of this chapter

This chapter describes how to select external filters for the drive.

Common mode filters

■ When is a common mode filter needed?

See section [Examining the compatibility of the motor and drive](#), page 83.

Common mode filter kits are available from ABB, see the table on page 416. A kit includes three wound cores. For installation instructions of the cores, see the instruction included in the core package.

du/dt filters

■ When is a du/dt filter needed?

See section [Examining the compatibility of the motor and drive](#), page 83.

See the table of du/dt filters on page 416.

■ Common mode filter types

IEC ratings at $U_n = 400 \text{ V}$ and 480 V , UL (NEC) ratings at $U_n = 480 \text{ V}$

For common mode filters for smaller types, contact your local representative.

Type ACS580 -01-	Common mode filters ABB drives	Frame size	North American type ACS580-01
062A-4	64315811	R4	052A-4
073A-4	64315811	R4	065A-4
088A-4	64315811	R5	078A-4
106A-4	64315811	R5	096A-4
145A-4	3AXD50000017269	R6	124A-4
169A-4	3AXD50000017270	R7	156A-4
206A-4	3AXD50000017270	R7	180A-4
246A-4	3AXD50000018001	R8	240A-4
293A-4	3AXD50000018001	R8	260A-4
363A-4	3AXD50000017940	R9	361A-4
430A-4	3AXD50000017940	R9	414A-4

■ du/dt filter types

IEC ratings at $U_n = 230 \text{ V}$, UL (NEC) ratings at $U_n = 208/230 \text{ V}$

Type ACS580 -01-	du/dt filters ABB drives	Frame size	North American type ACS580-01
04A7-2	NOCH0016-6x	R1	04A6-2
06A7-2	NOCH0016-6x	R1	06A6-2
07A6-2	NOCH0016-6x	R1	07A5-2
012A-2	NOCH0016-6x	R1	10A6-2
018A-2	NOCH0016-6x	R1	017A-2
025A-2	NOCH0030-6x	R2	024A-2
032A-2	NOCH0030-6x	R2	031A-2
047A-2	NOCH0070-6x	R3	046A-2
060A-2	NOCH0070-6x	R3	059A-2
-	NOCH0070-6x	R4	075A-2
089A-2	NOCH0070-6x	R5	088A-2
115A-2	NOCH0120-6x	R5	114A-2
144A-2	FOCH0260-70	R6	143A-2
171A-2	FOCH0260-70	R7	169A-2
213A-2	FOCH0260-70	R7	211A-2
276A-2	FOCH0260-70	R8	273A-2

IEC ratings at $U_n = 400$ V and 480 V, UL (NEC) ratings at $U_n = 480$ V

Type ACS580 -01-	du/dt filters	Frame size	North American type ACS580-01
	ABB drives		
02A7-4	NOCH0016-6x	R1	02A1-4
03A4-4	NOCH0016-6x	R1	03A0-4
04A1-4	NOCH0016-6x	R1	03A5-4
05A7-4	NOCH0016-6x	R1	04A8-4
07A3-4	NOCH0016-6x	R1	06A0-4
09A5-4	NOCH0016-6x	R1	07A6-4
12A7-4	NOCH0016-6x	R1	012A-4
018A-4	NOCH0016-6x or NOCH0030-6x	R2	014A-4
026A-4	NOCH0030-6x	R2	023A-4
033A-4	NOCH0070-6x	R3	027A-4
039A-4	NOCH0070-6x	R3	034A-4
046A-4	NOCH0070-6x	R3	044A-4
062A-4	NOCH0070-6x	R4	052A-4
073A-4	NOCH0070-6x or NOCH0120-6x	R4	065A-4
088A-4	NOCH0120-6x	R5	078A-4
106A-4	NOCH0120-6x	R5	096A-4
145A-4	FOCH0260-70	R6	124A-4
169A-4	FOCH0260-70	R7	156A-4
206A-4	FOCH0260-70	R7	180A-4
246A-4	FOCH0260-70	R8	240A-4
293A-4	FOCH0260-70	R8	260A-4
363A-4	FOCH0320-50	R9	361A-4
430A-4	FOCH0320-50	R9	414A-4

■ **Description, installation and technical data of the FOCH filters**

See *FOCH du/dt filters hardware manual* (3AFE68577519 [English]).

■ **Description, installation and technical data of the NOCH filters**

See *AOCH and NOCH du/dt filters hardware manual* (3AFE58933368 [English]).

Sine filters

■ Selecting a sine filter for the drive

IEC ratings at $U_n = 400\text{ V}$ and 480 V , UL (NEC) ratings at $U_n = 480\text{ V}$

Type ACS580 -01-	Sine filter type		Frame size	North American type ACS580-01
	IP00	IP20		
02A7-4	B84143V0006R231	B84143V0004R229 + B84143Q0002R229	R1	02A1-4
03A4-4	B84143V0006R231	B84143V0004R229 + B84143Q0002R229	R1	03A0-4
04A1-4	B84143V0006R231	B84143V0004R229 + B84143Q0002R229	R1	03A5-4
05A7-4	B84143V0006R231	B84143V0006R229 + B84143Q0002R229	R1	04A8-4
07A3-4	B84143V0007R231	B84143V0011R229 + B84143Q0004R229	R1	06A0-4
09A5-4	B84143V0012R231	B84143V0011R229 + B84143Q0004R229	R1	07A6-4
12A7-4	B84143V0012R231	B84143V0016R229 + B84143Q0006R229	R1	012A-4
018A-4	B84143V0016R229	B84143V0016R229 + B84143Q0006R229	R2	014A-4
026A-4	B84143V0038R231	B84143V0025R229 + B84143Q0008R229	R2	023A-4
033A-4	B84143V0038R231	B84143V0033R229 + B84143Q0008R229	R3	027A-4
039A-4	B84143V0038R231	B84143V0050R229 + B84143Q0010R229	R3	034A-4
046A-4	B84143V0043R231	B84143V0050R229 + B84143Q0010R229	R3	044A-4
062A-4	B84143V0064R231	B84143V0066R229 + B84143Q0010R229	R4	052A-4
073A-4	B84143V0064R231	B84143V0066R229 + B84143Q0010R229	R4	065A-4
088A-4	B84143V0077R231	B84143V0095R229 + B84143Q0012R229	R5	078A-4
106A-4	B84143V0091R231	B84143V0095R229 + B84143Q0012R229	R5	096A-4
145A-4	B84143V0145R231	B84143V0162S229 + B84143Q0014R229	R6	124A-4
169A-4	B84143V0209R231	B84143V0162S229 + B84143Q0014R229	R7	156A-4
206A-4	B84143V0209R231	B84143V0230S229 + B84143Q0016R229	R7	180A-4

Type ACS580 -01-	Sine filter type		Frame size	North American type ACS580-01
	IP00	IP20		
246A-4	B84143V0209R231	B84143V0230S229 + B84143Q0016R229	R8	240A-4
293A-4	B84143V0249R231	B84143V0390S229 + B84143Q0018R229	R8	260A-4
363A-4	B84143V0390S229	B84143V0390S229 + B84143Q0018R229	R9	361A-4
430A-4	B84143V0390S229	B84143V0390S229 + B84143Q0018R229	R9	414A-4

■ Description, installation and technical data

See *Sine filters hardware manual* (3AXD50000016814 [English]).

Further information

Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to abb.com/searchchannels.

Product training

For information on ABB product training, navigate to new.abb.com/service/training.

Providing feedback on ABB Drives manuals

Your comments on our manuals are welcome. Navigate to new.abb.com/drives/manuals-feedback-form.

Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at abb.com/drives/documents.



abb.com/drives



3AXD5000044794C