

DCR300-20

4Q PWM Microprocessor-based Chassis
Adjustable Speed Drive
for Low Voltage PMDC Brush Motors

Specifications

Model	Source Voltage (VDC)	Armature Voltage Range (VDC)	Peak Armature Current (Amps)	Motor Horsepower Range
DCR300-20	12	Up to 95% of Source Voltage	20*	1/75 - 1/9
	24			1/40 - 1/4

* Peak current rating for 1 minute. Continuous current rating is 10 amps.


Source Voltage	7 - 30 VDC
Form Factor	1.01 at base speed
Acceleration Time Range	0.5 - 15 seconds
Deceleration Time Range	0.5 - 15 seconds
Analog Input Voltage Range	0 - 5 VDC
Input Impedance (S1 to S2)	>100K ohms
Load Regulation	1% base speed
Speed Range	80:1
Vibration (0 - 50 Hz)	0.5G maximum
(>50 Hz)	0.1G maximum
Ambient Temperature Range	0°C - 40°C
Weight	0.18 lbs

Safety Warnings

READ ALL SAFETY WARNINGS BEFORE INSTALLING THIS EQUIPMENT

- **DO NOT INSTALL, REMOVE, OR REWIRE THIS EQUIPMENT WITH POWER APPLIED.** Have a qualified electrical technician install, adjust and service this equipment. Follow the National Electrical Code and all other applicable electrical and safety codes, including the provisions of the Occupational Safety and Health Act (OSHA), when installing equipment.
- Avoid direct contact with the printed circuit board or with circuit elements to prevent the risk of serious injury or fatality. Use a non-metallic screwdriver for adjusting the calibration trim pots. Use approved personal protection equipment and insulated tools if working on this drive with power applied.
- The drive is not diode-protected from reverse battery voltage. You must ensure that the positive terminal is wired to POWER+ and the negative terminal is wired to POWER-.
- Reduce the chance of an electrical fire, shock, or explosion by using proper grounding techniques, over-current protection, thermal protection, and enclosure. Follow sound maintenance procedures.
- **Removing DC power is the only acceptable method for emergency stopping.** Do not use regenerative braking, decelerating to minimum speed, or coasting to a stop for emergency stopping. They may not stop a drive that is malfunctioning. Removing DC power is the only acceptable method for emergency stopping.
- Applying and removing DC source voltage is recommended for infrequent starting and stopping of a drive only. Regenerative braking, decelerating to minimum speed, or coasting to a stop is recommended for frequent starts and stops. Frequent starting and stopping can produce high torque. This may cause damage to motors.
- **Do not disconnect any of the motor leads from the drive** unless power is removed or the drive is disabled. Opening any one lead while the drive is running may destroy the drive.
- Under no circumstances should power and logic level wires be bundled together.
- Be sure potentiometer tabs do not make contact with the potentiometer's body. Grounding the input may cause damage to the drive.

Dimensions



ALL DIMENSIONS IN INCHES [MILLIMETERS]

Installation

Mounting

- Drive components are sensitive to electrostatic discharge. Avoid direct contact with the circuit components.
- Protect the drive from dirt, moisture, and accidental contact.
- Provide sufficient room for access to the terminal block and calibration trim pots.
- Mount the drive away from heat sources. Operate the drive within the specified ambient operating temperature range.
- Prevent loose connections by avoiding excessive vibration of the drive.
- Mount the drive with its board in either a horizontal or vertical plane. Four 0.15" (4 mm) wide holes in the board accept #6 pan head screws.

Wiring

- Use 18 - 24 AWG wire for logic wiring.
- Use 10 - 12 AWG wire for DC source (POWER +, POWER -) and motor (A1, A2) wiring.

Shielding Guidelines

As a general rule, ACE recommends shielding of all conductors. If it is not practical to shield power conductors, ACE recommends shielding all logic-level leads. If shielding of logic-level leads is not practical, the user should twist all logic leads with themselves to minimize induced noise. It may be necessary to earth ground the shielded cable. If noise is produced by devices other than the drive, ground the shield at the drive end. If noise is generated by the drive, ground the shield at the end away from the drive. Do not ground both ends of the shield.

Fusing

ACE drives require an external line fuse for protection. Use fast acting fuses rated for at least 150% of the maximum armature voltage and current. Fuse the positive terminal.


Connections

Input Power

Connect the DC input power leads to terminals POWER + (positive) and POWER - (negative). **Connecting the DC input power backwards will cause damage to the drive.**

Motor

Connect the DC armature leads to terminals A1 and A2. If the motor does not spin in the desired direction, power down the drive and reverse these connections.



Speed Potentiometer

Use a 10K ohm, 1/4 W potentiometer for speed control. Connect the counter-clockwise end of the potentiometer to terminal 3, the wiper to terminal 2, and the clockwise end to terminal 1. If the potentiometer works inversely of desired functionality, (i.e. to increase motor speed, you must turn the potentiometer counterclockwise), power off the drive and swap the terminal 1 and 3 connections.

Forward & Reverse Inhibit

Connect a forward inhibit switch to terminals 7 and 8 and a reverse inhibit switch to terminals 9 and 10. Opening a connection regeneratively brakes the motor to a stop. The inhibits bypass the DECEL trim pot. The forward inhibit switch has no effect if the motor is running in reverse, and vice versa. If the use of only one inhibit switch is desired, jumper terminals 7 and 9 and then connect the switch to either the forward or reverse inhibit input. If no inhibit switches are desired, jumper terminals 7 and 8 and jumper terminals 9 and 10. **Do not use the Inhibit functions for emergency stopping.**

Enable

Connect an enable switch to terminals 4 and 6. Close the switch to run and open the switch to coast the motor to a stop. The enable comes into effect regardless of direction. If no switch is desired, jumper terminals 4 and 6. **Do not use the Enable function for emergency stopping.**

Direction

Connect a direction switch to terminals 5 and 6. Close the switch to change direction.

Coil

The COIL terminals supply a voltage equal to the input power to an electro-mechanical DC brake. The voltage is removed after a short delay once the enable switch is opened or the inhibit switch corresponding to the commanded direction is opened. The voltage is reapplied to the COIL terminals once the enable switch is closed, the inhibit switch corresponding to the commanded direction is closed, and the motor is being commanded a speed other than zero.

Startup

STARTUP

- Verify that no foreign conductive material is present on the printed circuit board.
- Ensure that all jumpers are properly set.

1. Turn the speed adjust potentiometer full counterclockwise (CCW) if in Unidirectional Mode. Set to the mid-position if in Bidirectional Mode (if MIN SPD is at mid position, see Calibration section).
2. Apply AC line voltage.
3. Close the Enable.
4. Slowly advance the speed adjust potentiometer clockwise (CW). The motor slowly accelerates as the potentiometer is turned CW. Continue until the desired speed is reached.
5. Remove AC line voltage from the drive to coast the motor to a stop.


LEDs

Power (PWR): Green LED

- Off: The drive does not have power.
- Blinking: The source voltage is either below 7 VDC or above 32 VDC.
- Solid: The source voltage is within range and the drive is operating correctly.

Status (FLT): Red LED

- Solid: The drive is either in Torque Limit or Regenerative Torque Limit.
- Continuous Blinking: The drive is overheating. Provide more ventilation to the drive or decrease the load.
- 2 Blinks: The drive is approaching an under-voltage trip or has entered an under-voltage trip.
- 3 Blinks: The drive has entered an over-voltage trip.



Calibration

Minimum Speed (MIN SPD): The MIN SPD setting determines the minimum motor speed when the speed adjust potentiometer is set for minimum speed. It is factory set for zero speed. To calibrate the MIN SPD:

1. Set the MIN SPD trim pot full CCW.
2. Set the speed adjust potentiometer for minimum speed.
3. Adjust MIN SPD until the desired minimum speed is reached or is just at the threshold of rotation.

Forward Maximum Speed (FWD SPEED): The FWD SPEED setting determines the maximum motor speed in the forward direction (when A1 is positive with respect to A2). To calibrate the FWD SPEED:

1. Set the FWD SPEED trim pot full CCW.
2. Set the speed adjust potentiometer for maximum speed.
3. Adjust FWD SPEED until the desired maximum speed is reached.


Reverse Maximum Speed (REV SPEED): The REV SPEED setting determines the maximum motor speed in the reverse direction (when A2 is positive with respect to A1). To calibrate the REV SPEED:

1. Set the REV SPEED trim pot full CCW.
2. Set the speed adjust potentiometer for maximum speed.
3. Adjust REV SPEED until the desired maximum speed is reached.

Forward Torque (MOTOR CL): The MOTOR CL setting determines the maximum torque for accelerating and driving the motor in the forward and reverse directions. To calibrate the MOTOR CL:

1. With the power disconnected from the drive, connect a DC ammeter in series with the armature.
2. Set the MOTOR CL trim pot to minimum (full CCW).
3. Set the speed adjust potentiometer to maximum forward speed (full CW).
4. Carefully lock the motor armature. Be sure that the motor is firmly mounted.
5. Apply power source. The motor should be stopped.
6. Slowly adjust the MOTOR CL trim pot CW until the armature current is 150% of motor rated armature current.
7. Turn the speed adjust potentiometer to minimum speed (full CCW).
8. Remove power source.
9. Remove the stall from the motor.
10. Remove the ammeter in series with the motor armature if it is no longer needed.

Reverse Torque (REGEN CL): The REGEN CL setting determines the maximum torque for decelerating the motor and resisting an overhauling load in the forward and reverse directions. Turn the REGEN CL trim pot CW to increase the regen current limit and CCW to decrease the regen current limit. See the approximate settings below.



IR Compensation (IR COMP): The IR COMP setting determines the degree to which motor speed is held constant as the motor load changes. To calibrate the IR COMP:

1. Set the IR COMP trim pot full CCW.
2. Increase the speed adjust potentiometer until the motor runs at midspeed without load. A handheld tachometer may be used to measure motor speed.
3. Load the motor armature to its full load armature current rating. The motor should slow down.
4. While keeping the load on the motor, rotate the IR COMP trim pot until the motor runs at the speed measured in step 2. If the motor oscillates (overcompensation), the IR COMP trim pot may be set too high (CW). Turn the IR COMP trim pot CCW to stabilize the motor.
5. Unload the motor.

Acceleration (ACCEL): The ACCEL setting determines the time the motor takes to ramp to a higher speed. To calibrate the ACCEL, turn the ACCEL trim pot CW for a longer acceleration time and CCW for a shorter acceleration time.

Deceleration (DECEL): The DECEL setting determines the time the motor takes to ramp to a lower speed. To calibrate the DECEL, turn the DECEL trim pot CW for a longer deceleration time and CCW for a shorter deceleration time.

Operations

Unidirectional Mode vs. Bidirectional (WigWag) Mode

Unidirectional Mode - In unidirectional mode, the potentiometer determines the speed of the motor. The direction switch determines the direction. For Unidirectional Mode, leave the jumper on the WIGWAG header open.


Bidirectional Mode - In bidirectional mode, the potentiometer determines the speed and the direction of the motor:

- Full CCW = Full Speed Reverse
- 50% = Stop / Zero Speed
- Full CW = Full Speed Forward

Closing the direction switch will invert the potentiometer.

- Full CCW = Full Speed Forward
- 50% = Stop / Zero Speed
- Full CW = Full Speed Reverse

For Bidirectional mode, place a jumper on the WIGWAG header. Bidirectional Mode can also be referred to as WigWag Mode.



Copyright 2012 by American Control Electronics® - All rights reserved. No part of this document may be reproduced or retransmitted in any form without written permission from American Control Electronics®. The information and technical data in this document are subject to change without notice. American Control Electronics® makes no warranty of any kind with respect to this material, including, but not limited to, the implied warranties of its merchantability and fitness for a given purpose. American Control Electronics® assumes no responsibility for any errors that may appear in this document and makes no commitment to update or to keep current the information in this document.