

BR Combination Arc Fault Circuit Breaker

For the BR **combination** arc fault circuit breaker, a **standard LED** blinking light indicates the following trip codes:

- No blink pattern = manual disconnect / short circuit
- LED blink pattern 1 = series arc
- LED blink pattern 2 = parallel arc
- LED blink pattern 3 = overload
- LED blink pattern 4 = overvoltage
- LED blink pattern 6 = self-test failure

