

Replacing Collar Assembly on FSQC

Installation & Maintenance Information

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

⚠ WARNING

To avoid electric shock:
Be certain power is OFF before and during installation and maintenance.

1. Remove spring door
 - a. Loosen spring door screw (Figure 1).
 - b. Unthread the spring door assembly (Figure 1).




Figure 1

2. Remove stop screw (Figure 1).
3. Remove assembly screw (Figure 1).
4. Collar assembly slides off (Figure 2).




Figure 2

5. Slide new collar assembly onto receptacle.

NOTE: There is a slot on the inside diameter that needs to line up with the screw on the receptacle collar.

6. Install new assembly screw and stop screw
7. Insert plug and test for proper operation.
8. Re-attach spring door (Figure 3)



Figure 3

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Cooper Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.