




### COMBINATIONS FOR PUSHBUTTONS AND SELECTOR SWITCHES



#### SPRING-RETURN BUTTONS





#### PUSH-PUSH BUTTONS





#### MUSHROOM-HEAD SPRING-RETURN BUTTONS




#### MUSHROOM-HEAD LATCH BUTTONS





#### DOUBLE-TOUCH BUTTONS



#### TRIPLE-TOUCH BUTTONS



#### SELECTOR SWITCHES



#### MECHANICAL SPRING-RETURN RESET BUTTONS

