

PSEN ml b 1.1/2.1/2.2




▶ PSEN sensor technology

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



1	Introduction	6
1.1	Validity of documentation	6
1.2	Using the documentation	6
1.3	Definition of symbols	6
2	Safety	8
2.1	Intended use	8
2.2	Safety regulations	9
2.2.1	Safety assessment	9
2.2.2	Additional documents that apply	9
2.2.3	Use of qualified personnel	9
2.2.4	Warranty and liability	9
2.2.5	Disposal	10
2.3	For your safety	10
3	Overview	11
3.1	Approved combinations	
3.2	Device features	11
4	Function description	
4.1	Structure	
4.2	Activation of safety inputs S31 and S41 (solenoid operation)	13
4.2.1	Activation with specification of direction	
4.2.2	Activation without specification of direction	
4.3	Safety Device Diagnostics	
4.4	Operating modes	
4.5	Block diagram	
4.6	Auxiliary release	
4.6.1	Recommissioning	
4.7	Prevent restart	
4.8	Escape release	
4.8.1	Recommissioning	23
5	Wiring	
5.1	Important information	
5.2	Pin assignment, connector and cable	
5.3	EMC requirements	24
6	Connection to control systems and evaluation devices	
6.1	Important information	
6.2	Minimum requirements for activation of guard locking	
6.3	Single connection	
6.4	Connection to Pilz evaluation devices	28
7	Teaching in the actuator	
7.1	PSEN ml 1.1	
7.2	PSEN ml 2.1	
7.3	PSEN ml 2.2	30

8	Installation	31
8.1	Important information	31
8.2	Installation types	32
8.2.1	Installation on sliding gate	32
8.2.2	Installation on swing gate	33
8.3	Installation safety switch	35
8.3.1	Installation without mounting plate	36
8.3.2	Installation with mounting plate	36
8.3.3	Installation using L-brackets	37
8.4	Installation actuator	37
8.4.1	Installation without mounting bracket	37
8.4.2	Installation with mounting bracket	38
8.4.3	Install fixing screws in parallel to actuator	39
8.4.4	Install fixing screws side-on to actuator	39
8.5	Centre the bolt in the actuator housing	40
8.6	Rotate the bolt in the actuator housing 90°	41
8.7	Escape release	42
8.7.1	Important information	42
8.7.2	Installation positions for escape release	43
8.7.3	Installation stationary escape release	44
8.7.4	Installation external escape release	46
8.7.5	Removing escape release	48
9	Adjustment	50
10	Operation	51
10.1	Normal mode	51
10.2	Error display	53
11	Checks and maintenance	54
12	Dimensions	55
13	Technical details	63
13.1	Classification according to ZVEI, CB24I	67
13.2	Safety characteristic data	67
14	Supplementary data	69
14.1	Radio approval	
14.2	Technical details for mounting bracket without handle unit	69
14.3	Technical details for mounting bracket with handle unit	69
14.4	Technical details escape release 570460, 570462, 570470	70
14.5	Technical details escape release 570466-570469	
14.6	Technical details escape release 570471-570473	
14.7	Technical details escape release 570474-570475	
15	Order reference	71
15.1	System	

15.2	Accessories	71
16	Appendix	74
17	EC declaration of conformity	75

1 Introduction

1.1 Validity of documentation

This documentation is valid for the product PSEN ml b 1.1/2.1/2.2 from Version 2.0.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

2 Safety

2.1 Intended use

The safety gate system is used for interlocking and guard locking swing gates and sliding gates.

The safety gate system can be operated in two ways:

Unlocking with condition

The safety gate system prevents the safety gate from being unlocked while there is any hazard within the danger zone.

Unlocking without condition

The operator can unlock the safety gate system at any time. After starting the unlocking, the guard locking creates a stop command. The time required to unlock the interlocking guard has to be longer than the time required to stop the hazardous machine function.

The hazardous machine function may only be executed under the following conditions:

- ▶ There is a high signal at safety outputs 12 and 22 and
- ▶ There is a low signal at safety outputs S31 (Lock/Unlock Request 1) and S41 (Lock/Unlock Request 2).

Safety inputs S31 and S41 (solenoid operation) may only be operated under the following condition:

▶ Plant is in a safe condition

Make sure that this is the case with an AND operation in the safety system immediately before the output is operated.

The safety switch meets the requirements in accordance with:

- ▶ EN 60947-5-3: PDDB
- ▶ EN 62061: SIL CL 3
- ▶ EN ISO 13849-1: PL e (Cat. 4)
- ▶ EN ISO 14119: Coding level with PSEN ml 1.1: low, type 4
- ▶ EN ISO 14119: Coding level with PSEN ml 2.1/2.2: high, type 4
- ▶ The safety switch may only be used in the approved combinations (see Approved combinations [☐ 11]).

The safety level PL e (Cat. 4)/SIL CL 3 is only achieved if

- ▶ the safety outputs use 2-channel processing
- ▶ The solenoid has 2-channel operation via safe, tested outputs, suitable for PL e (Cat. 4)/ SIL CL 3 applications.

With 1-channel operation of the safety inputs S31 (Lock/Unlock Request 1) and S41 (Lock/Unlock Request 2) it is only possible to achieve safety level PL d (Cat. 2)/SIL CL 2.

Foreseeable misuse

- ▶ Safety switches and actuators of the safety gate system must not be used as mechanical limit stops
- ▶ Use of the under corrosive environmental conditions (cooling emulsions, surface treatment, gases, ...)

2.2 Safety regulations

2.2.1 Safety assessment

Before using a device it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

2.2.2 Additional documents that apply

Please read and take note of the following documents.

Only for use of the Safety Device Diagnostics (SDD)

- Operating manual for the fieldbus module, for example SDD ES ETH or SDD ES PROFIBUS
- ▶ System description "Safety Device Diagnostics"

For the use of passive junctions

- ▶ Operating manual of a passive junction, for example:
 - PSEN ml Y junction M12

You will need to be conversant with the information in these documents in order to fully understand this operating manual.

2.2.3 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

2.2.4 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- Damage can be attributed to not having followed the guidelines in the manual,
- Operating personnel are not suitably qualified,

▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

2.2.5 Disposal

- ▶ In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

2.3 For your safety

▶ Do not remove the connector's protective cap until you are just about to connect the unit. This will prevent potential contamination.



WARNING!

Risk of injury due to loss of the safety function.

Substituting an actuator for an inappropriate actuator of the interlock and guard locking system may lead to serious injury and death.

- You should prevent the interlocking and guard locking system from being manipulated with an inappropriate actuator.
- Keep the substitute actuator in a safe place and protect it from unauthorised access.
- Install substitute actuators as described in Installation [31].
- Destroy any used actuators before disposal.

3 Overview

3.1 Approved combinations

An approved combination (unit) consists of a safety switch and the corresponding actuator. Information such a product type, features and order number, see Order reference [71].

PSEN ml 1.1

Safety switch	Actuator
PSEN ml b 1.1 switch	PSEN ml 1.1 actuator
	PSEN ml 1.1 round actuator

PSEN ml 2.X

Safety switch	Actuator
PSEN ml b 2.1 switch	PSEN ml 2.1 actuator
	PSEN ml 2.1 round actuator
PSEN ml b 2.2 switch	PSEN ml 2.1 actuator
	PSEN ml 2.1 round actuator

3.2 Device features


- ▶ Safe guard locking for swing gates and sliding gates
- ▶ Safe interlocking (position monitoring)
- ▶ Transponder technology
- 2 safety outputs
- ▶ Safety Device Diagnostics (SDD)
 - Safety Device Diagnostics can be used to poll sensor information, to perform actions and to read configuration parameters
 - Manipulation protection in accordance with ISO 14119 is possible by verifying the short name of the actuator through the controller via SDD communication
- ▶ Diagnostic input for Y1 for Safety Device Diagnostics (SDD)
- ▶ Signal output/diagnostic output Y32 for Safety Device Diagnostics
- Monitoring of shorts between the safety outputs
- ▶ Guard locking element keeps the safety gate from being opened unintentionally
- ▶ Auxiliary release for opening the safety gate
- ▶ 1 signal output
- Suitable for left and right hinged safety gates
- ▶ Pilz coding type PNOZ ml 1.1: Coded
- ▶ Pilz coding type PNOZ ml 2.1/2.2: Fully coded /uniquely coded
- ▶ M12, 8-pin male connector
- ▶ LEDs:
 - Supply voltage/fault
 - Status of actuator

- Status of guard locking
- Input lights up yellow (without function)
- ▶ The bolt in the actuator can be rotated 90° in the actuator housing before the actuator is installed. As a result, the actuator can be installed vertically or horizontally.
- ▶ The safety switch can be expanded with up to three stationary and/or external escape releases (see Order reference: Accessories [☐ 71]).

The stationary escape release can be extended two times at a maximum by 25 mm.

The external escape releases are available with push/pull cables with a length of between 0.5 and 4 m (increments 50 cm).

- ▶ On small door radiuses, (see Install the safety switch horizontally at a swing gate [33]) the PSEN ml actuator center ring can be inserted (see Order reference: Accessories [71]).
- ▶ The actuator is available in two types (see Order reference: Accessories [☐ 71]).
 - Standard actuator
 - Actuator with rounded tip




4 Function description

4.1 Structure

The interlocking and guard locking system prevents the safety gates to the danger zone from being opened while there is any hazard within the danger zone (machine movement, voltage, ...).

The safety outputs may have a high or low signal, depending on the position of the actuator and the signal path of safety inputs S31 and S41 (solenoid operation).



Safety outputs 12 and 22

Under these conditions there is a high signal at safety outputs 12 and 22:

- ▶ The actuator is detected
- Guard locking pin has successfully been activated (guard locking pin is in the locked position)

If one of these conditions is not met, the signal at the safety outputs will be low.

▶ Diagnostic input Y1

If a fieldbus module of the SDD is used, the diagnostic input Y1 is automatically activated and data is read.

If no fieldbus module of the SDD is used, the diagnostic input Y1 must not be used.

▶ Signal output/diagnostic output Y32

The status of the actuator is output. If a fieldbus module of the SDD is used, the signal output/diagnostic output for the writing of data is activated.

4.2 Activation of safety inputs S31 and S41 (solenoid operation)

▶ If there is a low signal at safety inputs S31 and S41, the guard locking pin does not change its position.

Guard locking may only be deactivated once the hazardous movement has been completed.


Active use of Safety Device Diagnostics

▶ The safety inputs S31 and S41 have a high signal within max. 500 ms after the receipt of the guard locking activation.

Guard locking is activated through a high signal (duration 350 - 400 ms) at inputs S31 and S41 (solenoid operation). After activation, the inputs must be low. Another pulse (duratiion 350 - 400 ms) at these inputs deactivates guard locking.

4.2.1 Activation with specification of direction

- ▶ The guard locking is activated when the time between the rising edges from S31 to S41 is between 40 ms and 500 ms (S31 before S41).
- ▶ The guard locking is deactivated when the time between the rising edges from S31 to S41 is between 40 ms and 500 ms (S41 before S31).



Legend

 t_{max} Maximum time between the rising edges from S31 and S42

4.2.2 Activation without specification of direction

▶ The guard locking changes its state when the time between the rising edges from S31 and S41 < 20 ms.

4.3 Safety Device Diagnostics

Safety Device Diagnostics is an option that can be selected independently of the safety-related wiring.

When using the Safety Device Diagnostics, up to 16 sensors can be connected as a subscriber to a fieldbus module.

The communication of the sensors with the fieldbus module is automatically built up again with each new supply of the supply voltage. As a result, a sensor can be exchanged, e.g. when servicing, without the need for special measures.

An exchange can be detected via the fieldbus module e.g. through the serial number.

- With Safety Device Diagnostics there are the following diagnostic options for the fieldbus module:
 - Poll information of the sensors (examples: what sensor in the series has switched, at what point could there be an open circuit in the series connection)
 - Read configuration parameters of the sensor (examples: Number of teach-in processes remaining, serial number of the switch)
 - Perform actions (example: poll updated actuator name)
 - Selectively activate or deactivate guard locking of individual PSEN ml within a series connection

The results of the sensor diagnostics can be checked already during the installation phase via the display in the fieldbus module, without the need to connect the fieldbus module to the network.


- With Safety Device Diagnostics there are the following diagnostic options for the fieldbus module for simple wiring:
 - Information is passed on via the fieldbus module directly to the network
 - Mappings of the signal outputs to the sensor are automated by the SDD.

This prevents wiring errors and an expansion or reduction of the sensors is possible without the need to change existing wiring.

- Wiring in accordance with IP20: Rapid installation in the control cabined is enabled.

Further information on Safety Device Diagnostics can be found in Additional documents that apply [9].

▶ Series connection of diagnostics with Safety Device Diagnostics



4.4 Operating modes

The safety switch can be used in various operating modes.

- Operation without safety device diagnostics
 - Standard operating mode
 - After every restart the safety switch is in operation without Safety Device Diagnostics.
 - No communication with Safety Device Diagnostics
 - Activating/deactivating the guard locking is only via the signals S31 and S41
- ▶ Operation with passive use of the Safety Device Diagnostics
 - Safety switch supplies diagnostic data to Safety Device Diagnostics
 - Activating/deactivating the guard locking is only via the signals S31 and S41
- ▶ Operation with active use of the Safety Device Diagnostics
 - Activate/deactivate the guard locking by a combination of a Safety Device Diagnostics command and the status of the safety inputs S31 and S41 (S31 and S41 must have a high signal).
 - The safety requirements are guaranteed by the signals S31 and S41 (the fieldbus for Safety Device Diagnostics communication is not safe).
- ▶ Operation with specification of direction when activating/deactivating he guard locking
 A specification of direction can be used to control the change of the guard locking status.
 - Toggling: The safety switch changes with each simultaneous controlling of S31 and S41 the guard locking status (activated <-> deactivated).
 - Force Direction: The safety switch is selectively activated or deactivated by offset activation of the rising edges of S31 and S41.

Timing diagrams




Fig.: Active use of Safety Device Diagnostics

Legend

- [1] Gate is open
- [2] Gate is closed
- [3] Guard locking is activated by the safety control system
- [4] Guard locking is activated
- [5] Execution of the hazardous machine function is permitted
- [6] Outputs will be deactivated
- [7] Guard locking will be deactivated
- [8] Gate is open
- [t1] Processing time of guard locking signal = 100 ms
- [t2] Time window for changing guard locking status





Fig.: Passive use of the Safety Device Diagnostics

Legend

- [1] Gate is open
- [2] Gate is closed
- [3] Guard locking is activated
- [4] Execution of the hazardous machine function is permitted
- [5] Outputs will be deactivated
- [6] Guard locking will be deactivated
- [7] Gate is open
- [t1] Processing time of guard locking signal = 100 ms
- [t2] Time window for changing guard locking status


4.5 Block diagram



4.6 Auxiliary release

The auxiliary release enables guard locking to be opened from the access side to the danger zone.

The safety switch has auxiliary releases on three sides.






INFORMATION

If guard locking is deactivated using the auxiliary release, there is a low signal at safety outputs 12 and 22. An error code will be issued (see under Operation [44] 52]) and the safety switch switches to a fault condition.

It is possible to open the guard locking using the control system.



Legend

- [1] Auxiliary release screw Torx T10
- [2] Security screw Torx T10, sealed with varnish when delivered

Mode of operation

- 1. Remove the security screw [2] using a Torx T10 screwdriver.
- 2. Rotate the auxiliary release screw [1] half a turn anti-clockwise using a Torx T10 screw-driver. The guard locking pin is displaced and the bolt is released.

The safety gate to the danger zone can be opened.

4.6.1 Recommissioning

Recommission the safety switch

- 1. Rotate the auxiliary release screw [1] (see Figure [20]) half a turn clockwise using a Torx T10 screwdriver.
- 2. Re-insert the security screw [2] (see Figure [20]) using a Torx T10 screwdriver.
- 3. Seal the security screw with varnish.
- 4. Switch the voltage off and then on again.
- 5. Carry out a function test on the safety switch and actuator. The safety function may only be checked by qualified personnel.




INFORMATION

If the auxiliary release screw is not turned back correctly after use, the safety switch switches to a fault condition.

4.7 Prevent restart

To prevent the machine restarting (unintentionally) while there is someone inside the danger zone, a padlock can be attached via the through hole on the actuator (see diagram). As a result the actuator cannot engage with the safety switch, guard locking is not activated and the machine is prevented from starting.



Legend

- [1] Through hole on the actuator for attaching a padlock
- [2] Padlock
- [3] Actuator

If the actuator is to blocked using several locks in parallel, a multiple lock can be used (e.g. Brady – Lockout device, article no. 852439).


4.8 Escape release

Distinction between escape release and emergency release

- ▶ The emergency release enables the manual release of the guard locking without aids from outside the hazardous area.
- ▶ The emergency release enables the manual release of the guard locking without aids from within the danger zone and it corresponds to an escape release in accordance with EN ISO 14119.

If the escape release accessory (stationary or external) is installed within the danger zone, the accessory can be used as an escape release in accordance with EN ISO 14119.

If the escape release accessory (stationary or external) is installed outside the danger zone, the accessory can be used as an escape release in accordance with EN ISO 14119.



Legend

- [1] Escape release stationary
- [2] Escape release externally
- [3] Tension pressure cables in lengths of 0.50 m to 4 m $\,$
- [4] Button of the escape release pin
- [5] Escape release pin



INFORMATION

If guard locking is deactivated using the auxiliary release, there is a low signal at safety outputs 12 and 22. An error code will be issued (see under Operation [44] 52]) and the safety switch switches to a fault condition.

Mode of operation

If in the hazardous area the button of the escape release pin [4] is pressed towards the safety gate, the escape release impacts directly on the auxiliary release of the safety switch and the auxiliary release unlocks the safety gate. The safety gate can be opened immediately, enabling the operator to leave the danger zone.

There is a low signal at safety outputs 12 and 22 if the escape release was operated.

Scope

- ▶ Scope of supply stationary escape release
 - 1 escape release stationary
 - 1 adapter disk
 - 2 screws for adapter disk
 - 4 screws for installation on the adapter disk
- ▶ Scope of supply external escape release
 - 1 escape release external with installed push/pull cables (see Order reference:
 Accessories [71])
 - 1 adapter disk
 - 2 screws for adapter disk
 - 4 screws for installation on the adapter disk

4.8.1 Recommissioning

- 1. Pull back the button of the escape release pin.
- 2. Switch the voltage off and then on again.
- 3. Carry out a function test using the escape release. The safety function may only be checked by qualified personnel.

5 Wiring

5.1 Important information

- ▶ Hand-tighten the connector.
- ▶ Please note the information provided under Technical details [☐ 63].
- ▶ Note the max. cable length when operating with Safety Device Diagnostics.

Supply voltage on the safety control system	Max. cable length
≥ 20.4 V	50 m
≥ 24 V	120 m
≥ 28.8 V	180 m

5.2 Pin assignment, connector and cable



NOTICE

The colour marking for the connection lead only applies for the cable that Pilz supplies as an accessory.



8-pin M12 connector

PIN	Function	Terminal designation	Cable colour (Pilz cable)
1	Operation of solenoid to open and close guard locking (channel 2)	S41	white
2	+24 V UB	A1	Brown
3	Safety output channel 1	12	Green
4	Safety output channel 2	22	Yellow
5	Signal output/diagnostic output	Y32	grey
6	Operation of solenoid to open and close guard locking (channel 1)	S31	Pink
7	0 V UB	A2	Blue
8	Diagnostics input	Y1	Red

5.3 EMC requirements

▶ Ensure the wiring and EMC requirements of EN 60204-1 are met.

- ▶ UL requirement: The supply voltage to the safety switch must be protected with a quick-acting fuse (see Technical details [63]).
- ▶ The inputs and outputs of the safety switch must have a protective separation to voltages over 60 VDC.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).



INFORMATION

Only use safety relays with a 24 VDC supply voltage. Safety relays with a wide-range power supply or in AC device versions have internal potential isolation and are not suitable as evaluation devices.

6 Connection to control systems and evaluation devices

6.1 Important information

The selected evaluation device must have the following properties:

- 2-channel with plausibility monitoring Both OSSDs must change the switch state synchronously. In particular, the evaluation device must monitor that the state of both OSSDs was "Gate unlocked" before both return to the "Gate locked" state and vice-versa.
- ▶ OSSD signals are evaluated through 2 channels
- ▶ The state of the OSSDs must be tested before and after safety inputs S31 and S41 are activated (solenoid operation) (see Timing diagram [☐ 17])
- ▶ The use of Safety Device Diagnostics is described in the System Description "Safety Device Diagnostics".



WARNING!

Risk of injury due to loss of the safety function.


The safety function can be lost when the safe state is not checked regularly.

- Use an evaluation device/safety system to test whether the plant is in a safe condition.
- Do not operate the solenoid via S31/S41 unless the plant is in a safe condition.

6.2 Minimum requirements for activation of guard locking


Use in PL e (Cat. 4) applications

- ▶ Safety inputs S31 and S41 (solenoid operation) have 2-channel operation via safe outputs, which are suitable for PL e (Cat. 4) applications
- 2-channel operation for safety inputs S31 and S41 (solenoid operation), each with 0.5 A
- ▶ 2-channel processing of safety outputs
- Monitoring of shorts across signal cables through activation of guard locking



Use in PL d (Cat. 3) applications

- ▶ 2-channel operation for safety inputs S31 and S41 (solenoid operation) via relay outputs
- ▶ 2-channel operation for safety inputs S31 and S41 (solenoid operation), each with 0.5 A
- ▶ 2-channel processing of safety outputs
- ▶ Exclusion of shorts across signal cables through appropriate measures (e.g. protected cable layout, see EN ISO 13849-2)



Legend

[1] Protected cable layout


Use in PL d (Cat. 2) applications

- ▶ 1-channel operation for safety inputs S31 and S41 (solenoid operation)
- ▶ 2-channel processing of safety outputs

24 V 0 V Α1 A2 12 Safety control system PSEN ml PSEN ml 22 Activation of guard safety switch actuator locking Y32 S31 S41 Lock/Unlock Request

▶ 1-channel operation for interconnected safety inputs S31 and S41 (solenoid operation), with 1 A

6.3 Single connection



6.4 Connection to Pilz evaluation devices

The safety switch can be connected to Pilz evaluation devices, for example.


Suitable Pilz evaluation devices are, for example:

▶ PNOZmulti for safety gate monitoring Configure the switch in the PNOZmulti Configurator with switch type 3. ▶ PSSuniversal PLC for safety gate monitoring with function block FS_SafetyGate

The correct connection to the respective evaluation device is described in the operating manual for the evaluation device. Make sure that the connection is made in accordance with the specifications in the operating manual for the selected evaluation device.

Connection to PNOZmulti is illustrated by way of example.

Connection example with PNOZmulti and Safety Device Diagnostics



7 Teaching in the actuator

7.1 PSEN ml 1.1

Any corresponding Pilz actuator (see Technical Details [44 63]) is detected as soon as it is brought into the response range.

7.2 PSEN ml 2.1

Teaching in the actuator for the first time:

The first actuator to be detected by the safety switch (see Technical details [44] 63]) is taught in automatically as soon as it is brought into the response range.

To teach in a new actuator:

- A maximum of 8 learning procedures are possible.
- The actuator that is to be taught in must be brought into the safety switch's response range as the only transponder. As soon as the actuator is detected, the "Safety Gate" LED will flash yellow.
- 2. After 20 s has elapsed, the "Safety Gate" LED turns to quick yellow flashes. Trigger a system reset in the next 120 s by interrupting the power supply.
- 3. When the supply voltage is switched back on, the learning procedure is complete and the number of permitted additional learning procedures is reduced by 1.



NOTICE

- The actuator must not be removed during the learning procedure.
- This actuator cannot be retaught on the same safety switch.

7.3 PSEN ml 2.2

The first actuator to be detected by the safety switch (see Technical details [44 63]) is taught in automatically as soon as it is brought into the response range.



NOTICE

No other actuator may be taught in once this actuator has been taught.

8 Installation

8.1 Important information



NOTICE

Install the safety switch and actuator so that the possibilities of defeat are reduced to a minimum (see guidelines for reducing the possibilities for defeating interlocking devices in EN ISO 14119).




NOTICE

Install safety switch and actuator so that it is not possible to reach through with hand or finger.

- ▶ The fastening of safety switch and actuator has to be sufficiently stable to ensure the proper operation of the safety switch and the actuator.
- ▶ Prevent the safety switch and actuator being exposed to heavy shock or vibration.
- Installation of the safety switch and actuator must be concealed.
- ▶ The mounting surfaces for safety switches and actuators can have a max. unevenness of 0.5 mm.
- ▶ The actuator must rest flush on the mounting surface.
- ▶ The safety switch and actuator should be installed opposite each other in parallel.
- After installation, at least one of the auxiliary releases/escape releases must be operated.
- ▶ Use the same type of screw to attach the safety switch and actuator.
- ▶ Use non-removable flat head locking screws to attach the safety switch and actuator (e.g. cheese-head or pan head screws) or rivets.
- ▶ For a minimum screw depth of 6 mm, M5 screws with resistance class 8.8 should be used to attach the safety switch and actuator.
- For a minimum screw depth of 7.2 mm, M6 screws with resistance class 8.8 should be used to attach the L-bracket.
- ▶ Prevent self-loosening of the fastening elements,
 - On the safety switch: Through maintaining the max. torque setting (see Technical details [44 63]).
 - On the actuator: Through maintaining the max. torque setting (see Technical details [4] 63]) and bonded screw retention.

8.2 Installation types

8.2.1 Installation on sliding gate



Legend

- [1] Safety switch, installed on gate frame
- [2] Actuator with mounting bracket (available as Accessory [71]), installed on sliding gate
- 1. Install the safety switch with the fixing screws of the safety switch in parallel to the actuator [39] or side-on to actuator [39] on the gate frame.
- 2. Use two M5 screws to fix the actuator to the gate.

8.2.2 Installation on swing gate





Fig.: Swing gate with internal and external hinge

Legend

- [1] Safety switch on gate frame
- [2] Actuator, installed on swing gate
- 1. Install the safety switch with the fixing screws of the safety switch in parallel to the actuator [39] or side-on to actuator [39] on the gate frame.
- 2. Use two M5 screws to fix the actuator to the gate.


The actuator should engage smoothly into the safety switch.




Install the safety switch horizontally at a swing gate

Depending on the installation boundary conditions, a larger gate radius may be required (see diagram).

Please contact Pilz when smaller gate radiuses are required.



Maintain a slight shift of the rotation point of the door when installing the actuator.



Legend

- R The distance of the upper part of the safety switch from the rotation point of the door
- X Parallel shift of the actuator
- $\boldsymbol{\alpha}$ Tilt angle when installing the actuator
- ▶ Tilt the actuator by 10° when installing, when the door radius is R < 600 mm.

 Pilz recommends that you use the PSEN ml actuator 10° adapter for correctly installing the actuator.

8.3 Installation safety switch

▶ To fix the safety switch at the three possible mounting positions, there are three drill holes on three sides.

As a result, the safety switch can be installed on the frames of left and right hinged sliding gates and swing gates. If necessary use a Mounting plate [36] or Mounting bracket [38] (see Order reference: Accessories [71]).

Different holding forces arise, based on the installation.

- Fixing screws in parallel to actuator [39]:

Holding force $F_{Zh} = 7.500 \text{ N}$,

Holding force F_{1max} in accordance with EN ISO 14119 = 15.000 N

- Fixing screws side-on to actuator [39]:

Holding force $F_{Zh} = 5.000 N$,

Holding force F_{1max} in accordance with EN ISO 14119 = 10.000 N




INFORMATION

The specified holding forces only apply to installation without mounting bracket. The holding forces when installed with a mounting bracket can be found in the table "Technical details for mounting bracket [69]".

The tapped holes must have a depth of at least 6 mm.


Installation of safety switch	Tapped hole
Fixing screws in parallel/side-on to actuator, no mounting plate	Tapped holes for four M5 screws on the mounting surface.
Fixing screws in parallel/side-on to actuator, with mounting plate	Tapped holes for two M8 screws on the mounting surface, for attaching the mounting plate.
Fixing screws crosswise to actuator with L-bracket	Tapped holes for two M6 screws on the mounting surface, for attaching the mounting surface

8.3.1 Installation without mounting plate




- 1. Attach the safety switch to the swing gate/sliding gate.
- 2. Use four M5 screws to fix the safety switch [39] to the mounting surface.

8.3.2 Installation with mounting plate



- 1. Attach the mounting plate to the swing gate/sliding gate.
- 2. Use four M5 screws to fix the safety switch [39] to the mounting plate.

8.3.3 Installation using L-brackets



Actuator, with mounting bracket


Provide the mounting surface with tapped holes for two M6 screws (see Dimensions).

(Diagram: Order no. 570 476)

- 1. Use two M6 screws to fix the mounting bracket to the gate. The position of the drill holes can be taken from the section entitled Dimensions.
- 2. Use four M5 screws to fix the safety switch to the mounting bracket.

8.4 Installation actuator

8.4.1 Installation without mounting bracket




Actuator, no mounting bracket

Provide the mounting surface with tapped holes for two M5 screws (see diagram).

- 1. Attach the actuator to the gate.
- 2. Use two M5 screws to fix the actuator to the mounting surface.

8.4.2 Installation with mounting bracket



Actuator, with mounting bracket

Provide the mounting surface with tapped holes for two M6 screws (see Dimensions).

(Diagram: order no. 570 492 as example)

- 1. Use two M6 screws to fix the mounting bracket to the gate. The position of the drill holes can be taken from the section entitled Dimensions.
- 2. Use two M5 screws to fix the actuator to the mounting bracket.




Fig.: Actuator, installed on mounting bracket

8.4.3 Install fixing screws in parallel to actuator

Use four M5 screws to fix the safety switch to the mounting surface.

▶ Torque setting: Please note the information provided under Technical details [63].




Fig.: Fixing screws of the safety switch in parallel to actuator

Legend

- [1] Safety switch
- [2] Actuator
- [3] Fixing screws of the safety switch in parallel to actuator

8.4.4 Install fixing screws side-on to actuator

Use four M5 screws to fix the safety switch to the mounting surface.

▶ Torque setting: Please note the information provided under Technical details [63].




Fig.: Fixing screws of the safety switch crosswise to actuator

Legend

- [1] Front of safety switch
- [2] Actuator
- [3] Fixing screws of the safety switch crosswise to actuator

8.5 Centre the bolt in the actuator housing

The bolt must be centred in the actuator housing in order to maintain the distances on settling gates.

With small door radiuses, the bolt should be centred in the actuator housing.

Centre the bolt in the actuator housing (see diagram). Use the PSEN ml actuator center ring only with small door radiuses (see Install the safety switch horizontally at a swing gate [44] 33]).



NOTICE

Reduction of the actuator's service life

When using the accessory PSEN ml actuator center ring the actuator's service life can be substantially reduced.

After 50.000 cycles it may happen that the actuator misaligns, and that it has to be realigned regularly.



Bolt centred within the actuator housing



Bolt not centred within the actuator housing



Bolt with PSEN ml actuator center ring in the actuator housing

8.6 Rotate the bolt in the actuator housing 90°

The actuator can be installed vertically on a gate (see Figure [13]). To install the actuator horizontally, the bolt can be rotated 90° in the actuator housing prior to installation.




NOTICE

PSEN ml 1.1 round actuator has no lock against rotation

Turn the bolt in the actuator housing to the correct position before installing.

- 1. On the housing skin [3] in the actuator housing, press down the spring plate [1] on both sides of the bolt and keep the plate held down.
- 2. Rotate the bolt in the housing skin by 90° in the required direction ([2]).



Legend

- [1] Spring plate in the housing skin
- [2] Bolt, can be rotated 90°
- [3] Housing skin
- 3. Centre the bolt in the actuator housing [40].

8.7 Escape release

8.7.1 Important information



WARNING!

Risk of injury due to loss of the safety function.

Incorrect installation of the escape release means that the button of the escape release pin can be accessed from the outside. This can entail that the guard locking is unlocked from the outside and the safety gate is opened, although the hazardous machine is switched on.

- The escape release should be installed so that it is only accessible from inside the danger zone.
- ▶ The button of the escape release pin must be impossible to reach from a position outside the protected area.
- ▶ Prevent any unintended operation of the escape release.
- ▶ Prevent the effect of transverse forces on the escape release.
- ▶ Secure the screw joints with a with a threadlocker.
- ▶ The button of the escape release pin must be clearly visible and it must not be concealed.
- ▶ Maintain the min. bending radius of the push/pull cable of 60 mm when using the external escape release.



NOTICE

Functional restrictions of the external escape release imposed by incorrect installation


On escape releases with push/pull cables 0.5 m (order no. 570466) and 0.75 m (order no. 570467), bending the push/pull cable may reduce its functionality and lifetime.

Ensure that these versions are installed as straight as possible.

▶ The mounting surface has to completely cover the bottom of the escape release housing. The bottom of the escape release housing must not be accessible after installation.

8.7.2 Installation positions for escape release


The stationary escape release can be installed on the three auxiliary releases in three different directions each.



Legend

- [1] Installation options at the sides
- [2] Installation options at the back

The external escape release can be installed on the three auxiliary releases in four different directions each. The push/pull cable can be led out on different sides.




Legend


- [1] Installation options at the sides
- [2] Installation options at the back

8.7.3 Installation stationary escape release

- 1. Remove the security screw [1] using a Torx T10 screwdriver T10.
- 2. Screw the adapter disk of the escape release with the two hexagon sockets M3x8 [3] on the safety switch with 1,2 1,5 Nm (see diagram). The pin of the adapter disk [2] must be at the place where the security screw of the auxiliary release [1] used to be.




- [1] Security screw of the auxiliary release
- [2] Pin in the adapter disk
- [3] Hexagon sockets M3x8
- 3. Screw the escape release with the four raised head screws M3x12 to the adapter disk with 1,2 1,5 Nm (see diagram).
- ▶ The button of the escape release pin can be removed for the installation (e.g. when the escape release pin is to be run through a wall). The button of the escape release pin must be secured again with a threadlocker and hand-tightened after escape release installation is complete
- ▶ To bridge larger distances the escape release pin can be extended by a max. of 25 mm two times (see Order reference: Accessories [☐ 71]).




- [1] Button of the escape release pin
- [2] Escape release pin

8.7.4 Installation external escape release


- 1. Remove the security screw [1] using a Torx T10 screwdriver T10.
- 2. Screw the adapter disk of the escape release with the two hexagon sockets M3x8 [3] on the safety switch with 1,2 1,5 Nm (see diagram). The pin of the adapter disk [2] must be at the place where the security screw of the auxiliary release [1] used to be.



- [1] Security screw of the auxiliary release
- [2] Pin in the adapter disk
- [3] Hexagon sockets M3x8
- 3. Screw the escape release with the four raised head screws M3x12 to the adapter disk with 1,2 1,5 Nm (see diagram).



- 4. Screw the housing of the escape release with the screws [1] to a mounting surface with 6 6,5 Nm (see diagram).
- ▶ The screws of the push/pull cable [2] can be loosened to make installation easier (e.g. when the push/pull cable is to be run through a wall). The screws must be fixed with 6 6,5 Nm after the escape release is installed.



- [1] Screwing the escape release to the mounting area
- [2] Screwing the cable

8.7.5 Removing escape release


If the push/pull cable is to be run through a conduit pipe, the cable has to be uninstalled at the escape release first.

Prerequisites

▶ The conduit pipe must have a diameter of at least 12 mm.

Procedure

1. Lift off the cover [1] (e.g. with a screwdriver with a flat blade).




Legend

- [1] Cover
- [2] Nut M10 x 0,75
- [3] Fork head
- [4] Slot nut
- 2. Loosen the nut [2].
- 3. Pull out the push/pull cable with the slot nut [4] and remove the slot nut and the nut [2] from the cable.
- 4. Run the cable through the conduit pipe.
- 5. Push the nut [2] and the slot nut [4] over the fork head [3] back on the cable.
- 6. Push the cable with the fork head [3] on the fork in the escape release. The slot nut [4] must be fitted into the nut again.
- 7. Tighten the nut [2] with 6 6,5 Nm.
- 8. Put the lid [1] back on.

9 Adjustment

After installation, check whether adjustment is necessary. To check this, use the digram with the relevant values in the table and correct them, as necessary. Please note:

- ▶ Safety switch and actuator must be aligned correctly
- ▶ Actuator is centred (see Centre bolt in actuator housing [40])
- ▶ Always test the function with a connected evaluation device.
- ▶ When installing an external or stationary escape release, check the function of the escape release with a connected evaluation device.



[1]	Safety switch	
[2]	Actuator	
[3]	Max. lateral offset	+/-3,0 mm
[4]	Max. vertical offset	+/-3,0 mm
[5]	Max. angular offset around the X axis	+/-2,0 deg
[6]	Max. angular offset around the Y axis	+/-2,5 deg
[7]	Max. angular offset around the Z axis	+/-7,5 deg
[8]	Max. offset in closing direction	+/-2 mm

Attach safety switch and actuator

Once the safety switch and actuator are correctly aligned, the actuator's screw connection must be tightened.

- 1. Tighten up one M5 screw.
- 2. For applications with increased safety requirements (e.g. SIL CL 2 PL d), swap the second M5 screw for an M5 locking screw.
- Tighten up the M5 screw or M5 locking screw.
 Please note the max. torque setting stated in the Technical details [63].

10 Operation

Legend

•	LED off
*	LED on
K	LED flashes (500 ms on, 500 ms off)
O ∕∕	LED flashes quickly (50 ms on, 950 ms off)
O//	LED flashes very quickly (25 ms on, 475 ms off)

Status indicators

- ▶ "Device" LED illuminates green: The unit is ready for operation
- ▶ "Safety Gate" LED lights up yellow: Actuator is within the response range
- ▶ "Lock" LED lights up green: Guard locking active
- ▶ "Input" LED lights up yellow: The unit is ready for operation



NOTICE

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

10.1 Normal mode

	LED stat	Switch status		
Device	Safety Gate	Input	Lock	
*	\(\begin{array}{c}\end{array}\)	K	*	The safety switch is started
Green	Yellow	Yel- low	Green	
*	•	*	•	Safety gate open, actuator not detected, guard locking deactivated
Green		Yel- low		
*	*	*	•	Safety gate closed, actuator detected, guard locking deactivated
Green	Yellow	Yel- low		

	LED stat	Switch status		
Device	Safety Gate	Input	Lock	
*	*	*	*	Safety gate closed, actuator detected, guard locking activated
Green	Yellow	Yel- low	Green	

Warnings

LED status			Switch status	Remedy / meas-	
Device	Safety Gate	Input	Lock		ure
Green	Yellow	Yel- low	Green	Safety gate closed, actuator detected, guard locking cannot be activated / deactivated	Check the actuator's alignment [50] to the safety switch.
				The supply voltage to safety inputs S31 and S41 was switched back on before the auxiliary release screw was turned back.	Turn back the auxiliary release screw and then switch the supply voltage on (see Recommissionin g [21]).
*	Display not definitive	*	K	Guard locking pin is in an intermediate position	
Green		Yel- low	Yellow		
K	Display not definitive	*	Display not definitive	Safety switch active despite	Check the supply voltage.
Yellow		Yel- low		over or under- voltage	If safety inputs S31 and S41 are activated or de- activated while an undervoltage warning is present, the safety switch switches to a fault condition.

10.2 Error display

LED status				Switch status	Remedy / measure
Device	Safety Gate	Input	Lock		
Red	Yellow	Yel- low	Display not definitive	Safety switch de- activated due to under or over- voltage	Check the supply voltage and switch the supply voltage off and then on again.
★ Red	Previous LED display is retained		Display not definitive	Safety outputs in fault condition	Check the wiring and switch the supply voltage off and then on again.
Red	•	•	↓ Red	Auxiliary release/ escape release activated	 Auxiliary release: Turn back the auxiliary release screw and then switch the supply voltage on (see Recommissioning [21]). Escape release: Pull the button of the escape release pin back again and then switch on the supply voltage again (see Recommissioning under escape release [23]).
				Error	Please contact Pilz.
** Red	Display not definit	ive		Safety switch does not start	Change the safety switch.
Green	Yellow	Yel- low	Display not definitive	Wrong actuator	Use only approved combinations (see Approved combinations [11])

11 Checks and maintenance

It is not necessary to perform maintenance work on the product in normal operation. Please return any faulty products to Pilz.

Regular inspection of the switch function is required to guarantee the trouble-free, long-term function.

If the interlock and guard locking system is only used rarely (opening and closing the safety gate and activating/deactivating the guard locking device), a manual function test is required.

The correct function of the device should be checked at regular intervals and after each error.

Test intervals in accordance with EN ISO 14119:

- ▶ for SIL CL 3/PL e at least once per month
- ▶ for SIL CL 2/PL d at least every year

The Appendix contains a Check list [74], which should help you perform the test.

Visual inspection

- ▶ Check that the seal on the security screw on the auxiliary release is intact. If the seal is not intact, insert the security screw is inserted and use varnish to seal the security screw.
- Check the safety switch and actuator for damage.
- ▶ Check that the safety switch and actuator are firmly secured.
- ▶ Check the offset of the safety switch and actuator.
 - Max. lateral offset
 - Max. angular offset
 - Max. vertical offset
- Check that the wiring is correct.
- ▶ Remove any dirt from the safety switch and actuator.

Function test


- ▶ The actuator is detected and at the signal output/ diagnostic output Y32 there is a high signal after detection of the actuator.
- ▶ The guard locking device can be activated/deactivated when the safety inputs S31 and S41 are activated.
- ▶ Under these conditions there is a high signal at safety outputs 12 and 22:
 - The actuator is detected
 - Guard locking pin has successfully been activated (guard locking pin is in the locked position)

If one of these conditions is not met, the signal at the safety outputs will be low.

Escape release

- ▶ Test whether the button of the escape release pin can be detected and reached.
- ▶ Check the function of the escape release.

12 Dimensions



Mounting plate (see Accessories [71])




Fig.: Order no.: 570 490

Mounting bracket for sliding gate (see Accessories [71])




Fig.: Order no.: 570 492

Mounting bracket for swing gate (see Accessories [71])




Fig.: Order no.: 570 493




Fig.: Order no.: 570 494

Mounting bracket with handle unit for sliding gate (see Accessories [71])




Fig.: Order no.: 570 495

Mounting bracket with handle unit for swing gate (see Accessories [71])




Fig.: Order no.: 570 496




Fig.: Order no.: 570 497

L-bracket for the safety switch (see Accessories [71])





Fig.: Order no.: 570 476

Distance between safety switch mounting surface and actuator mounting surface



13 Technical details

General	570400	570402	570404
Certifications	CE, FCC, IC, TÜV, cULus Listed	CE, FCC, IC, TÜV, cULus Listed	CE, FCC, IC, TÜV, cULus Listed
Sensor's mode of operation	Transponder	Transponder	Transponder
Coding level in accordance with EN ISO 14119	Low	High	High
Design in accordance with EN ISO 14119	4	4	4
Classification in accordance with EN 60947-5-3	PDDB	PDDB	PDDB
Pilz coding type	Coded	fully coded	uniquely coded
Transponder	570400	570402	570404
Frequency band	122 kHz - 128 kHz	122 kHz - 128 kHz	122 kHz - 128 kHz
Max. transmitter output	15 mW	15 mW	15 mW
Electrical data	570400	570402	570404
Supply voltage			
Voltage	24 V	24 V	24 V
Kind	DC	DC	DC
Voltage tolerance	-20 %/+20 %	-20 %/+20 %	-20 %/+20 %
Output of external power supply (DC)	1 W	1 W	1 W
Max. switching frequency	1 Hz	1 Hz	1 Hz
Magnet. supply voltage	24 V	24 V	24 V
Max. solenoid current t <150 ms	1 A	1 A	1 A
Max. cable capacitance at the safety outputs			
No-load, PNOZ with re- lay contacts	40 nF	40 nF	40 nF
PNOZmulti, PNOZelog, PSS	70 nF	70 nF	70 nF
Max. inrush current impulse			
Current pulse, A1	5 A	5 A	5 A
Pulse duration, A1	0,0002 ms	0,0002 ms	0,0002 ms
Max. unit fuse protection in accordance with UL	3 A	3 A	3 A
No-load current	40 mA	40 mA	40 mA
Inputs	570400	570402	570404
Number	2	2	2
Voltage at inputs	24 V DC	24 V DC	24 V DC
Current at solenoid input	500 mA	500 mA	500 mA
Semiconductor outputs	570400	570402	570404
OSSD safety outputs	2	2	2

Semiconductor outputs	570400	570402	570404
Signal outputs	1	1	1
Switching current per out-			
put	100 mA	100 mA	100 mA
Breaking capacity per out-			
put	2,4 W	2,4 W	2,4 W
Potential isolation from	No	No	No
system voltage Short circuit-proof			
Residual current at out-	yes	yes	yes
puts	100 μΑ	100 μΑ	100 μΑ
Voltage drop at OSSDs	1 V	1 V	1 V
Conditional rated short cir-			
cuit current	100 A	100 A	100 A
Lowest operating current	1 mA	1 mA	1 mA
Utilisation category in ac-			
cordance with EN 60947-1	DC-13	DC-13	DC-13
Times Test pulse duration asfatu	570400	570402	570404
Test pulse duration, safety outputs	⁷ 450 μs	450 μs	450 µs
Switch-on delay	-100 μο	100 MO	-100 μο
after UB is applied	1,1 s	1,1 s	1,1 s
Actuator typ.	30 ms	30 ms	30 ms
Actuator max.	50 ms	50 ms	50 ms
Delay-on de-energisation			
Actuator typ.	30 ms	30 ms	30 ms
Actuator max.	40 ms	40 ms	40 ms
Risk time in accordance			
with EN 60947-5-3	260 ms	260 ms	260 ms
Supply interruption before			
de-energisation	20 ms	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	20 ms	20 ms	20 ms
Pulse duration Lock/Un-	20 1115	20 1115	20 1115
lock Request	350 - 400 ms	350 - 400 ms	350 - 400 ms
Processing time activate/			
deactivate guard locking	100 ms	100 ms	100 ms
Environmental data	570400	570402	570404
Temperature of metal sur-			
face at ambient temperat- ure: 25 °C	40 °C	40 °C	40 °C
	40 C	40 C	40 C
Ambient temperature In accordance with the			
standard	EN 60068-2-14	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C	0 - 60 °C

Environmental data	570400	570402	570404
Storage temperature			
In accordance with the			
standard	EN 60068-2-1/-2	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C	-25 - 70 °C
Climatic suitability			
In accordance with the standard	EN 60068-2-78	EN 60068-2-78	EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C
EMC	EN 55011: class A, EN 60947-5-3, EN 61326-3-1	EN 55011: class A, EN 60947-5-3, EN 61326-3-1	EN 55011: class A, EN 60947-5-3, EN 61326-3-1
Vibration			
In accordance with the standard	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 55 Hz	10 - 55 Hz	10 - 55 Hz
Amplitude	1 mm	1 mm	1 mm
Shock stress			
In accordance with the standard	EN 60068-2-27	EN 60068-2-27	EN 60068-2-27
Number of shocks	3	3	3
Acceleration	30g	30g	30g
Duration	11 ms	11 ms	11 ms
Airgap creepage			
Overvoltage category	III	III	III
Pollution degree	3	3	3
Rated insulation voltage	75 V	75 V	75 V
Rated impulse withstand			
voltage	0,8 kV	0,8 kV	0,8 kV
Protection type			
Housing	IP67	IP67	IP67
In accordance with UL	type 1	type 1	type 1
Mechanical data	570400	570402	570404
Length of cable with connector	230 mm	230 mm	230 mm
Min. bending radius (fixed permanently) K1	5 x Ø	5 x Ø	5 x Ø
Min. bending radius (moving) K1	10 x Ø	10 x Ø	10 x Ø
Cable diameter K1	6,2 mm	6,2 mm	6,2 mm
Escape release available	No	No	No
Mechanical life	1,000,000 cycles	1,000,000 cycles	1,000,000 cycles
Mechanical life with centering ring	50,000 cycles	50,000 cycles	50,000 cycles
Holding force FZh		· •	<u> </u>
Fixing screws in paral- lel to actuator	7.500 N	7.500 N	7.500 N
Fixing screws side-on to actuator	5.000 N	5.000 N	5.000 N

Mechanical data	570400	570402	570404
Holding force F1Max in accordance with ISO 14119			
Fixing screws in parallel to actuator	15.000 N	15.000 N	15.000 N
Fixing screws side-on to actuator	10.000 N	10.000 N	10.000 N
Latching force	30 N	30 N	30 N
Max. vertical offset	+/-3,0 mm	+/-3,0 mm	+/-3,0 mm
Max. lateral offset	+/-3,0 mm	+/-3,0 mm	+/-3,0 mm
Max. angular offset around the X axis	+/-2,0 deg	+/-2,0 deg	+/-2,0 deg
Max. angular offset around the Y axis	+/-2,5 deg	+/-2,5 deg	+/-2,5 deg
Max. angular offset			
around the Z axis	+/-7,5 deg	+/-7,5 deg	+/-7,5 deg
Max. offset in closing direction	+/-2 mm	+/-2 mm	+/-2 mm
Max. retract speed of actuator	0,3 m/s	0,3 m/s	0,3 m/s
Actuator 1	PSEN ml 1.1	PSEN ml 2.1	PSEN ml 2.1
Min. distance between safety switches	0 mm	0 mm	0 mm
Connection type	M12, 8-pin male con- nector	M12, 8-pin male con- nector	M12, 8-pin male connector
Cable	LiYY 8 x 0.25 mm2	LiYY 8 x 0.25 mm2	LiYY 8 x 0.25 mm2
Material	Aluminium, stainless steel, plastic, galvanised steel, Zn	Aluminium, stainless I steel, plastic, galvanised steel, Zn	Aluminium, stainless steel, plastic, galvanised steel, Zn
Max. torque setting for fixing screws	6 - 6,5 Nm	6 - 6,5 Nm	6 - 6,5 Nm
Max. torque setting escape release	1,2 - 1,5 Nm	1,2 - 1,5 Nm	1,2 - 1,5 Nm
Max. torque setting for mounting plate	22 - 24 Nm	22 - 24 Nm	22 - 24 Nm
Max. torque setting for mounting bracket	14 - 16 Nm	14 - 16 Nm	14 - 16 Nm
Min. gate radius	300 mm	300 mm	300 mm
Dimensions			
Height	217,2 mm	217,2 mm	217,2 mm
Width	40 mm	40 mm	40 mm
Depth	40 mm	40 mm	40 mm
Actuator dimensions			
Height	63,5 mm	63,5 mm	63,5 mm
Width	40 mm	40 mm	40 mm
Depth	67,2 mm	67,2 mm	67,2 mm
Weight of safety switch	950 g	950 g	950 g
Weight of actuator	145 g	145 g	145 g

Mechanical data	570400	570402	570404
Weight	1.100 g	1.100 g	1.100 g

Where standards are undated, the 2015-11 latest editions shall apply.

13.1 Classification according to ZVEI, CB24I

The following tables describe the classes and specific values of the product interface and the classes of interfaces compatible with it. The classification is described in the ZVEI position paper "Classification of Binary 24 V Interfaces - Functional Safety aspects covered by dynamic testing".

Solenoid inputs

Drain		Source	
Safety switch	C2	Safety control system	C2, C3

Drain parameters	Min.	Тур.	Max.
Test impulse duration	-	-	500 μs
Input resistance	16 Ohm	-	
Capacitive load	-	-	1,5 nF

Safe 1-pole HL outputs

Source	ource		Drain		
Safety switch	C2		Evaluation device	C1, C2	

Source parameters	Min.	Тур.	Max.
Test impulse duration	-	-	450 μs
Rated current	-	-	0,1 A
Capacitive load	-	-	70 nF

13.2 Safety characteristic data



NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH _D [1/h]	Lambda d/ Lambda	EN ISO 13849-1 2015, EN IEC B10D	EN ISO 13849-1: 2015 T _M [year]
1-ch. guard locking	PL d	Cat. 2	SIL CL 2	4,22E-09	_	_	20
2-ch. guard locking	PL e	Cat. 4	SIL CL 3	4,22E-09	_	_	20
2-ch. OSSD	PL e	Cat. 4	SIL CL 3	2,38E-09	_	_	20

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.



NOTICE

Be sure that you observe the mechanical life. The safety characteristic data are only valid as long as the values of mechanical life are met.

14 Supplementary data

14.1 Radio approval

USA/Canada

FCC ID: VT8-PSENML C IC: 7482A-PSENML

FCC/IC-Requirements:

This product complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standards.

Operation is subject to the following two conditions:

1) this product may not cause harmful interference, and

2) this product must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this product not expressly approved by Pilz may void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Le présent produit est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) le produit ne doit pas produire de brouillage, et (2) l'utilisateur de le produit doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

14.2 Technical details for mounting bracket without handle unit

General	570492	570493	570494
Certifications	CE	CE	CE
Mechanical data	570492	570493	570494
Holding force FZh in accordance with ISO 14119	_	3000 N	3000 N
Holding force F1max in accordance with ISO 14119	_	6000 N	6000 N
Weight	420 g	420 g	445 g

14.3 Technical details for mounting bracket with handle unit

General	570495	570496	570497
Certifications	CE	CE	CE
Mechanical data	570495	570496	570497
Holding force FZh in accordance with ISO 14119	3000 N	3000 N	3000 N
Holding force F1max in accordance with ISO 14119	6000 N	6000 N	6000 N
Weight	260 g	600 g	630 g

14.4 Technical details escape release 570460, 570462, 570470

General	570460	570462	570470
Certifications	CE	CE	CE
Mechanical data	570460	570462	570470
Release force escape re- lease	80 N	80 N	80 N
Service life escape re- lease	6050 cycles	6050 cycles	6050 cycles
Weight	115 g	15 g	420 g

14.5 Technical details escape release 570466-570469

General	570466	570467	570468	570469
Certifications	CE	CE	CE	CE
Mechanical data	570466	570467	570468	570469
Release force es- cape release	80 N	80 N	80 N	80 N
Service life escape release	6050 cycles	6050 cycles	6050 cycles	6050 cycles
Weight	320 g	345 g	370 g	395 g

14.6 Technical details escape release 570471-570473

General	570471	570472	570473
Certifications	CE	CE	CE
Mechanical data	570471	570472	570473
Release force escape re- lease	80 N	80 N	80 N
Service life escape re- lease	6050 cycles	6050 cycles	6050 cycles
Weight	470 g	520 g	570 g

14.7 Technical details escape release 570474-570475

General	570474	570475
Certifications	CE	CE
Mechanical data	570474	570475
Release force escape release	80 N	80 N
Service life escape release	6050 cycles	6050 cycles
Weight	620 g	670 g

15 Order reference

15.1 System

Product type	Features		Order no.
PSEN ml b 1.1 unit	Mechanical safety gate system with guard locking, coded, for single connection	12-pin M12 connector	570 400
PSEN ml b 1.1 switch	Mechanical safety switch with guard locking, coded, for single connection	12-pin M12 connector	570 401
PSEN ml b 2.1 unit	Mechanical safety gate system with guard locking, fully coded		570 402
PSEN ml b 2.1 switch	Mechanical safety switch with guard locking, fully coded, for single connection		570 403
PSEN ml b 2.2 unit	Mechanical safety gate system with guard locking, uniquely coded		570 404
PSEN ml b 2.2 switch	Mechanical safety switch with guard locking, uniquely coded, for single connection		570 405
PSEN ml 1.1 actu- ator	Actuator, coded		570 480
PSEN ml 2.1 actu- ator	Actuator, fully coded		570 481
PSEN ml 1.1 round actuator	Actuator with rounded head, coded		570 482
PSEN ml 2.1 round actuator	Actuator with rounded head, fully coded		570 483

15.2 Accessories

Installation accessories

Product type	Features	Order no.
PSEN ml escape re- lease	Escape release stationary	570 460
PSEN ml escape re- lease extension	Extension escape release stationary 25 mm	570 462
PSEN ml escape re- lease cordset 0.5m	Escape release external with push/pull cable 0.5 m	570 466
PSEN ml escape re- lease cordset 0.75m	Escape release external with push/pull cable 0.75 m	570 467
PSEN ml escape re- lease cordset 1.0m	Escape release external with push/pull cable 1.0 m	570 468
PSEN ml escape re- lease cordset 1.25m	Escape release external with push/pull cable 1.25 m	570 469

Product type	Features	Order no.
PSEN ml escape re- lease cordset 1.5m	Escape release with push/pull cable 1.5 m	570 470
PSEN ml escape re- lease cordset 2.0m	Escape release with push/pull cable 2 m	570 471
PSEN ml escape re- lease cordset 2.5m	Escape release external with push/pull cable 2.5 m	570 472
PSEN ml escape re- lease cordset 3.0m	Escape release with push/pull cable 3.0 m	570 473
PSEN ml escape re- lease cordset 3.5m	Escape release with push/pull cable 3.5 m	570 474
PSEN ml escape re- lease cordset 4.0m	Escape release with push/pull cable 4 m	570 475
PSEN ml mounting plate angled	Mounting bracket for installing the safety switch, with 4 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x40	570 476
PSEN ml actuator center ring	5 center rings for PSENmlock actuator	570 485
PSEN ml actuator 10° adapter	Mounting bracket for installing the actuator (10° angle) at small swing gates with a radius of 300 - 500 mm	570 484
PSEN ml mounting plate	Mounting plate for installing the safety switch, with 4 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x40	570 490
PSEN ml bracket sliding door	Mounting bracket for installing the actuator on a sliding gate, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x16	570 492
PSEN ml bracket swinging door 70	Mounting bracket for installing the actuator on a swing gate, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x12. Height: 70 mm.	570 493
PSEN ml bracket swinging door 80	Mounting bracket for installing the actuator on a swing gate, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x12. Height: 80 mm.	570 494
PSEN ml door handle sliding door	Mounting bracket with handle unit for installing the actuator on a sliding gate, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x16.	570 495
PSEN ml door handle swinging door 70	Mounting bracket with handle unit for installing the actuator on a swing gate, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x12. Height: 70 mm.	570 496
PSEN ml door handle swinging door 80	Mounting bracket with handle unit for installing the actuator on a swing gate, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x12. Height: 80 mm.	570 497
PSEN screw set bracket swinging door	Screw set for installing the actuator on a mounting bracket for swing gates, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x12	570 498
PSEN screw set bracket sliding door	Screw set for installing the actuator on amounting bracket for sliding gates, with 2 hexagonal socket head screws and 1 tamper-proof pan head locking screw, M5x16	570 499

Cable

Product type	Features	Connector X1	Connector X2	Connector X3	Order no.
PSEN cable axial M12 8-pole 3m	3 m	M12, 8-pin fe- male con- nector, straight			540 319
PSEN cable axial M12 8-pole 5m	5 m	M12, 8-pin fe- male con- nector, straight	e con-		
PSEN cable axial M12 8-pole 10m	10 m	M12, 8-pin fe- male con- nector, straight	ale con-		
PSEN cable M12-8sf, 20m	20 m	M12, 8-pin fe- male con- nector, straight	t		540 333
PSEN cable axial M12 8-pole 30m	30 m	M12, 8-pin fe- male con- nector, straight			540 326
PSEN cable M12-8sf M12-8sm, 0.5m	0.5 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 345
PSEN cable M12-8sf M12-8sm, 1m	1 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 346
PSEN cable M12-8sf M12-8sm, 1.5m	1.5 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 347
PSEN cable M12-8sf M12-8sm, 2m	2 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 340
PSEN cable M12-8sf M12-8sm, 5m	5 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 341
PSEN cable M12-8sf M12-8sm, 10m	10 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 342
PSEN cable M12-8sf M12-8sm, 20m	20 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 343
PSEN cable M12-8sf M12-8sm, 30m	30 m	M12, 8-pin fe- male con- nector, straight	M12, 8-pin male con- nector, straight		540 344
PSEN ml / PSENcs Y junction M12		M12, 8-pin fe- male connector	M12, 8-pin male connector M12, 8-pin fe-male connector		570 489

16 Appendix

The following check list is intended as a guide to provide support during commissioning and recommissioning of the safety gate system and when running the regular check as required.

Note that the check list is not intended to replace the plant-specific safety analysis required for commissioning/recommissioning, nor the resulting inspections and actions.



INFORMATION

Commissioning, recommissioning and regular inspection may only be carried out by qualified personnel.

We recommend that you keep the completed check list and store it with the machine documentation for reference.

Date	Action	Safety switch Number	Actuator Number	ОК	Not OK	Notes	Signature

17 EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Authorised representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany